

User Manual PZ-62DR-EB Lossney








Controller Components

Icon explanations

Controller operation



The table below summarizes the square icons used in this manual.

	<p>The administrator password must be entered on the password input screen to change settings. There is no settings that can skip this process.</p> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 5px; margin-right: 10px;"> <p style="text-align: center;">Timer</p> <hr/> <p style="text-align: center;">Enter administrator password ####</p> <hr/> <p>Select: <input type="checkbox"/> <input checked="" type="checkbox"/></p> <p style="text-align: center;">◀ Cursor ▶ - +</p> </div> <div style="margin-left: 10px;"> <p>F1 : Press to move the cursor left.</p> <p>F2 : Press to move the cursor right.</p> <p>F3 : Press to decrease the value by 1.</p> <p>F4 : Press to increase the value by 1.</p> </div> </div> <p style="font-size: small; margin-top: 10px;">*Changes cannot be made unless the correct password is entered.</p>		
	<p>Indicates settings that can be changed only while the units are in operation.</p>		<p>Indicates setting that can be changed only while the units are not in operation</p>
	<p>Indicates settings that can be changed while the units are in night-purge operation.</p>		<p>Indicates functions that are not available when the buttons are locked.</p>
	<p>Indicates functions that are not available when system is centrally controlled.</p>		<p>Indicates settings that can be made only from the main remote controller.</p>

Basic operations


Power ON/OFF



Button operation


ON



Press the  button.
The ON/OFF lamp will light up in green, and the operation will start.

OFF






Press the  button again.
The ON/OFF lamp will go out, and the operation will stop.

Power ON/OFF during Night-purge operation

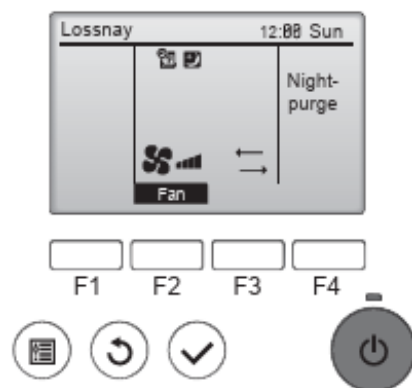

Button operation




Press the  button during the night-purge operation.
The night-purge operation screen changes to the normal operation screen.
If you want to stop the operation, press the  button again.
The ON/OFF lamp will go out, and the operation will stop.

The night-purge operation starts automatically when the set condition is met.
For details, refer to the Installation Manual for the Lossnay unit.

Fan speed



Button operation

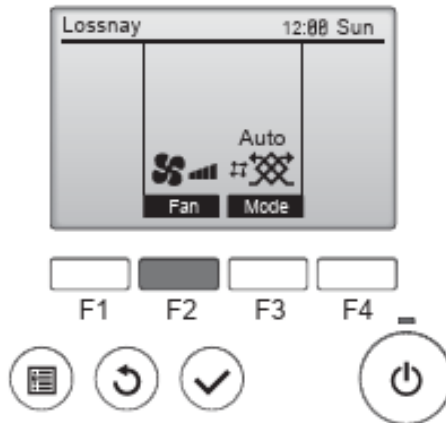

Press the **F2** button to go through the fan speeds in the following order.



Operation is not possible during external fan speed operation.


A fan speed that is skipped because of a fan skip setting is not displayed (refer to page 41).

When external fan speed input setting is used, Auto fan speed  appears between fan speed 4 and 1.


Ventilation mode



Button operation

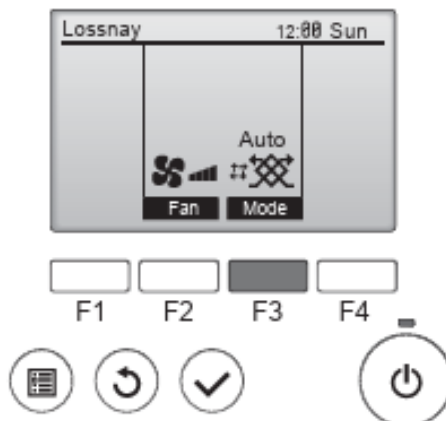

 Press the **F3** button to go through the Ventilation mode in the following order.



Operation is not possible during night-purge operation and external ventilation mode operation.