



ResiAIR Firmware Upgrade Guide V1.0

Introduction

Occasionally as ResiAIR unit will need to be upgraded to enable new features, this guide describes the process.

Device Upgrade

The ResiAIR should have been connected to the Wi-Fi as part of the setup guide or have been installed in an environment with the standard “Resicentral” Wi-Fi credentials, If either have been done then a green flashing light will be present. Follow the steps below.

1. On the ResiAIR OLED display scroll through the menu to find the IP address of the unit
2. On a device connected to the same network as the ResiAIR, open a browser and input the IP address of the ResiAIR unit. This should open a page containing basic information about the ResiAIR.
3. In the Browser bar then add “/update” after the IP address, this will bring up a log in box.
4. Insert the username and password:
 - admin
 - resipass
5. now there will be an option to select a file. Select the firmware file to upload to the unit (e.g. resiair_rev_b_version_1.11.bin) note. Version number may be different.
6. The update process should only take a few seconds, once complete the unit needs to be reset to capture the default values of any new features, this can be done by holding the “up” button for 5 seconds.
7. Confirm the update has completed successfully, the OLED will display a newer build number.

After following the steps above the device should be ready to be provisioned into a system.

Any Queries or assistance on system setup please contact - Technical@resicentral.co.uk