

Additional instructions for basket lift





VMC-3	2 lifts	VMC-3T	2 lifts
VMC-3E	2 lifts	VMC-3TE	2 lifts



Before use, please refer to the instructions for Multicookers standard regarding:


- Inherent risks
- Installation
- Use of the fryer

Accessories VMC3 « automatic lifts »:

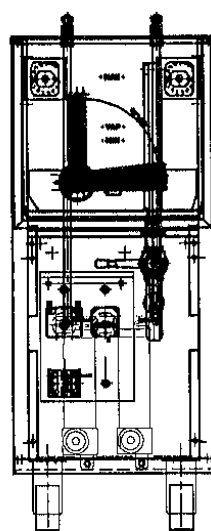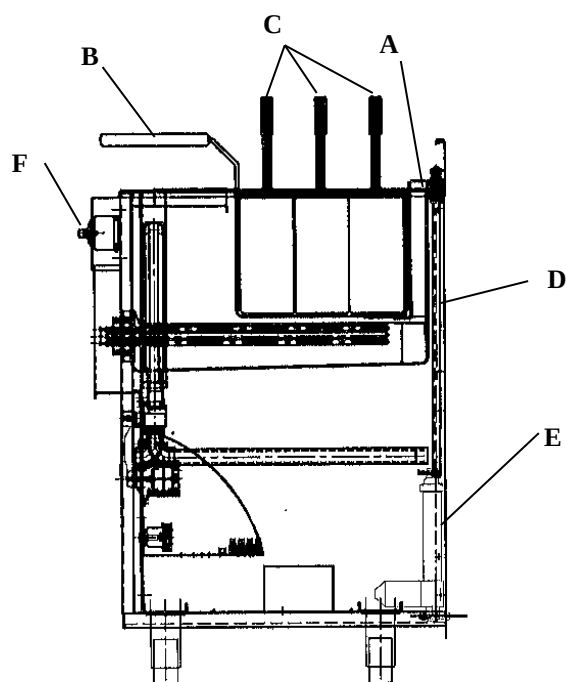

- A ⇒ Basket holder low position
- B ⇒ Big basket
- C ⇒ 6 small baskets
- D ⇒ Lift axis
- E ⇒ Lift motor
- F ⇒ Basket lift timer

Accessories VMC3 built-in « Automatic lifts and drain valve »:

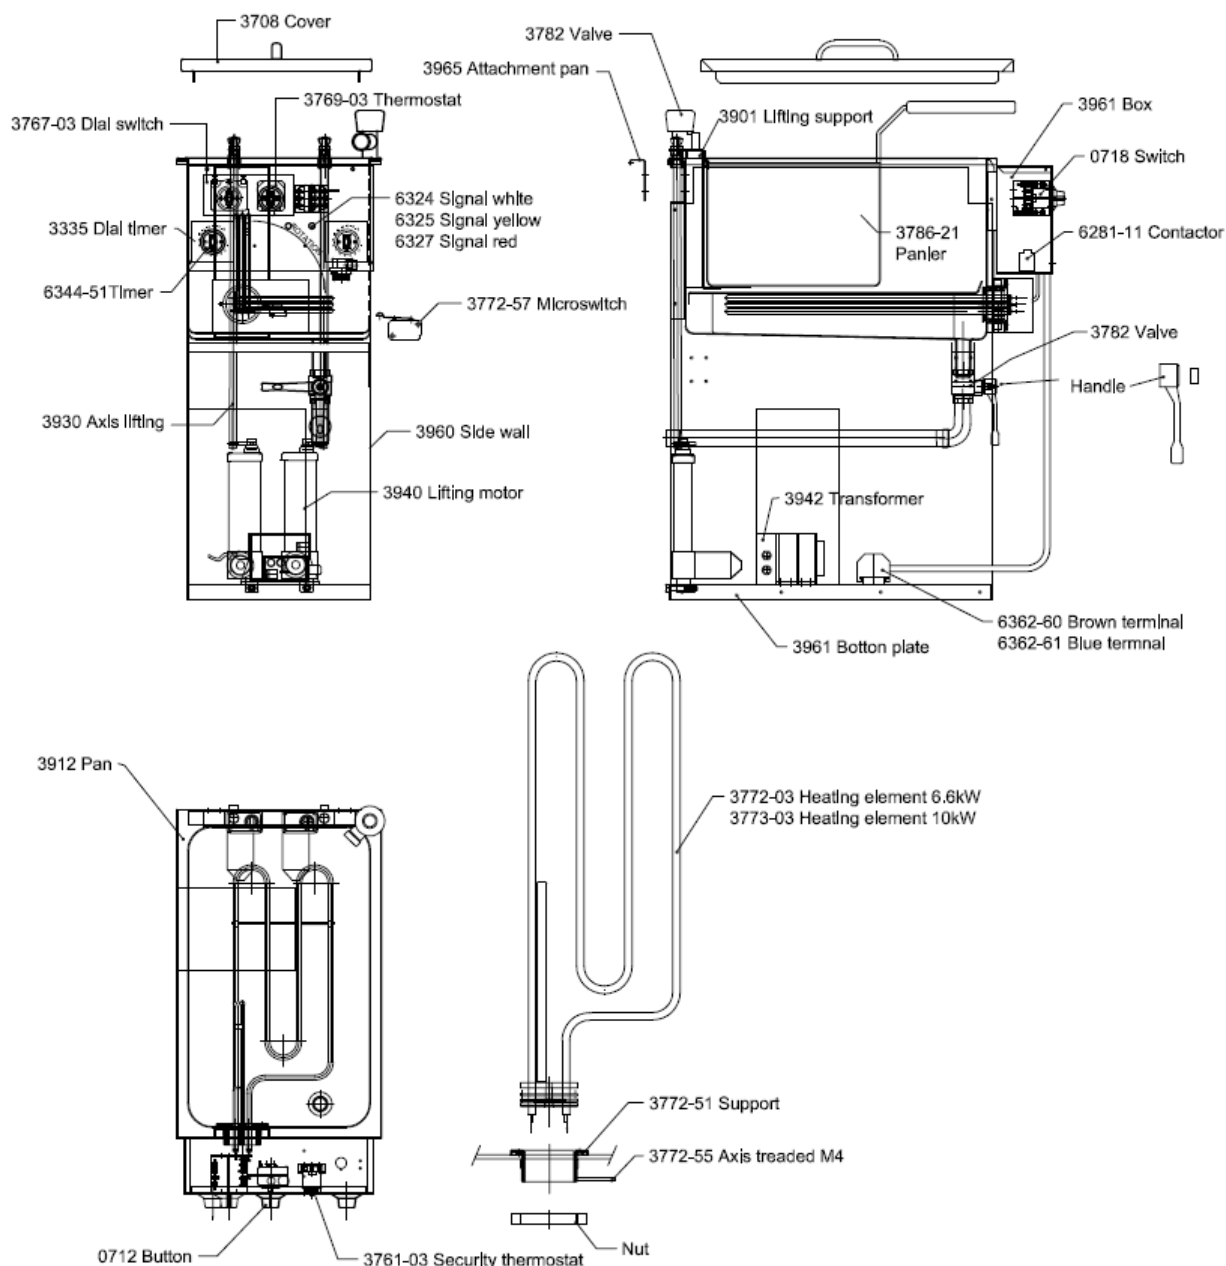

Date de création: 29.03.11 par CP

Date de modification: 22.04.11 par JP


Fichier:

Valentine Fabrique SA
SWISS MADE

Doc. N° F-VMC-3 Levage

Page No.: 8

Installation instruction for VMC3 built-in :

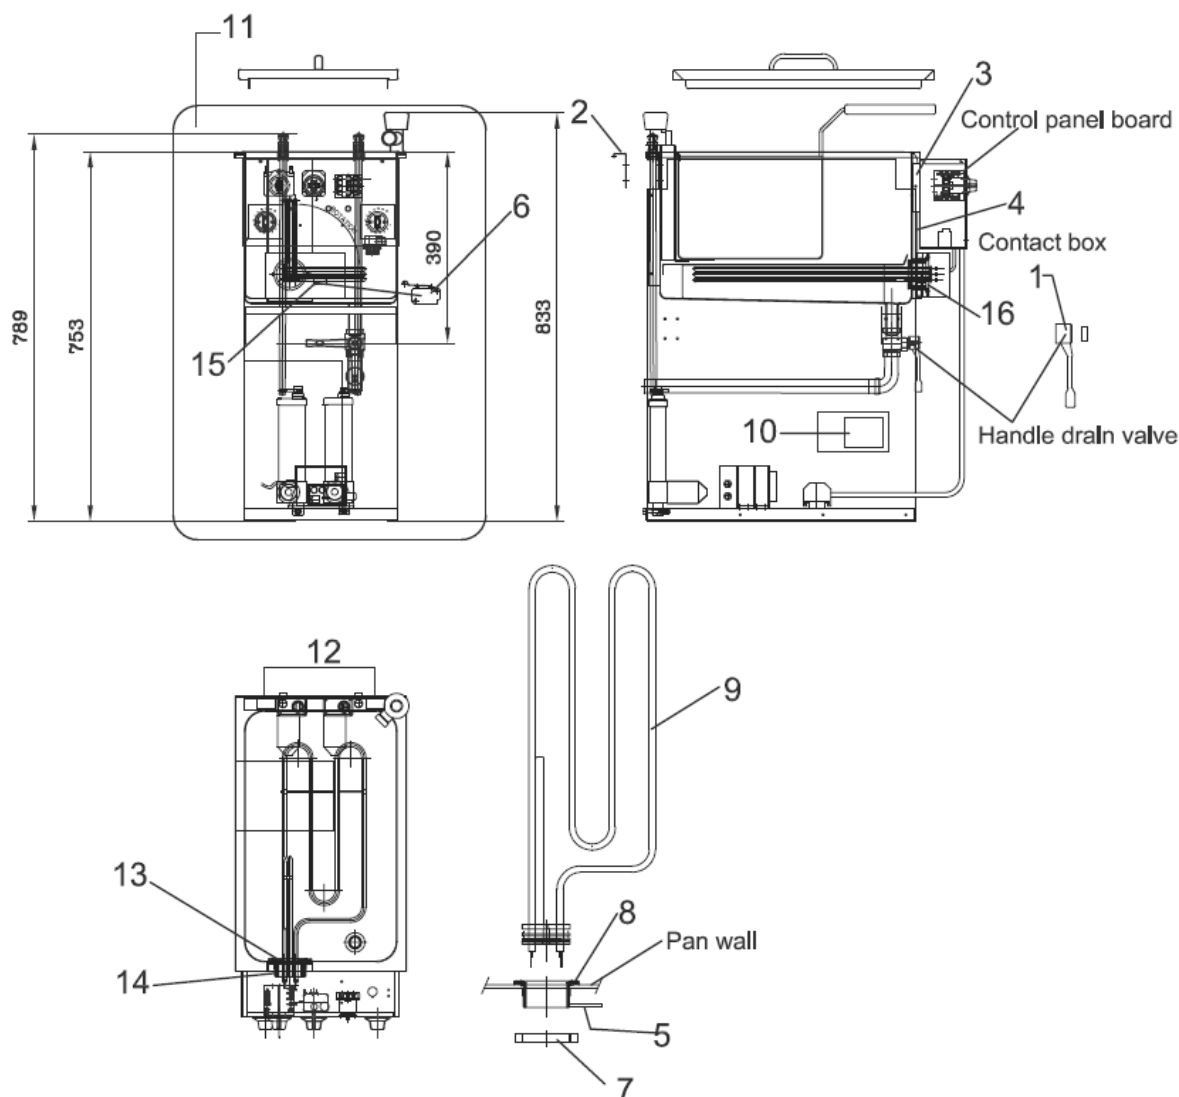

Instruction for built-in VMC-3 lifts

N° pos.

- | | |
|--|-----------------|
| 1 Unscrew the tap handle and remove it | |
| 2 Drill Ø3.3 the 4 rivets to the upper rear edge of the tank | |
| 3 Unscrew the control panel (1 scrow side panel) | 3964 |
| 4 Unscrew the box for power cords | 3848-03 |
| 5 Unscrew the threaded spindle M4 x 40mm | 3772-55 |
| 6 Unscrew the microswitch | 3772-57 |
| 7 Unscrew the nut on the heating element | 3772-52 |
| 8 Push the holder toward the inside of the pan | 3772-51 |
| 9 Remove the heating element to the interior of the pan | 3772-03/3773-03 |
| 10 Put the control panel and the box for power cords on the bottom sheet | 3964 |
| 11 Lift the built-in kit and slide it into the space | |
| 12 Drill (4x Ø3.3) the edge of the panel (optional) and rivet the upper rear edge of the pan | 3772-51 |
| 13 Put the holder in the hole of the pan according to the slits cut in the pan | 3772-52 |
| 14 Screw the nut of the heating element | 3772-57 |
| 15 Screw the nut of the microswitch | 3848-03 |
| 16 Attach the protective casing for power cords | |
| 17 Attach the control panel according to the drawing | |

Date de création: 29.03.11 par CP	Date de modification:22.04.11 par JP	Fichier:
Valentine ® Fabrique SA SWISS MADE	Doc. N° F-VMC-3 Levage	Page No.: 9

Instructions of use baskets lifts

Warning : As soon as the main switch is ON, the baskets rise. In “stop” position baskets are on the top.

Place the basket lift plate [A] over the lift rod [D]. Place the big basket [B] in position and add the 6 small baskets [C]. Fill the basket up to max 2/3.

Set the time [F]:

- ⇒ For example 5 minutes to precook
- ⇒ The basket goes down and will automatically rise at the end of the timer cycle.

It is however recommended to remove the basket after half of the cooking time to shake it energetically, in order to avoid that the pasta sticks together.

Cleaning:

Remove the basket lift plate [A] and clean it. Warning ! Do not drop or damage the lift plate. To clean the pan please refer to the principal instructions.

Spare parts:

Only use original spare parts. When ordering, please quote Item No. from the label in addition to the equipment No.

You will save the electrician's time and respectively your money.

Fryer type	Type
Unit number	No
Voltage, current and power	U, I, P

This information is given on page No.: 1 of the basic instruction

Designation	No. article
Electric timer	6344-51
Lift motor 24V	3940
Transformer 230V/24 VDC 5.5A	3942
Lift axis	3930
Basketholder	3901
Small baskets 133x90xH210mm	3951
Big baskets 140x296xH210mm	3786-21

Troubleshooting:

Faults	Probable cause	Solutions
Basket lift stops in any position	* Faulty motor	◇ Change the motor
None of the basket lift is functioning	* Faulty transformer fuses	◇ Change the fuses
One of the two basket lifts is not functioning	* Faulty timer Faulty motor	◇ Change the timer ◇ Change the motor

Warning:

The information contained in this manuel may be modified without warning. Valentine Fabrique SA cannot be held liable for any errors contained in this document or for damage or injury resulting from use of this, manuel.

Date de création: 29.03.11 par CP	Date de modification: 22.04.11 par JP	Fichier:
Valentine Fabrique SA SWISS MADE	Doc. N° F-VMC-3 Levage	Page No.: 10

