

## Spare parts

Only use original spare parts. When ordering spare parts, in addition to the part number, please also include the following:

1. type of fryer
  2. serial number
  3. voltage, current and power
- (\* ) Select according to the models voltage

Pos	Component	TF7	TF77	TF7T	TF77T	TF10	TF13	TF55	TF5	Article code	Diagram code	Specifications
[2]	Neutral control lamp	1	2	1	2	1	1	2	1	B0060-01	H1	230V
[3]	Orange control lamp	1	2	1	2	1	1	2	1	B0060-02	H2	230V
[4]	Green control lamp	1	2	1	2	1	1	2	1	B0060-04	H3	230 V
[1]	Thermostat	1	2	1	2	1		2	1	A0040-01	S1+S2	3P 16A 400V
[1]	Thermostat						1			A0040-13	S1+S2	3P 16A 400V
[18]	Safety thermostat	1	2	1	2	1	1	2	1	A0040-50	S3	3P 16A 400V
[19]	Safety switch	2	4	2	4	2	2	4	1	6321	S5, S6	1P 16A 250V
[1]	Button	1	2	1	2	1	1	2	1	A0090-10		
[10]	Drain valve	1	2	1	2	1	1	2	1	A0070-04		
[12]	Drain valve plug	1	2	1	2	1	1	2	1	A0070-05		
[12]	Drain valve gasket	1	2	1	2	1	1	2	1	A0070-06		
<b>Heating elements</b>												
	Heating element TF7 230V	1	2							A1030-02	R1,R2,R3	230V 3600W
	Heating element TF 10 + TF13					3	3			A1030-01	R1,R2,R3	230V 2300W
	Heating element TF7 400V	1	2							A1030-03	R1,R2,R3	400V 3600W
	Heating element TF7T			2	4					A3030-01	R1,R2,R3	400V 2300W
	Heating element TF55 230V							2*	1*	A1030-04	R1,R2,R3	230V 3600W
	Heating element TF55 400V							2*	1*	A1030-05	R1,R2,R3	400V 3600W
	Heating element TF55 230V (UK)							2*	1*	A1030-06	R1,R2,R3	230V 3000W
<b>Baskets</b>												
	Basket TF7	1	2	1	2					A1080-02		220/235/108
	Basket TF10					1				A3080-02		305/235/108
	Basket TF13						1			A4080-02		440/235/108
	Basket TF55							2	1	A5580-02		155/235/108

**Wiring diagrams: see end of this manual**