

UHD Box

STRONG

 **Google TV**

4K GOOGLE TV 2-IN-1 BOX

SRT 427

4K

Ultra HD



Subject to alterations

User manual

SERVICE CENTER

AT	 support_at@strong-eu.com  0820 400 150 (€ 0,12/Min. österr. Festnetz)	HU	 support_hu@strong-eu.com  +36 1 445 26 10
BG	 support_bg@strong-eu.com  +359 32 634451	IT	 support_it@strong-eu.com
CZ	 support_cz@strong-eu.com  844 44 44 90	NL	 support_nl@strong-eu.com
DE	 support_de@strong-eu.com  0800 7788 787 (Gebührenfrei)	PL	 support_pl@strong-eu.com  801 702 017
DK	 support_dk@strong-eu.com	PT	 support_pt@strong-eu.com  +351 2 100 06 125
ES	 support_es@strong-eu.com  +34 91 119 61 76	SK	 support_sk@strong-eu.com  0850 15 05 50
FR	 support_fr@strong-eu.com	SL	 +386 1 828 08 58
HR	 +385 1 344 57 66	UA	 support_ua@strong-eu.com  +380 (44) 238 61 50

Supplied by STRONG Austria
 Represented by STRONG Ges.m.b.H.
 Teinfaltstraße 8/4.Stock, A-1010 Vienna, Austria
 Email: support_at@strong-eu.com

LICENSES

This product contains one or more programs protected under international and U.S. copyright laws as unpublished works. They are confidential and proprietary to Dolby Laboratories. Their reproduction or disclosure, in whole or in part, or the production of derivative works therefrom without the express permission of Dolby Laboratories is prohibited. Copyright 2003-2009 by Dolby Laboratories. All rights reserved.

SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, STRONG declares that the device SRT 427 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <https://www.strong-eu.com/downloads/downloads>

Subject to alterations. In consequence of continuous research and development technical specifications, design and appearance of products may change. Google TV is the name of this device's software experience and a trademark of Google LLC.

Google, YouTube, Google Cast, YouTube Music and other marks are trademarks of Google LLC. Wi-Fi is a registered trademark of Wi-Fi Alliance®. Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

All other product names are trademarks or registered trademarks of their respective owners.

© STRONG 2025. All rights reserved.

TABLE OF CONTENT

1.0 INTRODUCTION	4
1.1 Safety Instructions	4
1.2 Equipment Set-up	5
1.3 Package content	5
1.4 Usage of external USB devices	5
2.0 TV BOX PANELS	6
2.1 Front Panel of the Google Tv Box	6
2.2 Side Panel of the Google Tv Box	6
2.3 Rear Panel of the Google Tv Box	6
2.4 Panel of the Satellite dongle	7
2.5 Remote control	7
2.6 Installing the batteries	8
3.0 CONNECTION GUIDE	9
4.0 SETTING UP YOUR GOOGLE TV BOX	9
5.0 INSTALLATION LIVE TV APPLICATION MEW TV	17
5.1 USING LIVE TV	17
6.0 PREFERENCES SETUP LIVE TV	18
6.1 Customize channel list	18
6.2 Manage my Favorite	18
6.3 Parental control	18
6.4 Video Display	19
7.0 PREFERENCES AUDIO / SUBTITLES	19
7.1 Default audio language	19
7.2 Default subtitle language	19
7.3 Audio description	19
7.4 Subtitles	19
7.5 Zapping mode	19
7.6 Channel search	19
7.7 Factory RESET (Live TV only)	19
7.8 InfoBar setting	19
7.9 About	20

8.0 USING ANDROID	20
9.0 SETTINGS	20
9.1 Set your device name	20
9.2 Display and sound	20
9.3 Network and Internet	20
9.4 Accounts and sign in	21
9.5 Apps	21
9.6 System	21
9.7 Remote and accessories	22
9.8 Set up remote buttons	22
10.0 GOOGLE ASSISTANT	22
11.0 FACTORY RESET	23
12.0 SIMPLE TROUBLESHOOTING	23
13.0 TECHNICAL SPECIFICATIONS	24

1.0 INTRODUCTION

Thank you for choosing the 2 in 1 Smart TV Box supplied by STRONG. It has been produced with the latest new technology and offers extensive entertainment and great versatility. We wish you many hours of new great experiences exploring the Android world!

1.1 Safety Instructions

Read all of the instructions before operating the device. Keep these instructions well for later use.

- Only use attachments/accessories specified or provided by the manufacturer (such as the exclusive supply adapter, battery etc.).
- Please refer to the information on the product enclosure for electrical and safety information before installing or operating the apparatus.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspaper, table-cloths, curtains, etc.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- ⚠ This mark indicates a risk of electric shock.
- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent types.
- The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Excessive sound pressure from earphones and headphones can cause hearing loss.
- Listening to music at high volume levels and for extended durations can damage one's hearing.
- In order to reduce the risk of damage to hearing, one should lower the volume to a safe, comfortable level, and reduce the amount of time listening at high levels.
- The mains plug or appliance coupler is used as disconnect device, it shall remain readily operable. When not in use and during movement, please take care of the power cord set, e.g. tie up the power cord set with cable tie or something like that. It shall be free from sharp edges or similar which can cause abrasion of the power cord set. When put into use again, please make sure the power cord is not damaged. The absence of a light indication on the apparatus does not mean that it is fully disconnected from the mains. To disconnect the apparatus completely, the mains plug must be pulled out.
- Attention should be drawn to environmental aspects of battery disposal.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 🔪 To prevent the spread of fire, keep candles or other open flames away from this product at all times.
- □ Equipment with this symbol is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.


Precautions

- Never try to open the device. It is dangerous to touch the inside of the device due to high voltages and possible electrical hazards. Opening the device will void the warranty of the product. Refer all maintenance or servicing to suitably qualified personnel.
- When you are connecting cables, be sure that the device is disconnected from the mains supply voltage. Wait a few seconds after switching off the device before you move the device or disconnect any equipment.
- It is a necessity that you only use an approved extension and compatible wiring that is suitable for the electrical power consumption of the installed equipment. Please ensure that the electrical power supply corresponds with the voltage on the electrical identification plate at the back of the device.
- ⚠ Risk of explosion if the battery is replaced by an incorrect type.
- Disposing of a battery into the fire or a hot oven, or mechanically crushing or cutting a battery can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.

Operating Environment

- Do not install this equipment in a confined space such as a bookcase or similar unit.
- Do not use the set near damp, and cold areas, protect the set from overheating.
- Keep away from direct sunlight.
- Do not use the set near dust place.
- Do not place candles near the opening area, to avoid flammable foreign material from entering the device.

WEEE Directive

 Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Storage

Your device has been carefully checked and packed before shipping. When unpacking it, make sure that all the parts are included and keep the packaging away from children. We recommend that you keep the carton during the warranty period, to keep your device perfectly protected in the event of repair or warranty.

1.2 Equipment Set-up

Please follow the instructions below:

Use only high quality, well shielded HDMI cable version 2.1 or higher to watch also in highest screen resolutions.

This user manual provides complete instructions for installing and using this product. The symbols will serve as follows:

WARNING: Indicates warning information.

TIPS: Indicates any other additional important or helpful information.

MENU Represents a button on the remote control or the product.

Move to Represents a menu item within a window.

1.3 Package content

1x Google TV Box

1x Satellite dongle

1x 2 in 1 Remote Control

1x Power Adapter 12 V / 1 A with DC connector 3.5mm

1x Power Adapter 12 V / 1 A with DC connector 5.5mm

1x HDMI Cable

2x AAA Batteries

1x Installation instructions

1x Safety Instructions & Warranty cards

WARNING: The batteries should not be recharged, disassembled, electrically short-circuited, be mixed or used with other types of batteries. If rechargeable accumulators instead of batteries are going to be used (e.g. NiMH), we recommend using types with low self-discharge to ensure long time operation of your remote control.

1.4 Usage of external USB devices

It is recommended to use USB 2.0 storage devices or higher. If your device is not compatible to USB

- 2.0 specifications, playback and other functions of the product might not work properly.
- STRONG cannot guarantee compatibility with all types of USB devices such as web cams, keyboards, mouse devices, storage devices.
- If you are going to use external USB HDDs (Hard Disk Drives), please consider that power specifications may exceed the supported output of your box (max. 5 V/500 mA). If so, please connect your USB HDD to an external power adapter.
- It is advised not to store important information on USB storage devices used with the box. Always make backups of data on your USB storage device before using it with this box. STRONG will not take responsibility for any loss of information or circumstances caused by loss of information.

2.0 TV BOX PANELS

2.1 Front Panel of the Google Tv Box


On/Off Indicator: Green: Box On / Red: Box on Standby

Fig. 1



2.2 Side Panel of the Google Tv Box


Fig. 2

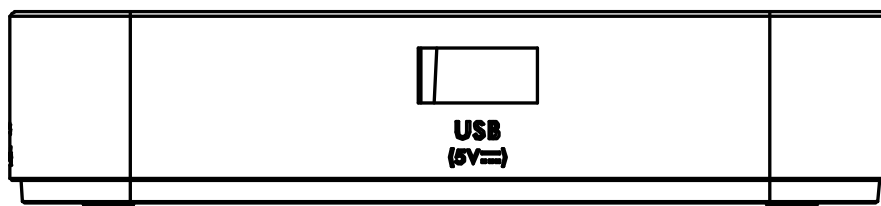

USB 2.0 Port

2.3 Rear Panel of the Google Tv Box


Fig. 3

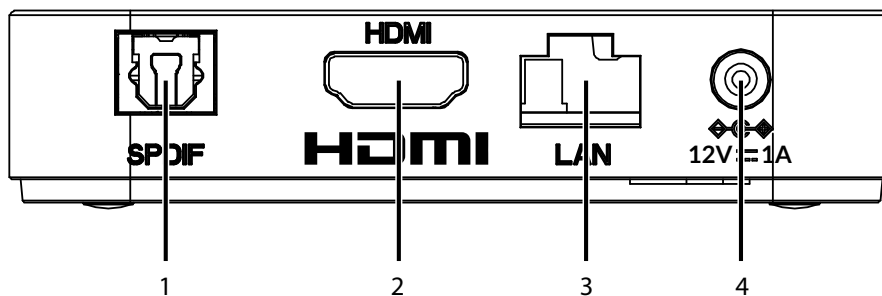

1. S/PDIF (optical): To connect to a digital or home cinema audio amplifier.
2. HDMI: To connect your receiver with your TV set or Dolby Digital amplifier using a HDMI cable.
3. LAN / ETHERNET RJ45: Connect to your Internet router to access the internet/apps.
4. 12 V Adapter entree: To connect the original included 12Volt power adaptor of 1 Ampere with DC connector 5.5 mm.

2.4 Panel of the Satellite dongle


Fig. 4

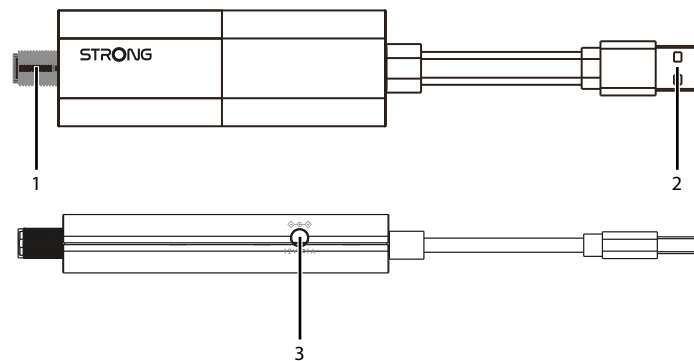

1. ANT SAT: To connect to Satellite Antenna
2. USB: To connect to the Google TV Box
3. 12 V Adapter entree: To connect the original included 12Volt power adaptor of 1 Ampere with DC connector 3.5 mm.

2.5 Remote control

Fig. 5

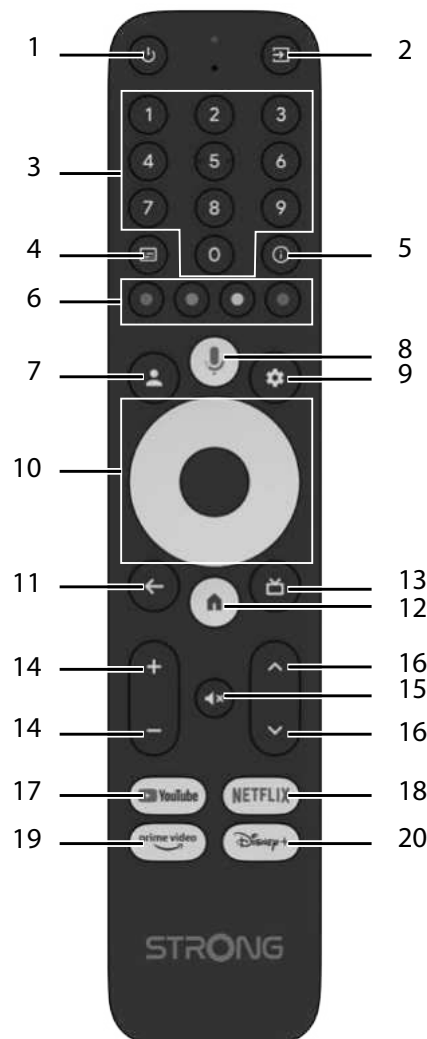

1. Short press to turn the TV/ Stick / Box to On or Standby. Long press to turn the TV/ Stick / Box to On or Deep sleep power saving.
2. Select TV inputs after setting up remote button configuration
3. 0 to 9 Choose channel directly.
4. Subtitles / Audio selection
5. INFO Display information about the channel.

6. COLOURED BUTTONS

7. Press to execute the prompt function in Live TV mode.
8. Call account menu to select between accounts
9. Press to activate the voice control function*.
10. Direct access to settings menu.
11. Navigate the menu. Confirm the selection.
12. Press to go back. In menu: Back to previous menu.
13. Enter the home desktop.
14. **VOL +/-** Press to access the TV settings.
15. Adjust the volume up or down.
16. Press to mute or restore the volume.
17. **YouTube** Change programs up or down.
18. **NETFLIX** Press for direct access to YouTube.
19. **prime video** Press for direct access to Netflix**
20. **Disney+** Press for direct access to prime video***.

*Voice control and some other functions could work only when this RCU paired with your TV.

** Membership is not included. Netflix is available in selected countries. Streaming Netflix requires to set up an account. Broadband Internet required. See www.netflix.com/TermsOfUse for details.


*** Membership is not included. Prime is available in selected countries. Streaming prime video requires to set up an account. Broadband Internet required. See www.primevideo.com for details.

**** Membership is not included. Disney+ is available in selected countries. Streaming Disney+ requires to set up an account. Broadband Internet required. See www.disneyplus.com for details.

2.6 Installing the batteries

Open the cover on the remote control and insert 2x AAA batteries into the compartment. The correct position of batteries polar diagram is shown inside the batteries compartment.

Fig.6

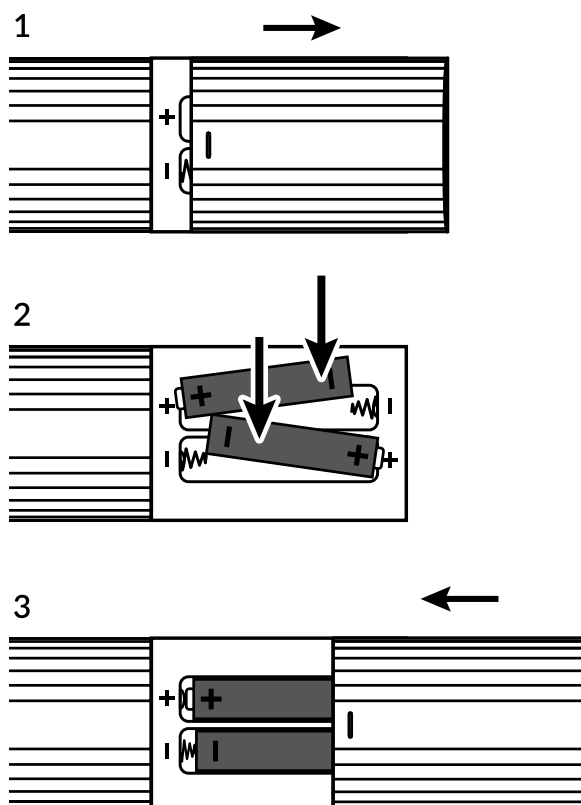

1. Open the cover.
2. Insert the batteries.
3. Close the lid.


WARNING: The batteries should not be recharged, disassembled, electrically short-circuited, be mixed or used with other types of batteries.

3.0 CONNECTION GUIDE

Refer to the diagram below for connecting your Google TV Box and Satellite Dongle.

NOTE: Before getting started, please turn off all devices to be connected.

Fig. 7

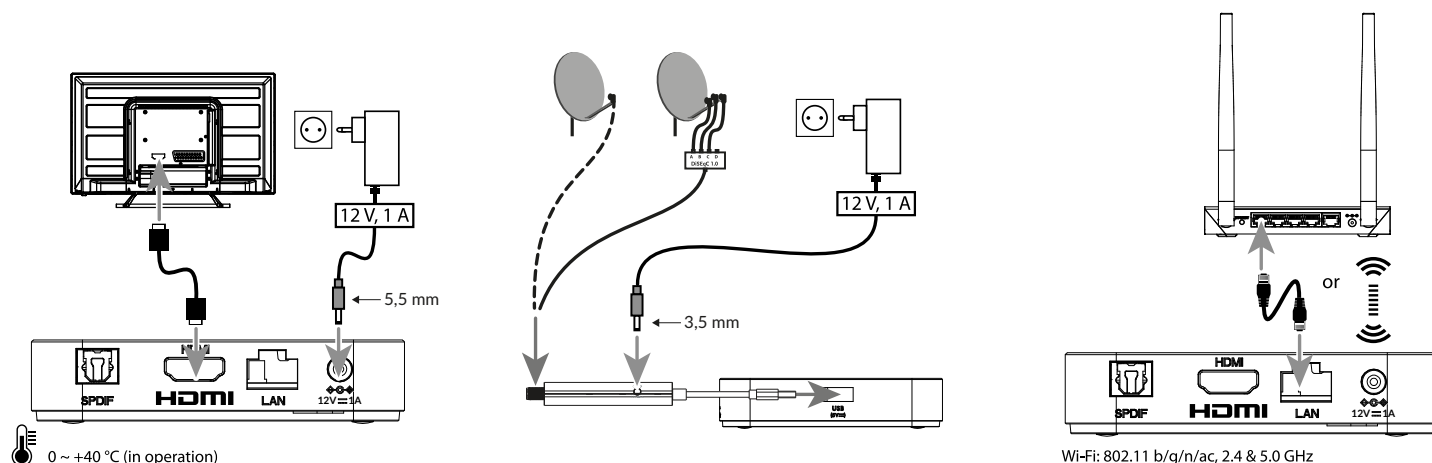

NOTE: The Google TV box also supports Wi-Fi 2.4GHz and 5GHz. To connect, go to Settings - Network.


- Connect the Google TV box to your television via the HDMI Cable. Advice: use (the included) type 2.1 as this is supporting UHD, HDR, Dolby Vision resolutions.
- Using an Ethernet Cable, connect the LAN Port of the Google TV Box to the LAN Port of your router or home broadband network.
- Connect the satellite dongle to the Google TV Box via the USB cable.
- Connect the satellite dongle to your satellite antenna
- Connect the Google TV Box and the satellite dongle to power using the power adapter provided. You can then power on your device and begin.

NOTE: Before turning on your device, please switch the signal input of the TV to the correct source


4.0 SETTING UP YOUR GOOGLE TV BOX

You may turn on your TV Box after properly connecting all the hardware.

To be able to use Google Assistant on your remote, you must first pair your Bluetooth Remote to your TV Box for 5 seconds. Follow the pairing instructions on the screen.

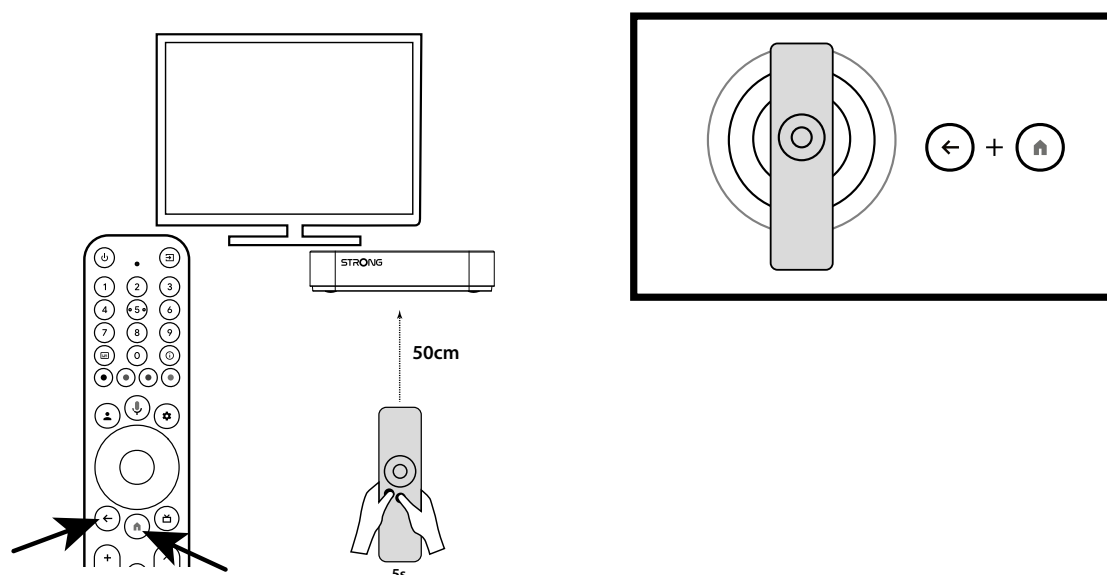

To be able to use Google Assistant on your remote, please pair the remote to your TV Box.
Press ◀ and 🏠 together for 5 seconds. The LED will start blinking.

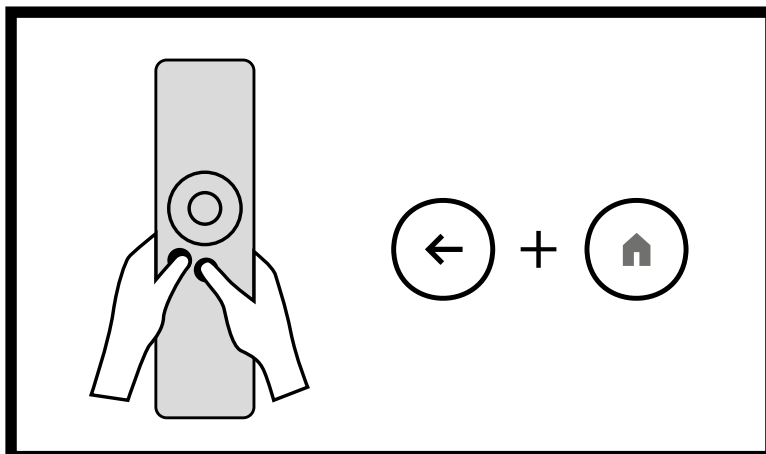


Step 1: Language




Select your preferred language on the Welcome Page.

Step 2: Location Settings

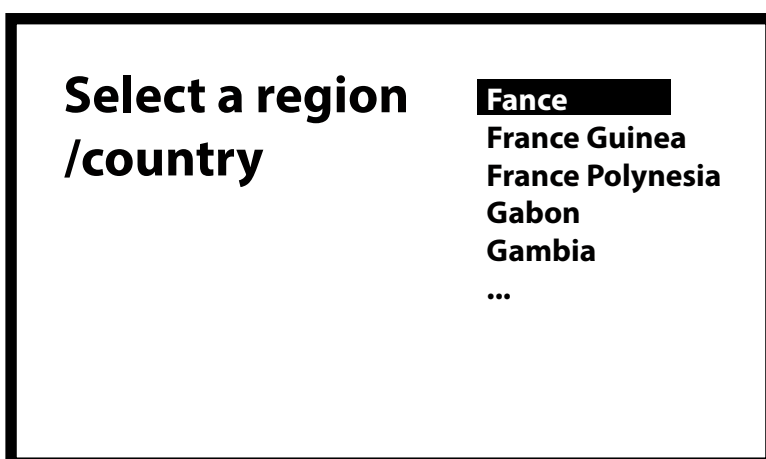

Choose whether to allow Google to use your location to improve the experience.

Step 3: Set up Google TV

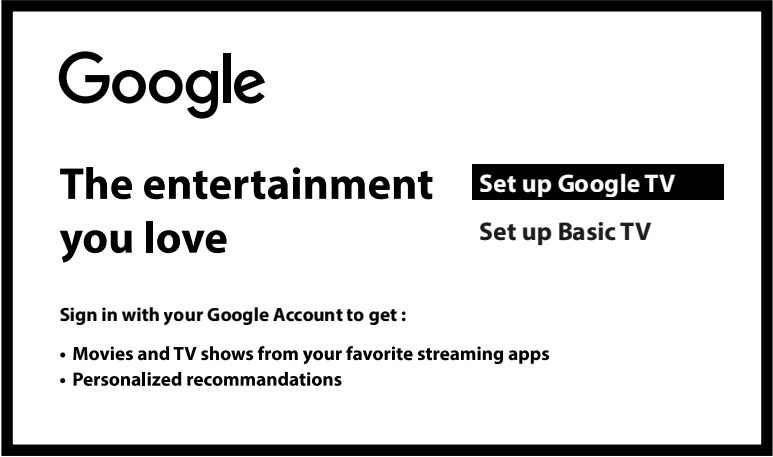


Select set up Google TV to configure the apps that will be installed on your TV and linked to your Google Account.

Step 4: Set up with the Google Home App



Set up the TV Box by downloading / opening the Google Home app on your phone. Please, scan the QR code on your phone and follow the instruction to start this Google home. Alternative, Start the set up on TV screen to type manually way by pressing down button to start with. Please, follow the instructions on your TV screen.

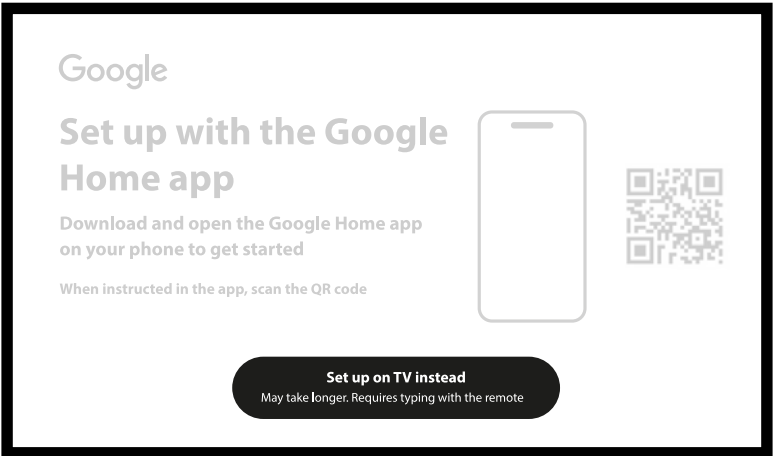

Step 6: Google Account

Google

Sign in

use your google account

Email or phone

Forgot your email?

Sign in with your Google Account and Password.

Step 7: Terms of Service & Privacy Policy

Google

Hi

By continuing, you agree to the Google Term of service, the Google Privacy Policy and the Google Play Terms of Services.

...

Accept

Terms of Service

Privacy Policy

Play Terms of Service

Google

Did you know?

Got it

Did you know that your TV has settings and that you can change them now, or later in Settings?

Read and accept the Terms of Services & Privacy Policy. Select Got it.

Step 8: Google Services

Google

Google Services

Select each to learn more about each service, such as how to turn it on or off later. Data will be used according to Google's privacy Policy. Click "Accept" to confirm your selection of these Google services settings.

Select one below

Accept

Use location☒

Help improve Android TV☒

Recommendations and ads

Services and your privacy

Select the services that you want to configure from the list. Select turn off for the features that you want to deactivate.

Google

Google

Select each to learn more about each service, such as how to turn it on or off later. Data will be used according to Google's privacy Policy. Click "Accept" to confirm your selection of these Google services settings.

Use location

Allow Google and apps with your permission to use location estimated from Wi-Fi...

TURN OFF

CLOSE

Accept

Use location☒

Help improve Android TV☒

Recommendations and ads

Services and your privacy

Google

Google Services

Select each to learn more about each service, such as how to turn it on or off later. Data will be used according to Google's privacy Policy. Click "Accept" to confirm your selection of these Google services settings.

Select one below

Accept

Use location☐


Help improve Android TV☒

Recommendations and ads

Services and your privacy


Select Accept.

Step 9: Meet your Google Assistant

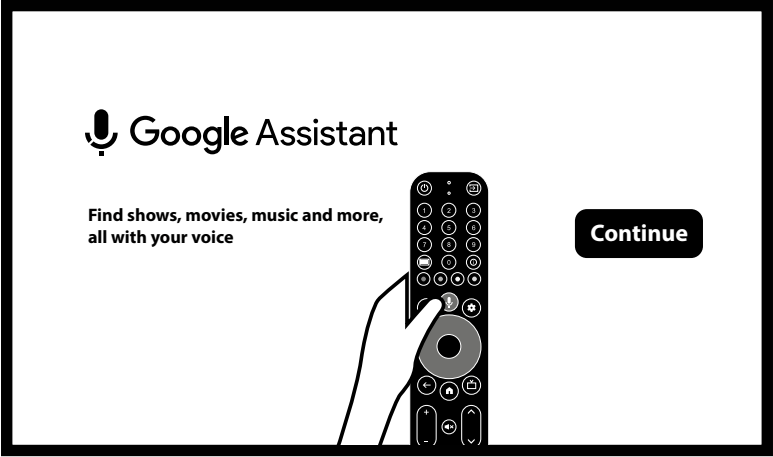


Turn on the Google Assistant function for the functionality to work on your remote.

Step 10: Search across your TV apps

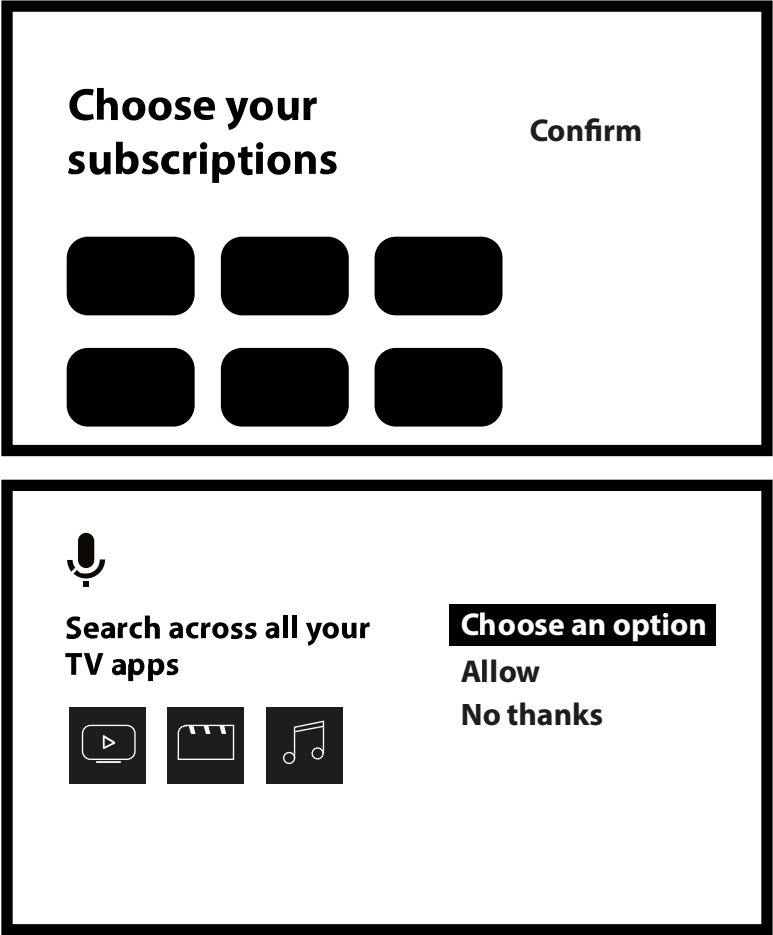


Select an option from the list.

Step 11: Select your subscriptions

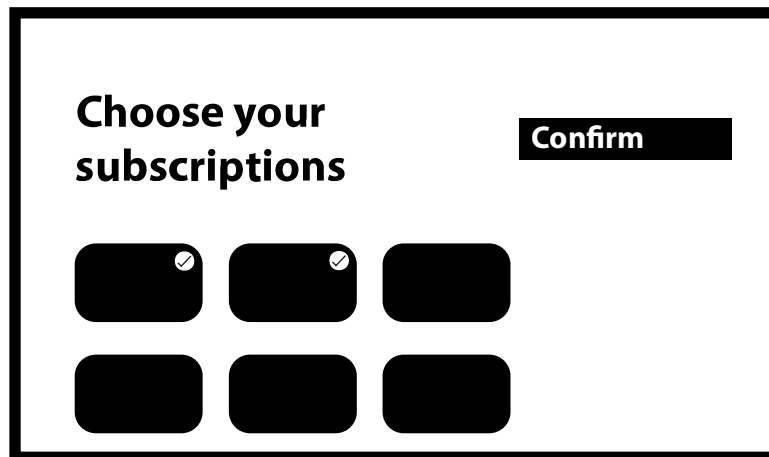


Select the apps for which you want to receive recommendations. These apps will be installed as well as the main streaming services from your area. Select confirm to launch the installation of your apps.

Step 12: Wait for your apps to be installed

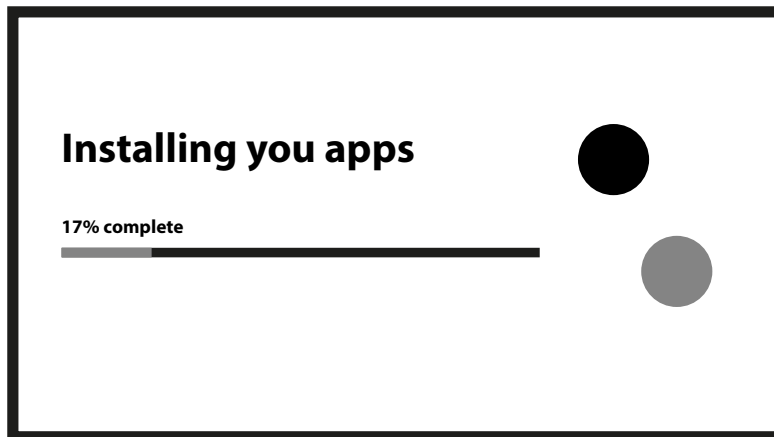

Step 13: Select options that suit your needs

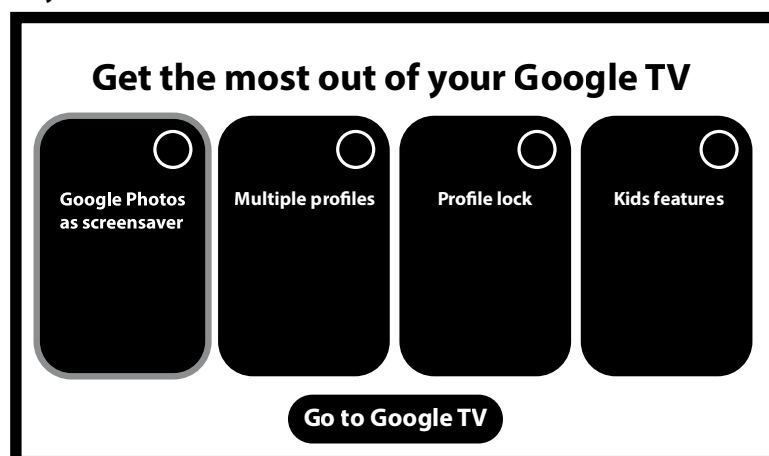

Select the option that suits your needs if you have to restrict the access to certain types of contents. And follow the steps on your screen. If you don't need to restrict access to certain types of content, select "Go to Google TV". Explore the features of your device in this walkthrough. Click "DONE" to complete it and start using your device. You're all set!

5.0 INSTALLATION LIVE TV APPLICATION MEW TV

Before you can start enjoying satellite TV and radio channels, you need to set up your preferred satellite and install the channels. Please follow the steps below:

1. Select the MEW TV application from the home screen.
2. Press OK to open the application.

Step 1: Country Select

If no channels have been installed before, a few explanation screens will appear first. Press **OK** to proceed until the *Country Select* menu appears on the screen.

By default, the country is set to Germany, which allows you to load a pre-installed channel list for Germany without needing to perform a satellite scan from ASTRA 19.2°E.

If you prefer to use a different satellite or perform a full auto scan, switch OFF the *Channel List Germany* or select another country. In this case, you will need to run a full channel scan.

Select *NEXT* and press *OK* to continue.

Step 2: FTI settings

The *FTI Settings* (First Time Installation) menu appears on the screen.

- Select *Subtitles* and press *OK* to switch ON or OFF, setting the default subtitle preference if available.
- Select *PIN Code* to set a parental PIN for protection before accessing certain channels. **Please note your PIN:**
- Select *Primary Audio* to set the first-priority audio language if available.
- Select *Secondary Audio* to set the second-priority audio language if available.
- Select *Finish* and press *OK* to proceed.

NOTE: If you selected *Pre-installed Channel List for Germany* in Step 1, you can start watching and enjoying satellite reception immediately.

For other selections, proceed to Step 3.

Step 3: Antenna setup

This menu allows you to select the antenna/dish system and start an automatic channel scan for your preferred satellite.

- Select *Direct LNB* if your system has a direct cable connection to your satellite dish.
- Select *DiSEqC* if your system supports multiple satellite dish connections.
- Select *Sat CR* if you are using a Sat CR LNB or a system for multiple household connections.
- Select *Manage Satellite* to choose a satellite, add a new one, or modify settings such as LNB frequency type (useful for older models) and transponder frequency to optimize signal strength and quality.

After making your selection, press *OK* to confirm and proceed to the next step.

By default, the scan mode is set to *FTA Only*, meaning only Free-To-Air channels will be installed. Scrambled channels will be ignored, as this receiver does not support decryption. If you still wish to install scrambled channels, switch this setting OFF.

Once all settings are configured, select *Search* to start the auto-scan process. Please be patient, as the search may take a few minutes. Once complete, a message will appear confirming the scan is finished. Press *BACK* to start enjoying your satellite reception.

Enjoy!

5.1 USING LIVE TV

To start watching satellite TV channels, select *MEW TV* from the home screen and press *OK*.

- If TV channels were found during installation, the application will open on a channel.
- If no channels were found, a "No Channels Available" message will appear. In this case, select *Installation* to open the channel scan menu, check if the correct country is selected, and follow the on-screen instructions to (re)install TV channels.

When using Live TV for the first time, an on-screen guide will explain the navigation buttons. Use these buttons or press *OK* to go through and confirm the explanations.

Navigation Controls in Normal View Mode:

- ▲ Switch to next channel in channel list
- ▼ Switch to previous channel in channel list
- Call the channel list

OK Open the main menu from Live Tv app.

1~9 to select directly channel number

◀ Step back in the menu or exit the information.

- NOTE:** Some TV channels only transmit Dolby sound tracks. In this case, the volume cannot be adjusted via the Google TV box's volume controls. Instead:
- Use the remote control of your TV or Dolby audio amplifier.
 - Alternatively, set up volume control via *Settings Set up remote control buttons* to enable control through the HDMI CEC protocol.

6.0 PREFERENCES SETUP LIVE TV

If you want to start a new automatic scan, edit or sort channels, set the default audio track, or configure the Parental Control PIN, access the TV Options menu:

1. Press **OK**
 2. Press ▼
 3. Press ► twice
 4. Confirm with **OK** to open Settings and access the submenus.
- Additionally, by pressing **OK**, you will find quick access menus to:

- *EPG* (Electronic Program Guide)
- *Schedules*
- *Subtitles*
- *Multi-Audio*

6.1 Customize channel list

This menu allows you to Sort by Group, Move, or Delete channels from the channel list.

Move Channels:

1. Select the channel you want to move in the channel list.
2. Press **OK** briefly to select it.
3. Use ▲▼ to move it to the desired position.
4. Press **OK** again to confirm the new position.
5. If you need to correct the position, press **EXIT** and re-enter this menu.

Delete Channels:

1. Select the channel you want to delete from the channel list.
2. Press and hold **OK** for one second to confirm its deletion.

6.2 Manage my Favorite

This menu allows you to create and manage favorite (FAV) lists.

- **Add New Group:** Create a new favorite group and assign it a custom name.
- **Edit Existing FAV List:** Select an already created FAV list to add or remove channels.

You can access these lists later by pressing **OK** twice while in viewing mode.

6.3 Parental control

This menu allows you to protect channels with rating levels and block channels with a PIN code. You can also create a new PIN code. To access this menu, enter the PIN code you created during the initial installation. Channels with a parental rating above the chosen age will be protected with a PIN code (if available in your local broadcast).

- **On/Off:** Press **OK** to switch parental controls On or Off.
- **Program Restrictions:** Choose the country(ies) rating system you want to use for control.
- **Ratings:** Select between None, High, Medium, or Low restrictions.
- **Custom:** Select manual and age rating restrictions.
- **Channels Blocked:** Mark all programs/channels you want to lock. You can select the lock separately for each channel you would like to protect with a PIN code.

- **Change PIN Code:** Press **OK** to enter this submenu. Enter your current PIN code (4 digits), then enter your new PIN code (4 digits) and re-enter it to confirm. The new PIN will be automatically saved.

Please make a note of your new PIN:

New PIN: _____

6.4 Video Display

This menu allows you to change the video screen size between Original scale, Full screen, or use the Zoom function.

7.0 PREFERENCES AUDIO / SUBTITLES

For the priority settings of audio and subtitles, follow these steps:

1. In viewing mode, open the *TV Options* menu by clicking **OK**, **▼**, and then **►** three times.
2. Confirm with **OK** to open the *Settings* and the submenus.
3. Select either *Audio* or *Subtitles* and then choose from the submenus below.

7.1 Default audio language

Primary audio: Use **▲▼** to select the audio language you want to hear as the first priority, if available.

Secondary audio: Use **▲▼** to select a language that will be played when the language selected for Primary Audio isn't available.

7.2 Default subtitle language

Primary language: Use **▲▼** to select the first preferred subtitle language.

Secondary language: Use **▲▼** to select the second preferred subtitle language

7.3 Audio description

Select here if you would like to hear the audio description track, if available on the channel.

The audio description provides narration of the events happening on the channel.

7.4 Subtitles

Select here to set your primary and secondary subtitle language preferences.

Primary language: Use **▲▼** to select the language you want to see as the first priority, if available.

Secondary language: Use **▲▼** to select a language that will be displayed when the language selected for the primary subtitle is not available.

7.5 Zapping mode

Select here the *channel zap/switching mode* you wish.

Freeze will keep displaying the last video frame until the next channel starts to play.

Black will display a black screen between channel switching.

7.6 Channel search

This menu allows you to search for (again) channels from satellite automatically. Be aware that all previously installed channels and *favorite list(s)* will be deleted. The newfound channels will be installed in the *channel list*, and afterwards, you can create a new *favorite list* if you like. Select *Scan* and choose between *Auto*, which will install all found channels, or *Transponder*, to scan only on one selected frequency. Highlight *Search* and press **OK** to start scanning.

7.7 Factory RESET (Live TV only)

If you would like to do a factory reset only for the *Live TV* application without resetting the Android part, then select *Reset* and confirm to delete all settings and *channel lists*. This will allow you to install the satellite part from the beginning through the installation wizard.


7.8 InfoBar setting

 




Select the time you want the *zap information banner* to display on screen after a channel switch. Choose between: *Never*, *3 sec*, *5 sec*, or *9 sec*.

7.9 About


In this last menu item, you can find the version of the *Live TV application*. For technical support or at the request of the helpdesk, you can switch the *Diagnostic mode* to *On*. This will display additional data on screen, such as PID's, frequency, and signal strength information.

8.0 USING ANDROID

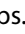 
Press on the  button to select the android home page where you can start your journey.

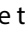This is the start page which allows you to select MEW Live TV app, your favourite applications as YouTube, to search for movies and new to be installed apps. Use the navigation buttons   and   to select and with **OK** confirm selection. To exit or one step back use  button.

Press  to access directly android system menus to change settings and setup connections as Wi-Fi and Blue tooth. (Chapter 9)

Press  to call Google Assistance with voice control functions. (Chapter 10)

9.0 SETTINGS

Select Settings to check the device information, add/remove accounts and make changes to the system settings. Remove apps, set date & time, select audio and screen settings, Factory reset and lot more... Press  to access directly or through Home menu to select item in the upper right corner.

9.1 Set your device name

Select a name here that will help you identify the connection when you transmit or establish it from other devices.

9.2 Display and sound

Select *Display and sound* to change the Screen resolution, Audio formats and set up HDMI CEC Control.

By default, the screen resolution is automatically set to the best and maximum resolution of the connected TV. If you wish, you can switch to lower resolutions and switch off the HDR function. Select *HDMI CEC* to setup the control of the remote control from the devices and connected TV.

Select the *Advanced and Sound* settings to choose between stereo and Dolby audio and to activate the S/PDIF output.

Find under *Display and sound* *Advanced sound settings* *Select formats* *None* to set only to Stereo audio. Select *Automatic* to use all audio formats supported by this device including Dolby Digital.

9.3 Network and Internet

Select and enable Wi-Fi in order to connect wireless to the network.


Once the device scans and lists nearby Wi-Fi networks, select the appropriate network name, if required put in the password and select **OK**.

If you use an RJ45 cable between the Android box and the router for the Internet connection.

You can find under *Ethernet* *Connected* whether the connection has been established correctly. If *Not Connected* is displayed, the cable is not plugged in or you want to use Wi-Fi instead.

NOTE: You can only use one connection at same time. Wi-Fi or Cable. Not both.

9.4 Accounts and sign in

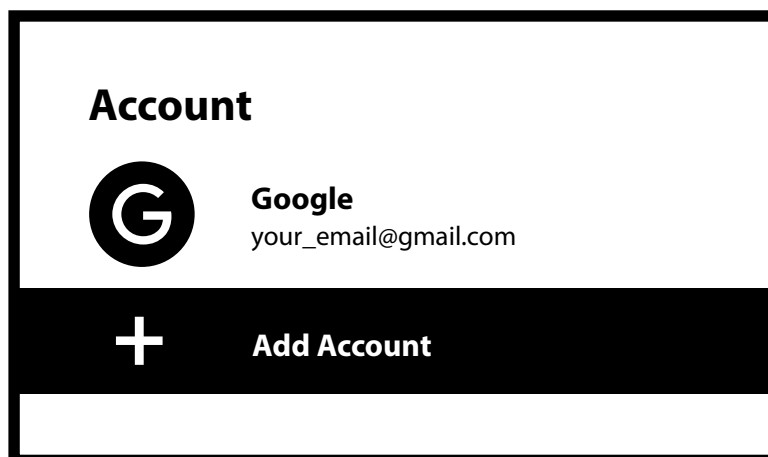

Find here the current account you did use in first setup.
If you like to add a new account(s), then switch to new one or delete one.

9.5 Apps

Find here all installed apps on your box. If you want you can remove them or see permission which access, they have or require. Please, be careful if you do change some or remove apps. This can lead to instability of their functions.

9.6 System

Here you will find all settings such as information about the device and the software version, time and date, language selection, keyboard type, display and sound, storage space, activation of Google Assistance and Chromecast, energy saving settings, location and accessibility.

9.6.1 About Information

Under Settings *System*, select *About* to find device name and software information.
Select *System update* to check if a new software is available.
Select *Factory reset* to reset or to erase everything. (See Chapter 11)

WARNING: After an update the receiver restarts automatically. During the upgrade process NEVER disconnect the receiver from the mains or switch off the power! Doing so might damage your receiver and will void warranty!

9.6.2 Date and Time

Select *Date and Time* to change manual the time zone and the display format (24/12hour).

9.6.3 Language Settings

Select *Language* to change the language previously set.

9.6.4 Keyboard

The default keyboard is the basic type called *Gboard*. This menu allows you to switch to other keyboard types.

9.6.5 Storage

The *Memory* menu allows you to check the remaining space for both internal and external memory.

9.6.6 Ambient mode

The *Display* menu allows you to set a different wallpaper, as well as configure the weather and time for the home screen.

9.6.7 Power and energy

The *Power Management* menu allows you to adjust the automatic standby time. By default, the Google TV box switches to standby if the remote control is not used for 3 hours. If a message appears after 3 hours prompting standby mode, pressing any button on the remote will extend viewing for another 3 hours. This feature helps reduce power consumption if you forget to switch to standby. You can select a different time duration in this menu.

9.7 Remote and accessories

Select the option *Add accessory* for Bluetooth pairing of a new remote or device.
To remove, rename, find details of a Bluetooth device, choose this device which is shown under *Remote & Accessories* and press **OK** to access.


9.8 Set up remote buttons

Select option *Add device* for control with included Android remote another device such as TV, Soundbar or AV receiver. These must be connected by HDMI cable. Selections are Volume, Standby and Source input of TV screen. To set up these buttons need internet connection to be active as codes will be controlled from internet server.
Please, follow the instructions on menus.

10.0 GOOGLE ASSISTANT

Say it to Play it.

Ask it to play your favorite show, video, or music. Or find the latest blockbuster to enjoy.

To get started, press  on your remote

Speak into the microphone of your Voice Search remote.

Learn more about the Google Assistant on assistant.google.com or say "What can you do?"

Movies & TV shows:

Play Stranger Things on Netflix. Video clips: Play cat videos. Apps: Open YouTube. Search: Search for sitcoms.

Info: Tell me about Game of Thrones.

Control

Playback: Pause. Stop. Resume Volume: Louder. Softer. Power: Turn off.

Play music, news, or podcasts

Music: Play music by Sia. (Learn how to choose your music service provider.) News: Play the news. What's the latest news from BBC?

Ask Google

Sports: How did the Patriots do? When is the next Warriors game? Calculations: What's 20% of 80?

Dictionary: What does "ludic" mean?

Find answers: How far away is the moon? What is weather in Berlin?

Unit conversions: How many teaspoons in a cup?

NOTE: To be able to use Google Assistant on your remote, you must first pair your Bluetooth Remote to your TV Box.


11.0 FACTORY RESET

Under Settings, System About Reset Factory Reset.

Click Factory Reset to clear everything.

Once this option is selected, all manually installed apps and user data information will be deleted.


The Google TV box returns to the First Installation Wizard stage for a new installation.

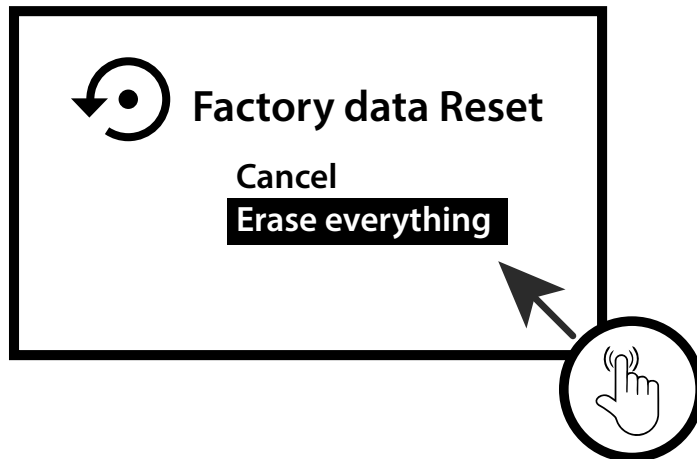

WARNING: By resetting your Android TV box back to factory default, all your settings, installed application, accounts and stored channels will be permanently deleted. Please use this option with carefully.

12.0 SIMPLE TROUBLESHOOTING

Issue	Possible Reason	Solution
No LED of menu display after power on	The power adapter is not properly connected	Make sure the device(s) is connected to the main power
No Sound	<ul style="list-style-type: none"> ■ The Tv is on Mute or volume is low. ■ The device is on Mute or the volume is too low. 	Press the mute button to restore the sound and increase the volume.
Failed to connect to network	<ul style="list-style-type: none"> ■ Ethernet cable is not properly connected. ■ Wi-Fi is turned off or the signal is too weak. 	<ul style="list-style-type: none"> ■ Reconnect the cable. ■ Restart the Wi-Fi or adjust the position of the device closer to the router.
Remote Control Failure	<ul style="list-style-type: none"> ■ The remote is not paired. ■ Remote control is broken or the batteries are low in power. 	<ul style="list-style-type: none"> ■ Aim the remote's sensor at the front panel's sensor and open settings Remotes and accessories Pair remote. Press ← & ⬆ at same time for 5 seconds. ■ Replace batteries or send the device to the local maintenance service station for checking.

Issue	Possible Reason	Solution
No Picture on Screen	HDMI cable is not connected	Make sure that HDMI is selected as your TV input
	The receiver can't receive signal.	Check the antenna cable, replace the cable, or connect the cable to the receiver tightly.
	Satellite dongle is not recognized	Unplug the power adapters from the mains and plug them back in. Check if the dongle is recognized by confirming the pop-up message on the screen.
	Wrong direction of the dish.	Check signal strength and adjust your dish correctly.
No picture or sound on TV	The input is not selected on your TV.	Switch to the correct TV input.
	The TV is not connected to the mains. Bad cable connection.	Check the mains lead. Firmly plug in the cables between the receiver and TV
	Audio muting.	Press  .
	TV power off.	Turn the TV on.
Voice search on remote is not working	Remote is not paired to the TV Box	See the Pairing Bluetooth Device section in this guide
Scrambled channel message	The channel is scrambled.	Select an alternative channel

13.0 TECHNICAL SPECIFICATIONS

Video decoder

Video resolution: 4Kp60, 1080p60, AV1, VP8/VP9, HEVC, H.265, AVC H.264, MPEG-4,MP@ML, MP@HL profiles, Dolby Vision, HDR10+, HDR10, HLG

Audio decoder

Audio decoding: 32KHz to 192KHz sample rates, Dolby Digital Plus*, Dolby* Atmos (passthrough), AAC LC, AAC LC + SBR Level 2, AAC 5.1, HE AAC Level 2 & Level 4, MPEG Audio Layers 1, 2 &3, MPEG-4 Audio

* Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

System & Memory Google TV Box

Android Version: 11
 Chipset: Amlogic S905Y4
 CPU: Amlogic S905Y4 Quad Core Cortex-A35, 2.0 GHz
 GPU: ARM G31 MP2 OpenGL ES 3.2 Graphics engine
 SDRAM: LPDDR RAM: 2 GB
 Flash: eMMC:16 GB

System & Memory Satellite Dongle

Main Chipset:	ALI-M3538P
Processor:	MIPS 74K up to 1.32GHz,2600 DMIPS
RAM:	64M DDR2
Flash:	8M Nor Flash

Connectors

HDMI:	Version 2.1
Ethernet:	RJ 4, 10/100
1x USB 2.0:	Type A, 500mA
S/PDIF:	Optical
DC IN:	12 V,1 A

General data Google TV Box

Wi-Fi:	IEEE 802.11b/g/n, 2.4 GHz IEEE 802.11a/n/ac, 5 GHz
Bluetooth:	5.0 (LE 4.2)
Power supply:	AC 100 - 240 V AC ~ 50/60 Hz
Input voltage:	DC 12 V, 1 A
Power consumption working:	7 W
Operating temperature range:	0 ~ +40 °C
Storage temperature:	-10 ~ +70 °C
Dimensions (W x D x H) in mm:	96 x 96 x 20,8
Weight:	179 g

General data Satellite Dongle

Satellite:	Free to Air (no decoder)
Demodulator:	DVB-S/DVBS2 in QPSK/ 8PSK
Input frequency range:	950 - 2150 MHz, DiSEqC 1.0, SatCR
Power supply:	AC 110-240 V AC50/60 Hz
Input voltage:	DC 12 V, 1 A
Power consumption working:	3,5 W
Operating temperature range:	0 +40°C
Dimensions (W x D x H) in mm:	217.7×31×15.7
Weight:	56 g

Data Protection:

Please be aware that STRONG, its manufacturing partners, the application providers and the providers of the services may collect and use technical data and related information, including but not limited to technical information about this device, system and application software and peripherals. STRONG, its manufacturing partners, the application providers and the providers of the services may use such information to improve its products or to provide services or technologies to you, as long as it is in a form that does not personally identify you.

Additionally, please keep in mind that some services provided - already in the device or installed by you - may request a registration for which you have to provide personal data. Beside that, please be aware that some services which are not pre-installed but can be installed may collect personal data even without providing additional warnings and that STRONG cannot be held liable for a possible breach of data protection by services not pre-installed.

* Availability of apps depending on the country. STRONG cannot be held liable for services by third parties. Offers by third parties may be changed or removed at any time, may not be available in all regions and may require a separate subscription.