

STRONG



Google TV

STRONG LEAP-UNA+ STICK | GOOGLE TV



FHD
streaming



Subject to alterations

User manual

SERVICE CENTER

AT: support_at@strong-eu.com - 0820 400 150 (€ 0,12/Min. österr. Festnetz)

BG: support_bg@strong-eu.com - +359 32 634451

CZ: support_cz@strong-eu.com - 844 44 44 90

DE: support_de@strong-eu.com - 0800 7788 787 (Gebührenfrei)

DK: support-dk@strong-eu.com

BG: support_bg@strong-eu.com - +359 32 634451

ES: support_es@strong-eu.com - +34 91 119 61 76

FR: support_fr@strong-eu.com

HR: +385 1 344 57 66

HU: support_hu@strong-eu.com - +36 1 445 26 10

IT: support_it@strong-eu.com

NL: support_nl@strong-eu.com

PT: support_pt@strong-eu.com - +351 2 100 06 125

SK: support_sk@strong-eu.com - 0850 15 05 50

SL: +386 1 828 08 58

UA: support_ua@strong-eu.com - +380 (44) 238 61 50

Supplied by STRONG Austria
Represented by STRONG Ges.m.b.H.
Teinfaltstraße 8/4.Stock, A-1010 Vienna, Austria
Email: support_at@strong-eu.com

21 May 2026

Licenses

This product contains one or more programs protected under international and U.S. copyright laws as unpublished works. They are confidential and proprietary to **Dolby Laboratories**. Their reproduction or disclosure, in whole or in part, or the production of derivative works therefrom without the express permission of Dolby Laboratories is prohibited. Copyright 2003-2009 by Dolby Laboratories. All rights reserved.

SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, STRONG declares that the device LEAP-UNA+ is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <https://eu.strong-eu.com/downloads/>

Subject to alterations. In consequence of continuous research and development technical specifications, design and appearance of products may change. Wi-Fi, WPA2, WPA are registered trademarks of Wi-Fi Alliance®. The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. All other product names are trademarks or registered trademarks of their respective owners.

© STRONG 2026. All rights reserved.

TABLE OF CONTENT

1.0 INTRODUCTION	3
1.1 Safety Instructions	3
1.2 Storage	4
1.3 Package content	4
2.0 TV STICK PANEL	4
2.1 Panel	4
2.2 Remote control	5
2.3 Installing the batteries	6
2.4 Power adapter	7
3.0 CONNECTION GUIDE	7
4.0 SETTING UP YOUR DEVICE	8
5.0 SETTINGS	14
6.0 DOWNLOADING APPS	20
7.0 DEVICES PREFERENCE	21
8.0 GOOGLE CAST	22
9.0 REMOTE & ACCESSORIES	22
10.0 ABOUT	23
11.0 GOOGLE ASSISTANT	23
12.0 SIMPLE TROUBLESHOOTING	24
13.0 TECHNICAL SPECIFICATIONS	24
14.0 ACCESSIBILITY COMPATIBILITY STATEMENT	25
15.0 PRIVACY AND SECURITY	26

1.0 INTRODUCTION

Thank you for choosing the FHD TV Stick supplied by STRONG. It has been produced with the latest new technology and offers extensive entertainment and great versatility. We wish you many hours of new great experiences exploring the Android world!

1.1 Safety Instructions

Read all the instructions before operating the device. Keep these instructions well for later use.

Only use attachments/accessories specified or provided by the manufacturer (such as the exclusive supply adapter, battery etc.).

- Please refer to the information on the product enclosure for electrical and safety information before installing or operating the apparatus.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspaper, table-cloths, curtains, etc.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- ⚠ This mark indicates a risk of electric shock.
- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent types.
- The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Excessive sound pressure from earphones and headphones can cause hearing loss.
- Listening to music at high volume levels and for extended durations can damage one's hearing.
- In order to reduce the risk of damage to hearing, one should lower the volume to a safe, comfortable level, and reduce the amount of time listening at high levels.
- The mains plug or appliance coupler is used as disconnect device, it shall remain readily operable. When not in use and during movement, please take care of the power cord set, e.g. tie up the power cord set with cable tie or something like that. It shall be free from sharp edges or similar which can cause abrasion of the power cord set. When put into use again, please make sure the power cord is not damaged. The absence of a light indication on the apparatus does not mean that it is fully disconnected from the mains. To disconnect the apparatus completely, the mains plug must be pulled out.
- Attention should be drawn to environmental aspects of battery disposal.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 🔪 To prevent the spread of fire, always keep candles or other open flames away from this product.
- □ Equipment with this symbol is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

Precautions

- Never try to open the device. It is dangerous to touch the inside of the device due to high voltages and possible electrical hazards. Opening the device will void the warranty of the product. Refer all maintenance or servicing to suitably qualified personnel.
- When you are connecting cables, be sure that the device is disconnected from the mains supply voltage. Wait a few seconds after switching off the device before you move the device or disconnect any equipment.
- It is a necessity that you only use an approved extension and compatible wiring that is suitable for the electrical power consumption of the installed equipment. Please ensure that the electrical power supply corresponds with the voltage on the electrical identification plate at the back of the device.
- ⚠ Risk of explosion if the battery is replaced by an incorrect type.
- Disposing of a battery into the fire or a hot oven, or mechanically crushing or cutting a battery can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.

Operating Environment

- Do not install this equipment in a confined space such as a bookcase or similar unit.
- Do not use the set near damp, and cold areas, protect the set from overheating.
- Keep away from direct sunlight.
- Do not use the set near dust place.
- Do not place candles near the opening area, to avoid flammable foreign material from entering the device.

WEEE Directive

 Correct Disposal of this product. This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

1.2 Storage

Your device has been carefully checked and packed before shipping. When unpacking it, make sure that all the parts are included and keep the packaging away from children. We recommend that you keep the carton during the warranty period, to keep your device perfectly protected in the event of repair or warranty.

Equipment Set-up

Please follow the instructions below:

This user manual provides complete instructions for installing and using this product. The symbols will serve as follows:

WARNING: Indicates warning information.

NOTE: Indicates any other additional important or helpful information.

MENU Represents a button on the remote control or the product.

Move to Represents a menu item within a window.

1.3 Package content

- 1x Google TV Stick
- 1x Voice Enabled Remote
- 1x USB-C Cable with Power adapter
- 1x HDMI Extender Cable
- 2x AAA Batteries
- 1x Quick User Guide
- 1x Safety & Instruction file

WARNING: The batteries should not be recharged, disassembled, electrically short-circuited, be mixed or used with other types of batteries. If rechargeable accumulators instead of batteries are going to be used (e.g. NiMH), we recommend using types with low self-discharge to ensure long-term operation of your remote control.

NOTE: Only use the original USB power adaptor of 1 Ampere. Other adaptors only use 0,5 Ampere which sometimes is enough to supply this Google TV Stick.

2.0 TV STICK PANEL

2.1 Panel


Fig. 1



- 1. HDMI
- 2. LED
- 3. USB-C

2.2 Remote control

 Fig. 2

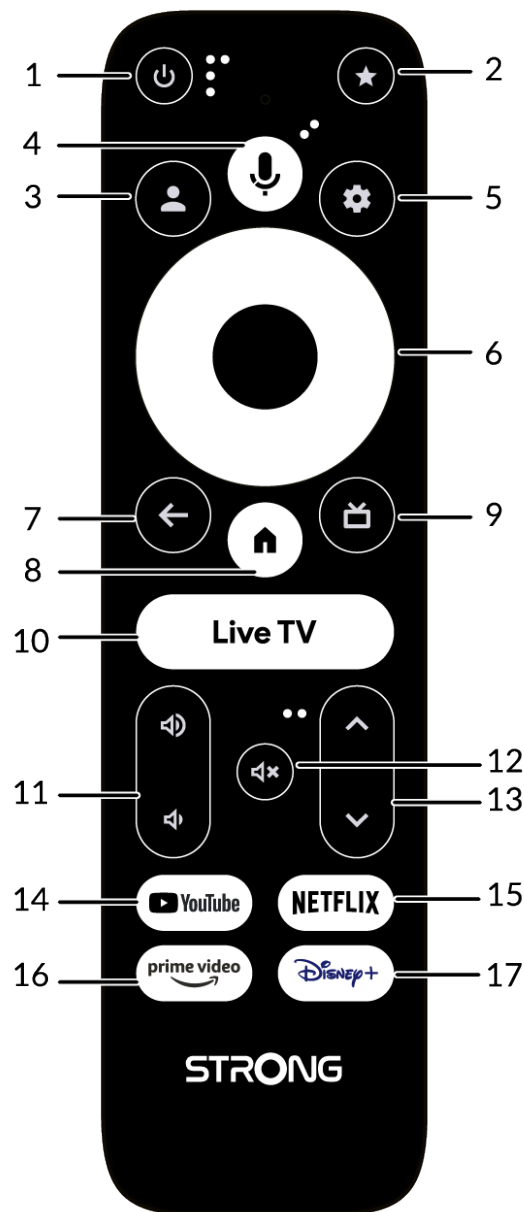

1. Function Zone (Keys 1–5)

Located at the top section of the remote, this zone includes primary control and shortcut functions.

- | | |
|--|---|
| 1.  | Key 1: Top-left — Power On/Off
Press to turn the TV/ Stick to On or Standby. |
| 2.  | Key 2: Top-right — Favourite apps
Long press: Select your favourite App. (Create shortcut)
Short press: Open your favourite App (Previously selected) |
| 3.  | Key 3: Row 2, Column 1 — Account
Call account menu to select between accounts |
| 4.  | Key 4: Row 2, Column 2 — Voice Control
Press to activate the voice control function*. |
| 5.  | Key 5: Row 2, Column 3 — Settings
Press to access the TV settings. |

2. Navigation Control Zone (Keys 6–13)

Located in the central part of the remote, this zone is dedicated to menu navigation and selection.

- 6. **▲▼◀▶ OK** Key 6: Row 3 – Circle pad
Navigate the menu. Confirm the selection.
- 7. **←** Key 7: Row 4, Column 1 – Back
Press to go back to previously viewed channel. In menu: Back to previous menu.
- 8. **⬆** Key 8: Row 4, Column 2 — Home menu
Enter the home desktop.
- 9. **TV** Key 9: Row 4, Column 3 — TV Guide
Call Guide / Channel list in some TV applications.
- 10. **LIVE TV** Key 10: Row 5 — Live TV
Opens Live TV or the channel guide
- 11. **VOL +/-** Key 11: Row 6, Column 1 — Volume
Adjust the volume up or down.
- 12. **🔇** Key 12: Row 6, Column 2 — Mute
Press to mute or restore the volume.
- 13. **▲▼** Key 13: Row 6, Column 3 — Programs
Change programs up or down.

3. Applications Shortcut (Keys 14–17)

Located at the bottom section of the remote, this zone includes application shortcuts.

- 14. **YouTube** Key 14: Row 7, Column 1 – YouTube
Press for direct access to YouTube.
- 15. **NETFLIX** Key 15: Row 7, Column 2 — Netflix
Press for direct access to Netflix**
- 16. **prime video** Key 16: Row 8, Column 1 — Prime Video
Press for direct access to prime video***.
- 17. **Disney+** Key 17: Row 8, Column 2 — Disney+
Press for direct access to Disney+****.

*Voice control and some other functions can work only when this RCU paired with your TV Stick.


** Membership is not included. Netflix is available in selected countries. Streaming Netflix requires to set up an account. Broadband Internet required. See www.netflix.com/TermsOfUse for details.

*** Membership is not included. Prime is available in selected countries. Streaming prime video requires to set up an account. Broadband Internet required. See www.primevideo.com for details.

**** Membership is not included. Disney+ is available in selected countries. Streaming Disney+ requires to set up an account. Broadband Internet required. See www.disneyplus.com for details.

2.3 Installing the batteries

 Fig. 3

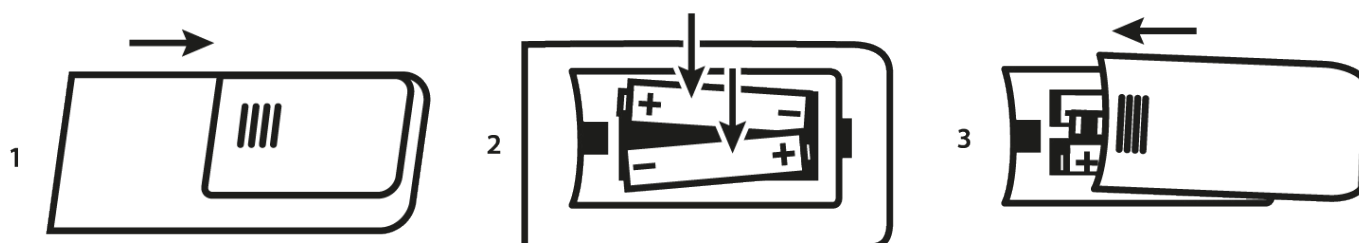


Open the cover on the remote control and insert 2x AAA batteries into the compartment. The correct position of batteries polar diagram is shown inside the batteries compartment.

1. Open the cover.
2. Insert the batteries.
3. Close the lid.

WARNING: The batteries should not be recharged, disassembled, electrically short-circuited, be mixed or used with other types of batteries.

 2.4 Power adapter

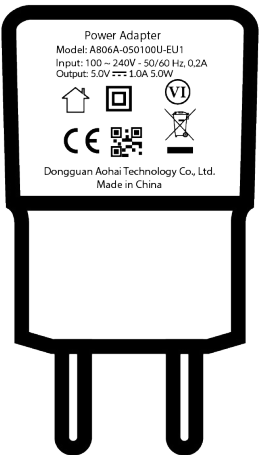

The device is supplied with a power adapter (Model: A806A-050100U-EU1), manufactured by Dongguan Aohai Technology Co., Ltd., and made in China. It is designed to operate with an input voltage of 100–240 V at a frequency of 50/60 Hz, with a current of 0.2 A. The adapter provides an output of 5.0 V and 1.0 A, with a maximum power of 5.0 W.

The symbols on the adapter indicate the following:

- CE indicates conformity with applicable European regulations
- Indoor use symbol: for indoor use only
- Double insulation symbol: Class II equipment, no protective earth required
- Crossed-out wheeled bin: do not dispose of with household waste; follow local recycling regulations
- Efficiency Level VI: meets energy efficiency requirements for external power supplies


Only use the supplied power adapter or an equivalent model with the same electrical specifications.

3.0 CONNECTION GUIDE

Refer to the diagram below for connecting your Google TV Stick to the TV.

NOTE: Before getting started, please turn off all devices to be connected.

 Fig. 4

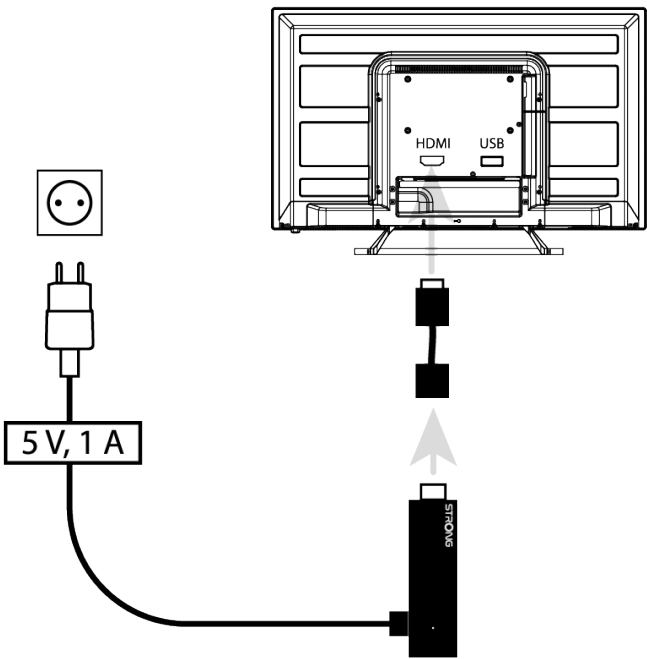

Connect the TV stick to your television on available HDMI port. Connect one end of the USB-C cable into LEAP-UNA+ USB-C port. The other end of this cable into USB power adaptor. Now, Insert the USB power adaptor into the wall outlet.

NOTE: The LEAP-UNA+ stick supports Wi-Fi 2.4GHz and 5 GHz. To connect, go to Settings - Network.

NOTE: Before turning on your device, please switch the signal input of the TV to the correct source

4.0 SETTING UP YOUR DEVICE

 
You may turn on your TV after properly connecting is done in above step 3.

Select on TV the HDMI entrée port where this TV stick is inserted to. Wait until the menu appears on screen. To be able to use the Bluetooth Remote control and Google Assistant, you must first pair the Remote to your TV Stick. To do so, click on any button of the remote control, and then press at same time ← & 🏠 button for 3 seconds until the LED on remote is blinking green.

The pairing will now start and if successful it will go automatically to the next step in installation wizard.

Please, follow the pairing instructions on the screen.

NOTE: You can also pair the remote control with the following reset operation: Power off the remote control, hold the return key without releasing it and Power on the remote control.

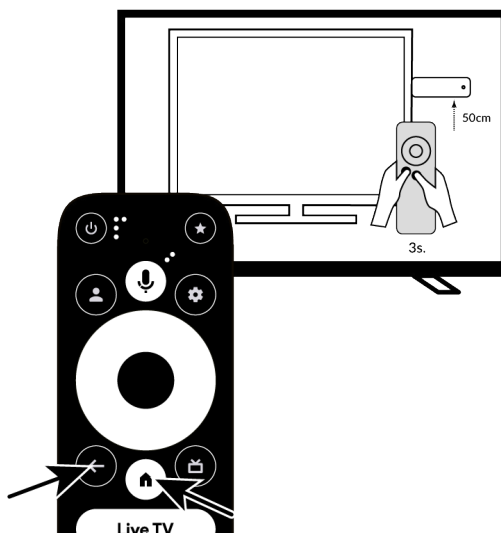


Step 1: Language

Select your preferred language on the Welcome Page.




 Step 2: Select a region/country

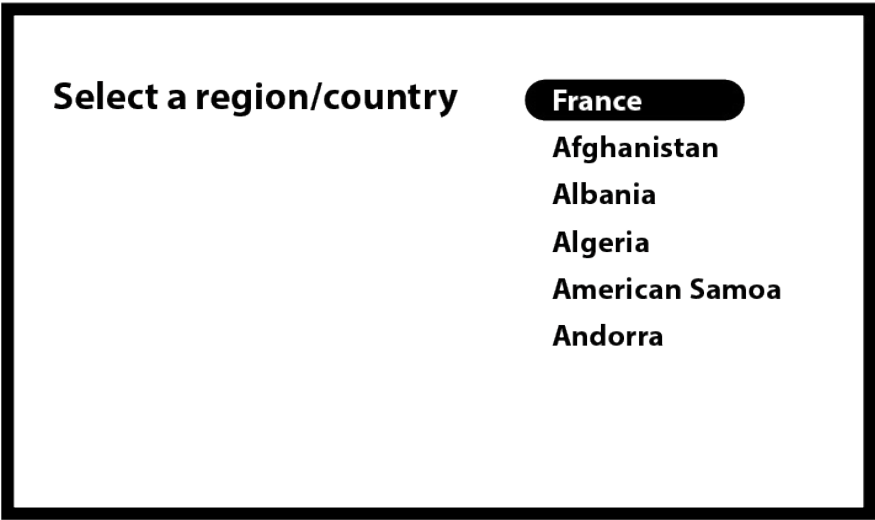


Step 3: Quickly set up Google account

 Choose whether to transfer your Google account from your Android phone or set it up manually in this menu. By selecting Continue, follow the instructions on your phone. Select Manual Setup to proceed in this menu on the TV screen.

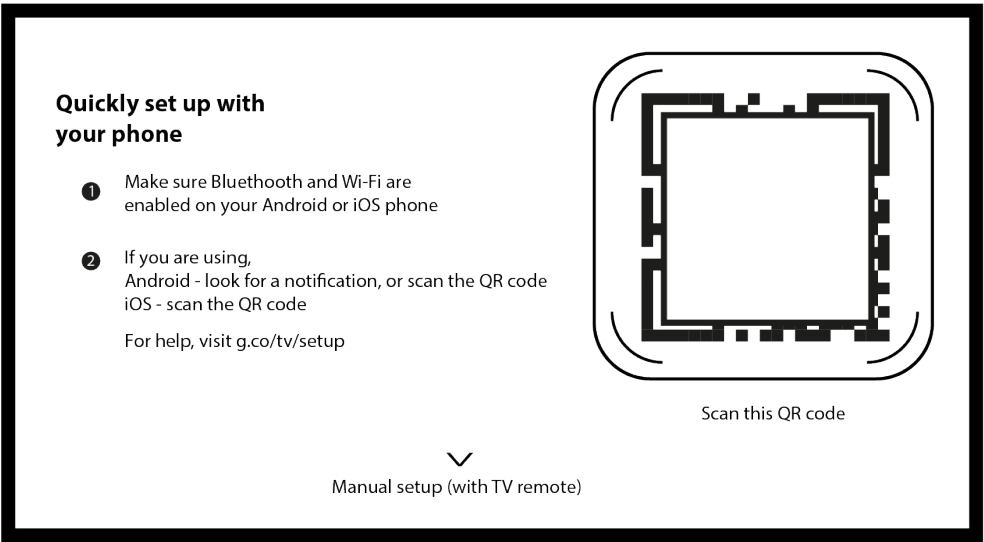

Step 4: Set up Wi-Fi network

 Select your Wi-Fi Network.

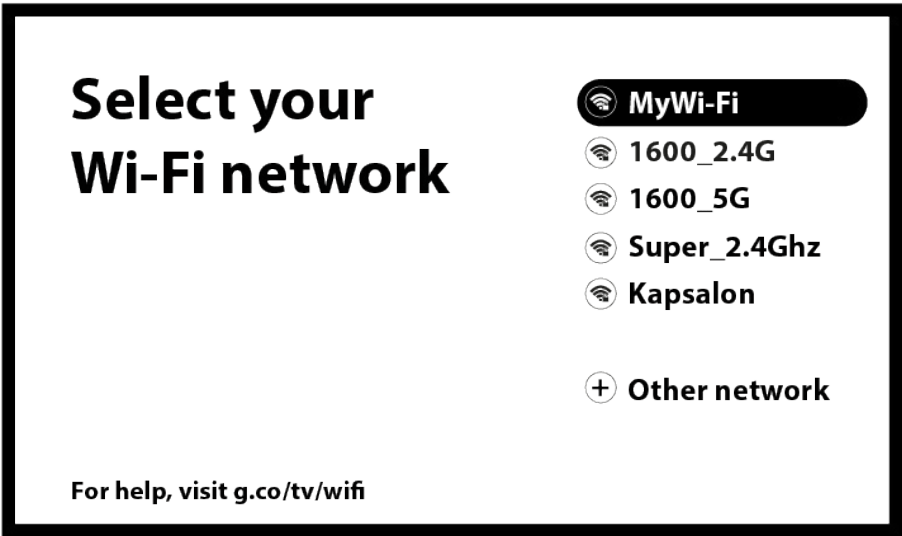

Step 7: Terms of Service & Privacy Policy
Read and accept the Terms of Services & Privacy Policy.

Google

Terms of Service

By continuing, you agree to the Google Terms of Service, the Google Privacy Policy and the Google Play Terms of Service.

...

Accept

Terms of Service

Privacy Policy

Play Terms of Service

Step 8: Diagnostic Report Settings
Select whether to allow your TV stick to send automatic diagnostic and usage data to Google.

Google Services

To learn about a service, select it below. Data will be used according to Google's Privacy Policy (g.co/privacypolicy). Select Accept to confirm.

Help improve Google TV

On

Atomatically send ...

Google Home

This TV will ...

Recommendations & ads

Your activity ...

Location

On

Provide more ...

Updates & apps

Automatically download ...

Learn more

Accept

Hi Laura,

By clicking "Accept" you agree to the Google Terms of Services ...

 
Accept

Terms of Service


Play Terms of Services

Privacy Policy

Step 9: Meet your Google Assistant

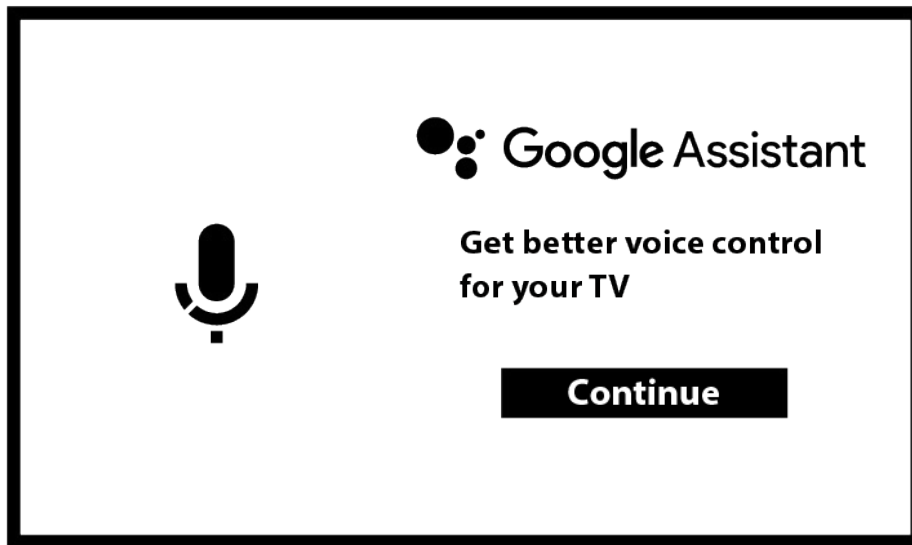


 Turn on the Google Assistant functions to activate this functionality on your remote.

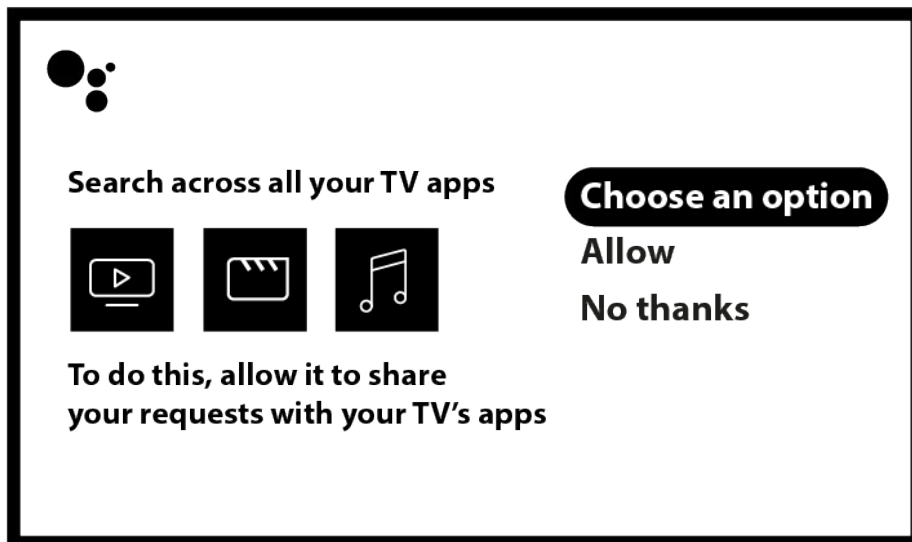

Step 10: Select a Home

If you have more than one Google smart home device, select a unique name to distinguish between them.

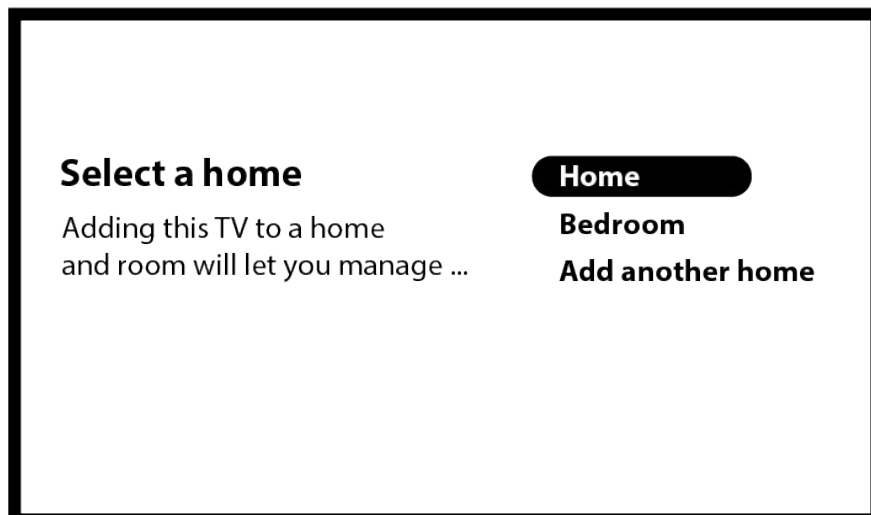

Step 11 - Choose your services

Selected apps will be installed to your Home screen.

Choose your services

Confirm

Your choices will be saved and used for recommendations when you're signed into ...

Step 12 - Choose one of the Energy modes`

Choose your energy mode



Low

Standby - Network connection is off when the TV is not in use



Optimized

Networked standby - Enables features to wake up the TV over the network

Recommended



Increased

Always connected - Ennables network features when TV is not in use

 
NOTE: More steps available, but may vary from Google version to version, choose as required.

To finish, select "Go to Google TV".

13


Step 13: Welcome to Google TV

You are ready to begin as the home page will open.

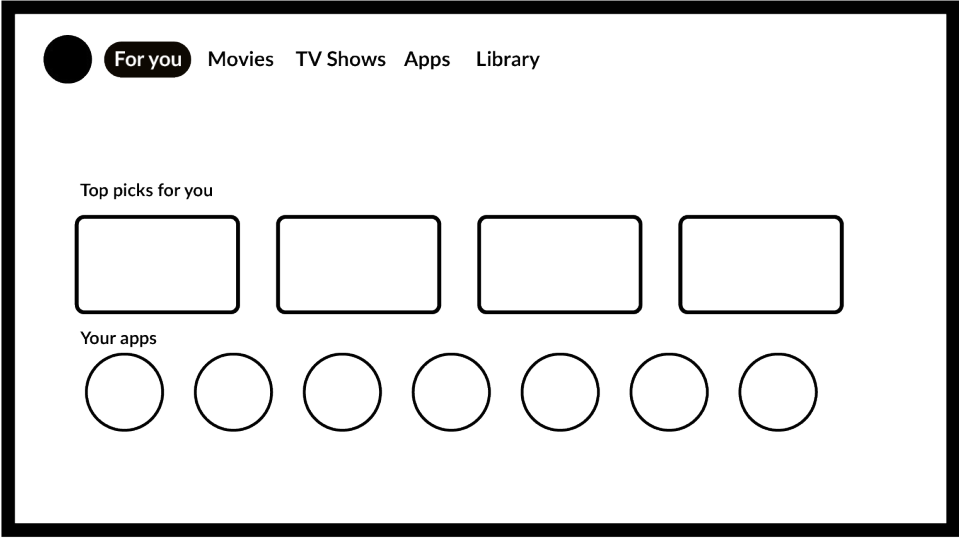


5.0 SETTINGS

 Press the Settings button  to open the Launcher Settings menu, then press OK to access the Settings menu. The Settings menu allows you to check device information, add/remove accounts, and make changes to system settings. Settings made in the Installation steps earlier, can be adapted here as well.

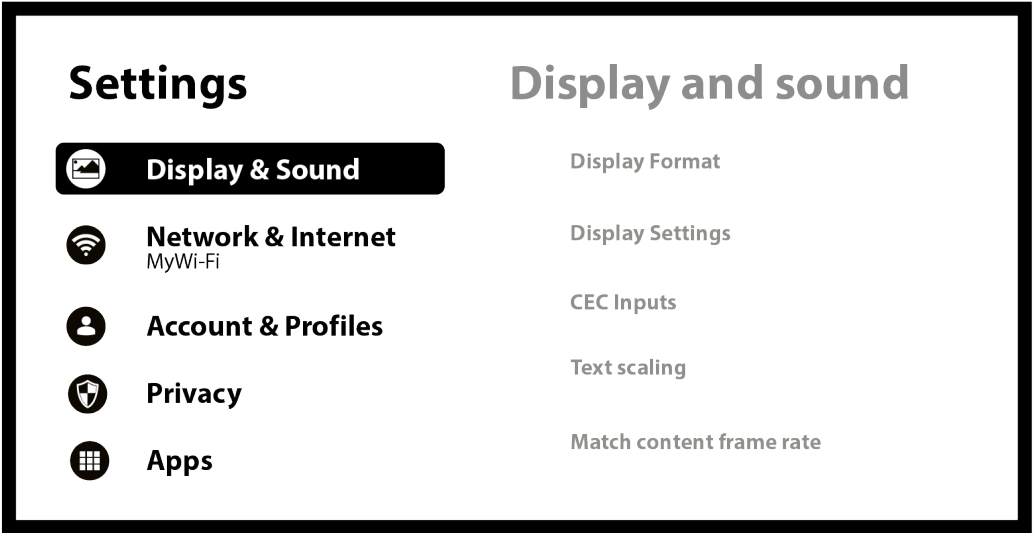


Wi-Fi Settings

 In the Network and Internet Settings, select and enable Wi-Fi to connect to the network. Once the device scans for nearby Wi-Fi networks, choose the desired network, enter the password if prompted, and select Connect.

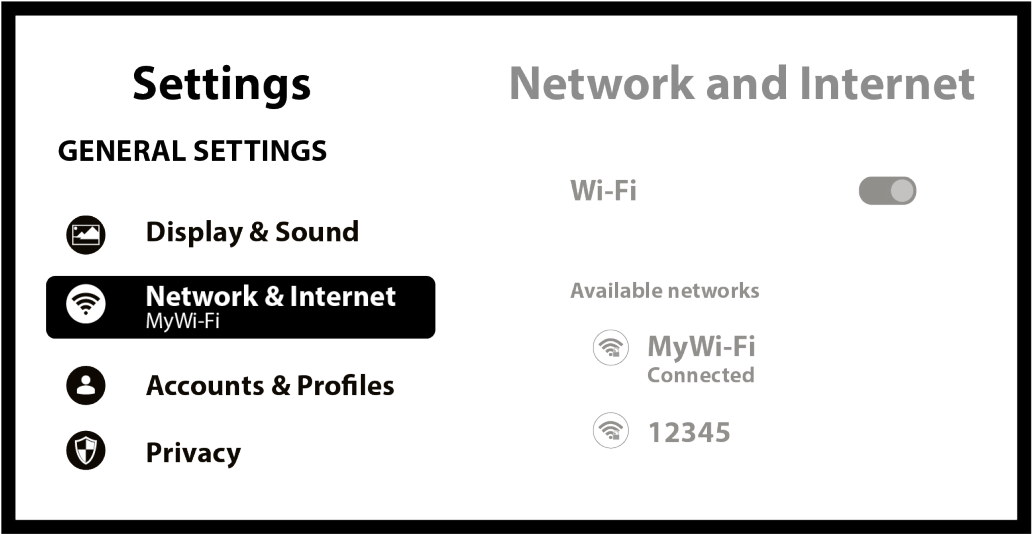




Language Settings

 Go to Settings > System, then select Language to change the language previously set.

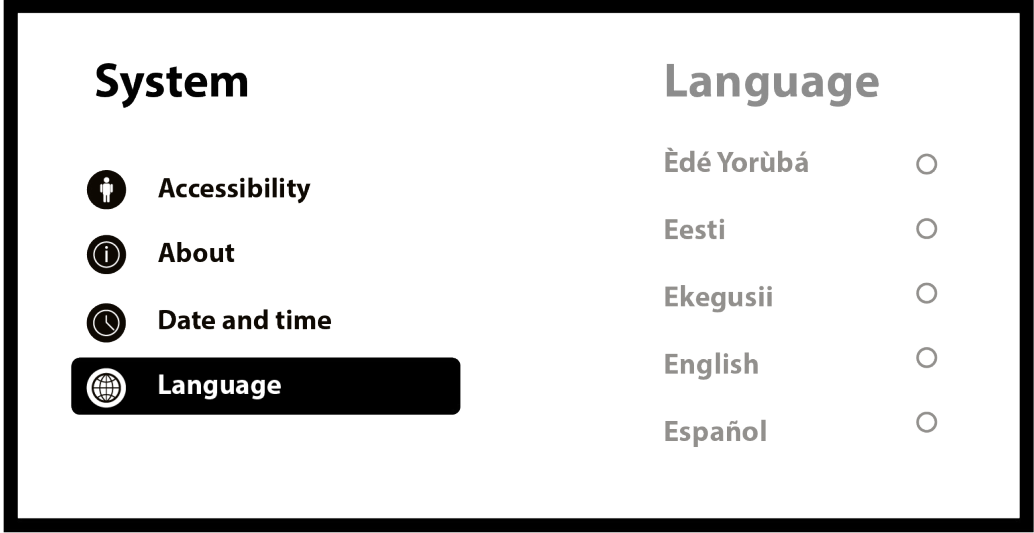

Bluetooth Pairing

   Select Bluetooth in the Launcher Menu, then click "Pair accessory" and choose the device you want to connect. Ensure the device is in pairing mode.

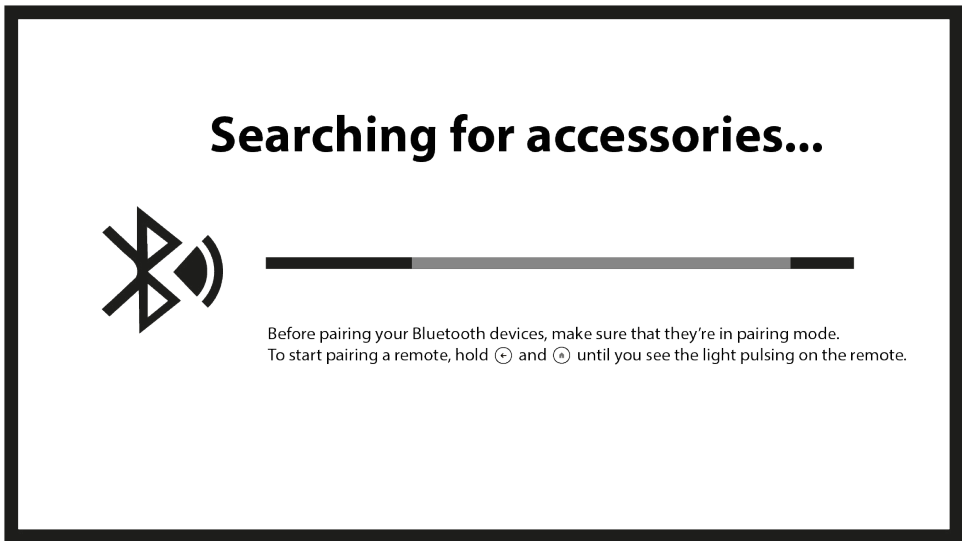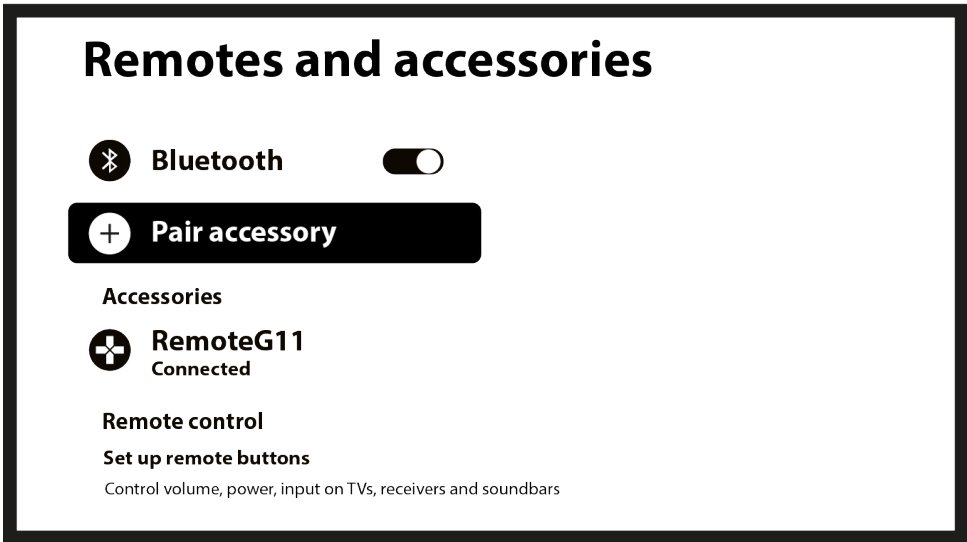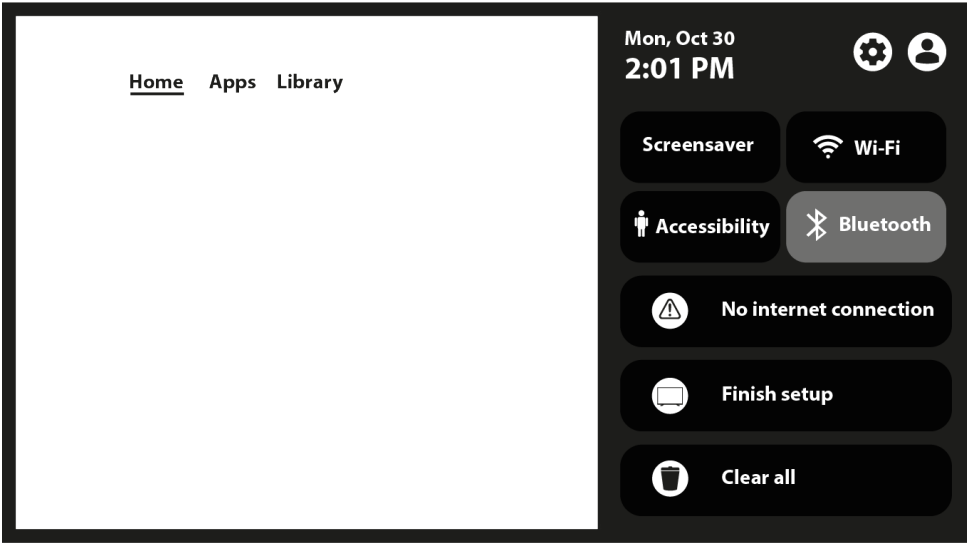

Remove a Bluetooth Device

 
Select Bluetooth from the Menu Launcher. In the Remote & Accessories menu, choose the Bluetooth device you want to remove and click “Forget” to disconnect it.

 


NOTE: The TV stick can only be controlled with the provided and connected remote, if you remove (“forget”) it here, the unit cannot be controlled anymore before you pair it again.

Adding Accounts


For new Google users: create a new Google account directly on your TV for easier login and enhanced payment security. To add or switch accounts, go to Accounts and sign-in in the Settings Menu.

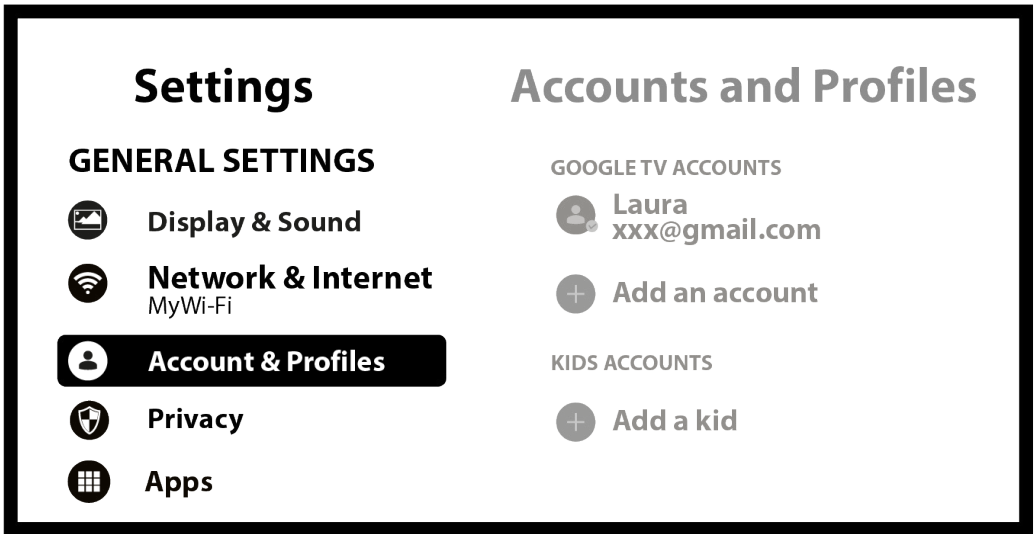

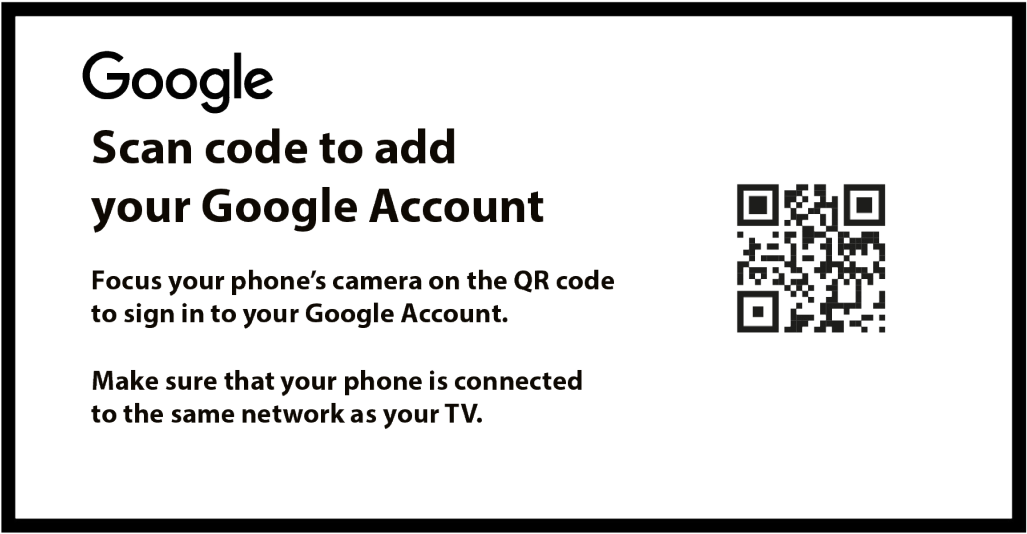

Factory Reset

 Under Settings, select System > About > Reset
Click Factory data reset to erase everything. Once this option has been selected, all manually installed apps and user data information will be deleted. The unit will default to the first page of the initial setup steps.

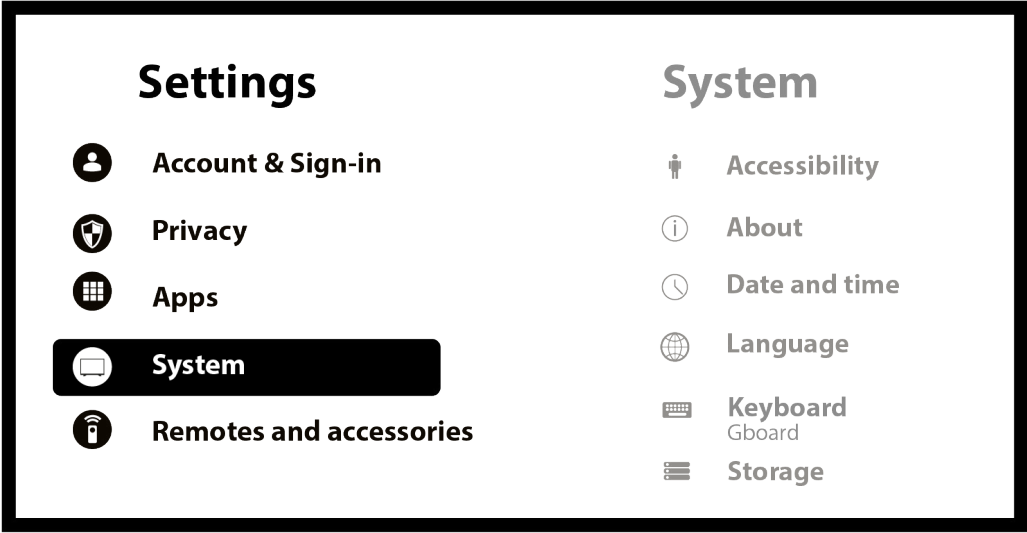

System

 Accessibility

 **About**

 Date and time

 Language

 **Keyboard**
Gboard

 Storage

About

System update

Device name
FHD Google TV Stick

Reset

Status
Network, serial numbers
and other information

Reset

Factory reset



Factory reset

 
This will restore your device to default settings and erase all data, accounts, files and downloaded apps.

Cancel

Factory reset


About


You can check information about your device by clicking on ABOUT in the Settings Menu. This panel will show you the model of your device, version, firmware version and more. You can also update your system by clicking on System update from this menu.

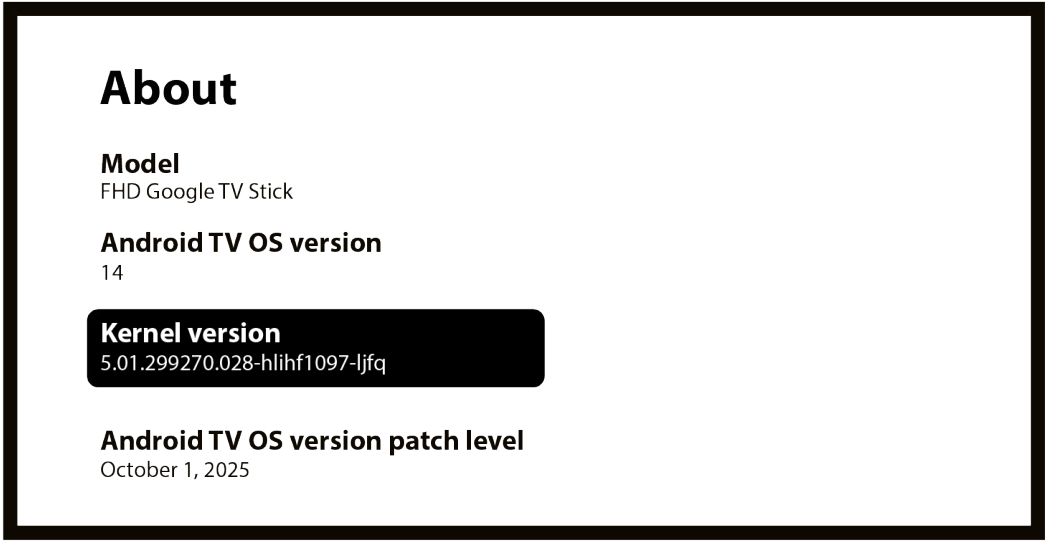

6.0 DOWNLOADING APPS

  Apps are available for download from the Google Play Store. On the home screen, select "Apps" to explore and download your desired applications. Or you can select in this application *Search* and type the name or press the microphone and say the name of the app you want to install. If the app appears on the screen, select *Install* to begin the installation of the app.

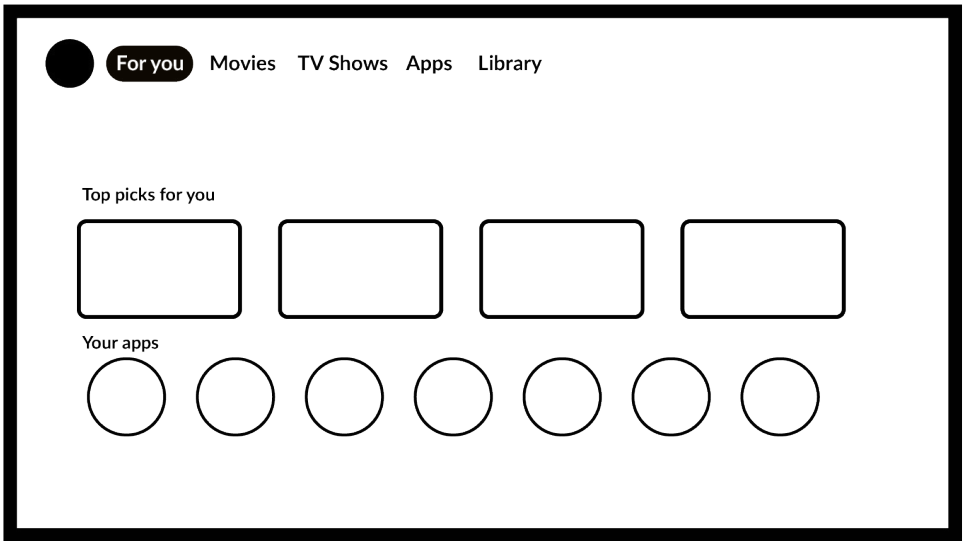

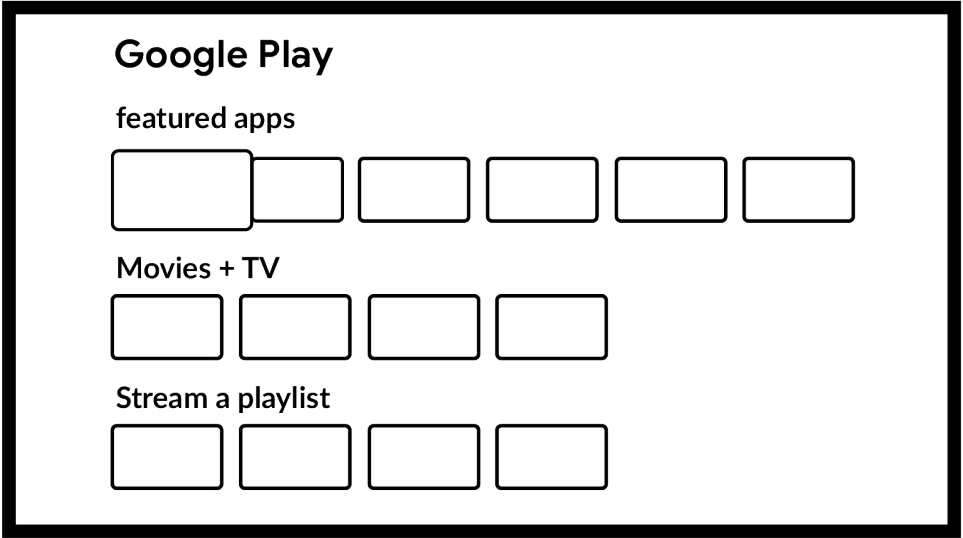

7.0 DEVICES PREFERENCE

This is the main menu to select to set up or change settings such as: Time & date, Language, Keyboard, Display & sound, Screen saver, Chromecast functions, Energy saver and location.

Date & Time

Select the time zone where you are using this device to match the local time.
You can also choose the time format: 12-hour or 24-hour clock.

Language Settings

Under *Settings > System* select *Language* to change the language previously set.

Keyboard

If you like to use other types of keyboard layout, select here the type you like.

Display & sound

Under this menu select:
Display Format > Screen resolution to change Resolution, Color space and HDR policy.
Display setting > Switch On or Off AIPQ (AI supported Picture Quality), change peak luminance
CEC input > CEC switch > to let TV control connected device, change Advanced CEC settings
Audio > Select off or on the click sound when you press button on remote.

The advanced sound settings option allows you to select the audio format provided by the chosen application. You can either keep it set to *Auto* or select *OFF* to use only the PCM (stereo) audio format.

Google assistance

Use the microphone on the remote for Google-Assistant-related functions, like searching for apps, videos or even ask questions.

8.0 GOOGLE CAST

This device has Google Cast built-in which allows you to cast content from an Android phone or tablet to your TV screen. Simply to open a Google cast compatible app on your mobile device. Navigate to the screen you wish to cast. To cast from Google Chrome, click the Settings icon : located on the top right corner of the browser on your phone or tablet, then click "Cast". Select the screen to which you want to cast the content. To stop casting, just select again this icon and select "Stop casting".

Cast

Under this menu item, select the Notification settings you prefer. Select options: *Always, while casting* or *Never*.

Ambient Screen saver

Select here selected time that screensaver needs to start when there is no activity.

Power& Energy saver

Select here selected time to turn off the display screen when there is no activity at all.

Default is set to 3 hours. Options: 15min, 30min, 1, 3, 4, 8, 12, 24 hours or never.

Location

Google uses your location to enhance performance and improve user experience while using apps.

Select the *Location Status* to activate or turn *Off*.

9.0 REMOTE & ACCESSORIES

This menu allows you to add new Bluetooth devices. Like remote, keyboard, speakers.

Bluetooth Pairing

Select *Add accessories* and press *OK* on the remote to start searching for other Bluetooth devices. If any devices are found, they will appear on the right side of the menu. Select the device you want to pair and press *OK* again. In some cases, you may need to enter a PIN code to complete the pairing process. Follow the instructions on screen in this case.

Remove a Bluetooth Device

Select the Bluetooth device you want to remove from the access list under the *Remote & Pairing* menu.

Press *OK* on the selected device to open options to Remove (Forget, Unpair) or Rename the device.

The battery level of the selected remote will be displayed.

Setup remote buttons

To control volume, power, input on TVs, receivers and soundbars. Select which device and which setting you want to control by CEC with the TV stick remote control.

 
Control of volume through CEC function

This screen allows you to set up volume control for other connected devices, such as your TV, soundbar, or amplifier, using this Android remote. The control is sent via the HDMI port using the CEC protocol. To use this function, ensure the CEC function is enabled on the connected device.

10.0 ABOUT

About

You can check information about your device by clicking on *About* under *SettingsDevice Preferences* Menu. This screen will show you the model of your device, version, firmware version and more. You can also update your system by clicking on *System update* from this menu.

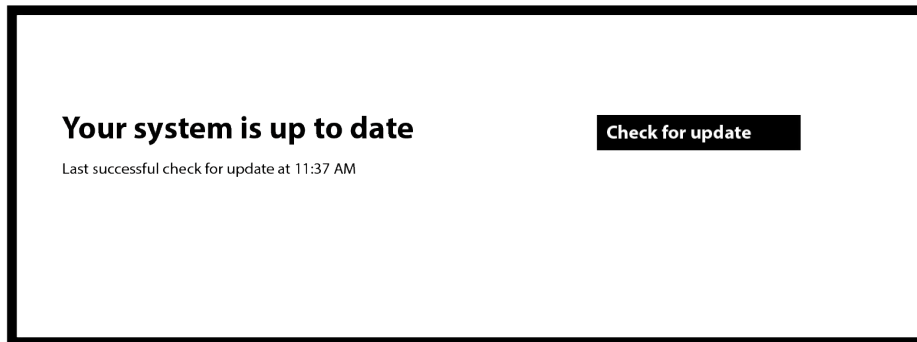

Factory reset

If the Android stick reacts strangely, even after checking all settings or if you want to remove all accounts and apps and restore the device to its original state, select *Factory reset* to reset or restore.

Under *Settings* select *Device PreferencesAboutFactory reset*, Press *OK* and confirm *Factory data reset* to erase everything.

Once this option has been selected, all manually installed apps and user data will be permanently deleted.

NOTE: Account(s) will also be deleted.

11.0 GOOGLE ASSISTANT

NOTE: To be able to use Google Assistant on your remote, you must first pair your Bluetooth Remote to your TV Stick.

Say it to Play it.

Ask it to play your favorite show, video, or music. Or find the latest blockbuster to enjoy.

Movies & TV shows:

Play Squid Game on Netflix. Video clips: Play cat videos. Apps: Open YouTube. Search: Search for sitcoms.

Info: Tell me about the new Gladiator movie.

Control

Playback: Pause. Stop. Resume Volume: Louder. Softer. Power: Turn off.

Play music, news, or podcasts

Music: Play music by Harry Styles. (Learn how to choose your music service provider.) News: Play the news. What's the latest news from BBC?

Ask Google

What is the weather like in Paris? Sports: How did the Patriots do? When is the next Warriors game? Calculations: What's 20% of 80? Dictionary: What does "ludic" mean?

Find answers: How far away is the moon? How do you remove stains in a rug? Unit conversions: How many teaspoons in a cup?

Speak into the microphone of your Voice Search remote.

Learn more about the Google Assistant on assistant.google.com or say "What can you do?" Just ask question like: "How is the weather in Paris?"

To get started, press the Google Assistant button on your remote.

12.0 SIMPLE TROUBLESHOOTING

Issue	Possible Reason	Solution
No LED of menu display after power on	The power adapter is not properly connected	Make Sure the device is connected to the power
No Sound	The Tv is on Mute or volume is low. The device is on Mute or the volume is too low.	Press the 4* button to restore the sound and increase the volume.
Failed to connect to network	Wi-Fi is turned off or the signal is too weak.	Restart the Wi-Fi or adjust the position of the device closer to the router.
Remote Control Failure Not possible to use and control.	Lost pairing to TV stick Remote control batteries are low in power. Remote is broken	Call Bluetooth Pairing to pair again. Follow Remove power, Insert power wait until "Google LOGO" appears on screen. Press on remote ← & ↵ for 3 seconds until LED is blinking, wait until pair screen appears. Now it will pair. If paired, LED on remote will light up Green. Replace batteries or send the device to the local maintenance service station for checking.
No Picture on Screen	Wrong TV HDMI input.	Make sure that correct HDMI is selected as your TV input
Voice search on remote is not working	Remote is not paired to the Google TV Stick	See the Pairing Bluetooth Device section in this guide
No Audio	Audio Settings not configured correctly for your TV	Settings>Display & Sound >Advanced sound settings

13.0 TECHNICAL SPECIFICATIONS

Video decoder

Aspect ratio: 4:3 and 16:9 aspect ratio
 Video resolution: 480i, 480p, 576i, 576p, 720p, 1080i, 1080p24, 1080p30, 1080p60 FHD
 Video format: HEVC H.265, MPEG-4, MP@ML, MP@HL profiles, AV1, VC-1/VP8/VP9, HDR10, HDR10+, HLG, AISR

Audio decoder

Audio decoding: 32KHz to 192KHz sample rates
 MPEG Audio Layers 1, 2 and 3

Audi

System & Memory

Android Version: Android™ 14 for TV
 Chipset: Realtek RTD1332 ARM Cortex-A55
 24000 DMIPS Quad-Core @ 0,6/1,4 GHz
 ARM Mali-G57 MC1
 SDRAM: DDR4: 1 GB
 Flash: eMMC: 8 GB

Connectors

HDMI
 USB-C port

General data

Wi-Fi:	IEEE 802.11b/g/n, 2.4 GHz IEEE 802.11a/n/ac, 5 GHz
Bluetooth:	5
HDMI	HDMI 1.4 with CEC
Power supply:	AC 100–240 V AC ~ 50/60 Hz
Input voltage:	DC 5 V, 1 A
Power consumption working:	3.8 W
Operating temperature range:	0 ~ +40 °C
Storage temperature:	-10 ~ +70 °C
Dimensions (W x D x H) in mm:	90 x 30 x 15
Weight:	35 g

14.0 ACCESSIBILITY COMPATIBILITY STATEMENT

This product adheres to universal design principles, aiming to provide accessible and stable user experiences for individuals with disabilities. This chapter details the scope of accessibility compatibility adaptations, technical basis, and usage guidelines to assist users with diverse disabilities in quickly determining the compatibility between the product and their assistive devices.

1. Compliance with accessibility standards

1. EU Standard: Adheres to the core principles of EU Directive 2019/882 — perceptible, operable, understandable, and robust, in compliance with EN 301 549 accessibility technical requirements.

2. Platform-specific standards:

- a) Windows version: Compatible with Microsoft Accessibility Technical Specifications;
- b) Mobile devices (Android/iOS): Complies with the system accessibility service interface specifications.
- c) Web version: Complies with ARIA 1.2 accessibility standards for rich internet applications.

2. Accessibility Compatibility Statement

Through targeted design, this product ensures convenient operation for users with diverse disabilities and varying assistive device usage habits. The specific details are as follows:

Compatibility type	Product implementation method (example)
Compatibility with auxiliary devices	1. Equipped with reserved USB and Bluetooth ports for connecting various screen readers (e.g., Braille readers); 2. Equipped with a Bluetooth interface for external devices such as headphones; 3. Compatible with adaptive keyboards, eliminating reliance on precise manual operations
Compatibility of accessibility tools across brands	1. Screen reader: Compatible with mainstream Android tools including TalkBack (all versions) and iOS VoiceOver, enabling precise reading of interface elements. 2. Input devices: Supports adaptive keyboards from brands like Logitech, Microsoft, and Razer without requiring additional driver installation. 3. Compatible with certified Bluetooth earbuds including Apple AirPods, Samsung Galaxy Buds, and Sony WH-1000XM5, featuring automatic audio synchronization after pairing with zero latency and noise interference.
Compatible operations	1. Support shortcut key operations 2. Supports high contrast mode

TalkBack Screen Reader Function

This function can read interface elements (menus, buttons, prompt messages, etc.) in real time, assisting visually impaired users to operate the device independently.

Operation Method:

- 1) Press the “Home key” on the remote control to access the main interface navigation.
- 2) Use the direction keys to select “ Settings” and press the Confirm key.
- 3) Navigate to and enter the “Accessibility” option.

4) Select “TalkBack” and press the Confirm key to enable it.5) Enter “TalkBack Settings” to adjust the voice volume and speaking rate to meet personalized usage needs.o Power key (round raised)

- Confirm key (square concave)
- Return key (triangular raised)

In addition, you can also press the down directional button and the back button on the remote control at the same time to enable the talkback function.

15.0 PRIVACY AND SECURITY

Some network ports (TCP) on the LEAP-UNA+ are open by default and may transmit sensitive information. For your security and to comply with Network-Security RED certification, please be aware of these ports. The following ports are affected:

	Port	Protocol
	6465	tcp
	6466	tcp
	6467	tcp
	8008	tcp
	8009	tcp
	8443	tcp
	9000	tcp
	36703	tcp
	44333	tcp

Descriptions of the purposes of these ports are provided below.

1. Google TV Remote Service: com.google.android.tv.remote.service
TCP port 6466/6467: Enables remote control of Google Tv applications (e.g., Google Tv Remote) on smartphones or other devices, supporting navigation, play/pause, and volume adjustment.
2. Google Cast Service: com.google.android.apps.mediashell
TCP port 8008/8009/8443/9000: Associated with Google Cast functionality.
3. Two TCP dynamic ports (port 36703/44333) is the test port for Google Netlink.

It is recommended to limit access to these ports and check the active services to reduce any risk of personal data exposure.

Data Protection:

Please be aware that STRONG, its manufacturing partners, the application providers and the providers of the services may collect and use technical data and related information, including but not limited to technical information about this device, system and application software and peripherals. STRONG, its manufacturing partners, the application providers and the providers of the services may use such information to improve its products or to provide services or technologies to you, as long as it is in a form that does not personally identify you.

Additionally, please keep in mind that some services provided–already on the device or installed by you–may request a registration for which you have to provide personal data.

Besides that, please be aware that some services which are not pre-installed but can be installed may collect personal data even without providing additional warnings and that STRONG cannot be held liable for a possible breach of data protection by services not pre-installed.

* Availability of apps depending on the country. STRONG cannot be held liable for services by third parties. Offers by third parties may be changed or removed at any time, may not be available in all regions and may require a separate subscription.