

DIGITAL HD CABLE RECEIVER

User Manual

SRT3034



Picture of the product

Contents

1. Safety information	3
2. Package contents	4
3. Product overview	5
3.1 Front panel	5
3.2 Back panel	5
3.3 Remote control	6
3.4 Inserting the batteries	7
4. Connection	8
5. First installation	9
6. Everyday use	11
6.1 Changing channels	11
6.2 Volume and sound	11
6.3 Programme information, subtitles and teletext	11
6.4 Favourites	11
7. Main menu	12
8. Channel menu	13
8.1 EPG	13
8.2 Channel Edit	14
8.3 Channel Information	15
8.4 Fav List	16
9. Installation menu	17
9.1 Auto Search	17
9.2 Manual Search	18
9.3 Range Search	19
9.4 Delete All	20
9.5 LCN	20
10. Media menu	22
10.1 USB storage devices	22
10.2 Music	22
10.3 Picture and Movie	23
10.4 Recording and time shift	24
10.5 Record Manager	24
10.6 HDD Information	25
10.7 Storage Format	26
10.8 DVR Configuration	27
11. System menu	29
11.1 Language	29
11.2 AV Setting	29
11.3 Local Time Setting	30
11.4 Book Manage (timers)	31
11.5 Parental Lock	33
11.6 OSD Setting	34
12. Tools menu	36
12.1 System Information	36
12.2 USB Upgrade	36
12.3 USB Backup	37
12.4 Auto standby	38
12.5 Factory Setting	39
13. Troubleshooting	41
14. Technical specifications	42
15. Support and legal notice	43
15.1 Support	43
15.2 Legal notice	43

1. Safety information

Read these instructions carefully before installing and using the receiver, and keep them for future reference.

- Use the receiver indoors only, in a dry and well-ventilated place. Do not expose it to water, dripping or splashing, or place objects filled with liquid on it.
- Operate the receiver at a temperature between 0 °C and +40 °C, with a relative humidity of 10–95 % (non-condensing).
- Use only the supplied power adapter (12 V DC, 1 A), connected to a mains socket supplying 100–240 V AC, 50/60 Hz.
- Keep the ventilation openings clear. Do not place the receiver on soft furnishings, in a closed cabinet or near a heat source.
- Unplug the power adapter during thunderstorms or when the receiver is not used for a long period.
- Do not open the receiver. There are no user-serviceable parts inside. Contact STRONG support if the receiver is damaged.
- Unplug the receiver before cleaning it, and clean it only with a soft, dry cloth.
- Do not dispose of the receiver or the batteries with household waste. Take them to a collection point for electrical equipment and batteries.

2. Package contents

- 1 × Digital HD cable receiver SRT3034
- 1 × Remote control
- 2 × AAA batteries
- 1 × Installation instructions
- 1 × Safety instructions

The power adapter (12 V DC, 1 A) connects to the **12 V** power input on the back panel.



Fig. 1 — Package contents

3. Product overview

3.1 Front panel



Fig. 2 — Product overview > Front panel

Element	Function
4-digit LED display	Shows the channel number and the receiver status.
▲ / ▼ buttons	Switch to the next or previous channel.
Standby/On button	Switches the receiver on or to standby.
USB port	Connects a USB storage device (5 V, 500 mA max.) for media playback, recording, software upgrade and backup.

3.2 Back panel



Fig. 3 — Product overview > Back panel

Connector	Function
CABLE IN	Connects the cable TV signal from your wall outlet or cable provider.
CABLE OUT	Passes the cable signal through to another device (loop through).
S/PDIF (coaxial)	Connects a digital audio system, such as an amplifier or a sound bar.
HDMI	Connects your TV for HD picture and sound.
TV SCART	Connects an older TV without HDMI input.
12 V	Connects the power adapter (12 V DC, 1 A).

3.3 Remote control



Fig. 4 — Product overview > Remote control

Key	Function
Power (red)	Switches the receiver on or to standby.
Mute	Switches the sound off or on.
Play/Pause, Stop (■), Record (●)	Play or pause, stop and record.
INFO	Displays information about the current programme. In some menus, used for the function shown on screen (for example Move in the channel list).
TV/R (red)	Switches between TV and radio channels. In menus, performs the red function shown on screen.
MEDIA (green)	Opens the media functions. In menus, performs the green function shown on screen.
AUDIO (yellow)	Selects the audio track. In menus, performs the yellow function shown on screen.
Blue	In menus, performs the blue function shown on screen.

Key	Function
EPG	Opens the electronic programme guide.
BACK	Returns to the previous screen.
▲ ▼ ◀ ▶ / OK	Navigate in menus and confirm a selection. In viewing mode, OK opens the channel list.
MENU / EXIT	Opens the main menu / exits the current menu.
◀◀ / ▶▶	Fast rewind / fast forward during playback.
◀◀ / ▶▶	Previous / next file during playback.
USB	Opens the content of the connected USB device.
FAV	Opens the favourite lists.
0–9	Enter a channel number or digits in menus.
TTX	Opens teletext, if broadcast.
SUB	Selects subtitles, if broadcast.

3.4 Inserting the batteries

Open the battery compartment on the back of the remote control, insert the two AAA batteries supplied, respecting the + and – markings, then close the compartment.

4. Connection

Important: Connect all the cables before plugging the power adapter into the mains socket.

1. Connect the coaxial cable from your cable wall outlet to the **CABLE IN** connector.
2. Connect the receiver to your TV with an HDMI cable (recommended) on the **HDMI** connector, or with a SCART cable on the **TV SCART** connector.
3. Optional: connect a digital audio system to the **S/PDIF** connector with a coaxial audio cable.
4. Optional: connect another receiver or a TV to the **CABLE OUT** connector to pass the cable signal through.
5. Connect the power adapter to the **12 V** input, then plug it into a mains socket.
6. Switch on your TV and select the input (HDMI or SCART) to which the receiver is connected.

5. First installation

When you switch on the receiver for the first time, the **Installation** screen appears. Use ▲ ▼ to select a setting and ◀ ▶ to change its value.

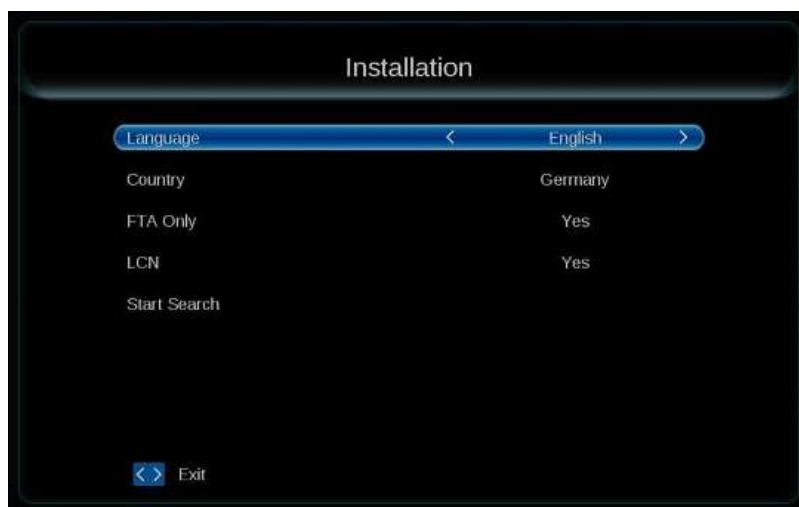


Fig. 5 — First installation > First installation

Setting	Description
Language	Language of the menus.
Country	Your country. This setting defines the default search parameters and time zone.
FTA Only	Yes: stores free-to-air channels only. No: also stores scrambled channels.
LCN	Yes: sorts the channels according to the numbering provided by your cable operator (Logical Channel Numbering). No: numbers the channels in the order in which they are found.
Start Search	Starts the channel search.

When the settings are correct, select **Start Search** and press **OK**.



Fig. 6 — First installation > First installation

The **Auto Search** screen shows the progress of the search:

- The **TV** and **Radio** windows list the channels found, with the number of channels found in brackets.
- The list below shows the frequencies being scanned, with their modulation and symbol rate.
- The progress bar and the percentage show the progress of the search.



Fig. 7 — First installation > First installation

When the search is complete, the channels are saved and the receiver switches to the first channel found.

Note: If no channels are found, check the cable connection to **CABLE IN**, then start a new search from **Installation > Auto Search** or **Manual Search** (section 9).

6. Everyday use

6.1 Changing channels

- Press **▲ ▼** on the remote control or on the front panel, or enter the channel number with the **0–9** keys.
- Press **OK** to open the channel list, select a channel and press **OK**.
- Press **TV/R** to switch between TV and radio channels.

6.2 Volume and sound

- Press **◀ ▶** in viewing mode to adjust the volume. The volume level is displayed on screen.
- Press **Mute** to switch the sound off or on.
- Press **AUDIO** to select another audio track, if broadcast.

6.3 Programme information, subtitles and teletext

- Press **INFO** to display information about the current programme.
- Press **SUB** to select subtitles and **TTX** to open teletext, if they are broadcast.

6.4 Favourites

Press **FAV** to open your favourite lists. To add channels to a favourite list, see section 8.2.

7. Main menu

Press **MENU** to open the main menu. It contains five menus, shown as icons at the top of the screen, and the items of the selected menu below.



Fig. 8 — Main menu > Favourites

Key	Function
◀ ▶	Select a menu (Channel, Installation, Media, System, Tools).
▲ ▼	Select an item of the menu.
OK	Open the selected item.
BACK / EXIT	Return to the previous screen / leave the menu.

Menu	Content
Channel	EPG, channel list editing, channel information, favourite lists.
Installation	Automatic, manual and range channel search, channel deletion, LCN.
Media	Music, pictures, movies, recordings, USB storage information and formatting, recording settings.
System	Language, picture and sound, local time, timers, parental lock, on-screen display.
Tools	System information, software upgrade, backup, auto standby, factory setting.

Note: The menu icons scroll: the selected menu is always shown in the centre. Use the menu names to find your way.

8. Channel menu

8.1 EPG

Path: MENU > Channel > EPG



Fig. 9 — Channel menu > EPG

The electronic programme guide shows the programmes of the next 7 days for each channel, if the information is broadcast by your operator. The current date and time are displayed at the top right.



Fig. 10 — Channel menu > EPG

- **Left window:** list of TV or radio channels.
- **Day tabs:** the seven days covered by the guide.
- **Right window:** programmes of the selected channel and day. **Receiving data...** is displayed while the information is being loaded.

Key	Function
▲ ▼	Select a channel or a programme.
◀ ▶	Select a day.
Yellow (Switch Window)	Switch between the channel list and the programme window.
Blue (Book Manage)	Schedule the selected programme (section 11.4).
TV/R (TV/Radio)	Switch between TV and radio channels.
OK (Full Screen)	Watch the selected channel in full screen.

8.2 Channel Edit

Path: MENU > Channel > Channel Edit



Fig. 11 — Channel menu > Channel Edit

The **TV Channel List** shows the number and name of each channel. The icons in the header row show the status of each channel. **Current group** shows the group displayed.



Fig. 12 — Channel menu > Channel Edit

Icon	Meaning
\$	Scrambled channel.
Heart	Channel added to a favourite list.
Up/down arrows	Channel being moved.
Lock	Locked channel (password required).
×	Channel marked for deletion.

Key	Function
Red (Fav)	Adds the selected channel to a favourite list.
Green (Lock)	Locks or unlocks the selected channel.
Blue (Sort)	Sorts the channel list.
OK (Select)	Selects the channel.
INFO (Move)	Moves the selected channel. Select the new position with ▲ ▼ and press OK.

Key	Function
1 (Delete)	Marks the selected channel for deletion.
2 (Group)	Changes the group displayed.
3 (Delete All)	Deletes all channels of the list.

When you exit the list, confirm to save your changes.

8.3 Channel Information

Path: MENU > Channel > Channel Information



Fig. 13 — Channel menu > Channel Information

This screen shows the technical data and the signal quality of the current channel. It is useful when contacting support.



Fig. 14 — Channel menu > Channel Information

Field	Description
Type / NAME	Type (TV or radio) and name of the channel.
Freq / Symbol / QAM	Frequency, symbol rate and modulation of the channel.
LCN	Logical channel number provided by the operator.
SERVICE ID / TS ID	Identifiers of the channel and of its transport stream.
Video PID / Audio PID / PCR PID / Tel PID	Identifiers of the video, audio, clock and teletext streams.
RF Level	Signal strength, in dBμV.

Field	Description
BER	Bit error rate. The lower the value, the better the signal.
C/N	Carrier-to-noise ratio, in dB. The higher the value, the better the signal.

8.4 Fav List

Path: MENU > Channel > Fav List



Fig. 15 — Channel menu > Fav List

You can use up to 8 favourite lists (Fav1 to Fav8). To rename a list, select it, press the **red** key (Rename), enter the new name and confirm.



Fig. 16 — Channel menu > Fav List

9. Installation menu

9.1 Auto Search

Path: MENU > Installation > Auto Search



Fig. 17 — Installation menu > Auto Search

Auto Search scans the whole cable frequency range and stores all channels found. Before the search starts, a message warns that the previous channel list will be deleted. Select **OK** to continue or **Exit** to cancel.



Fig. 18 — Installation menu > Auto Search

During the search, the TV and radio channels found are listed with their number in brackets, together with the scanned frequencies and a progress bar.

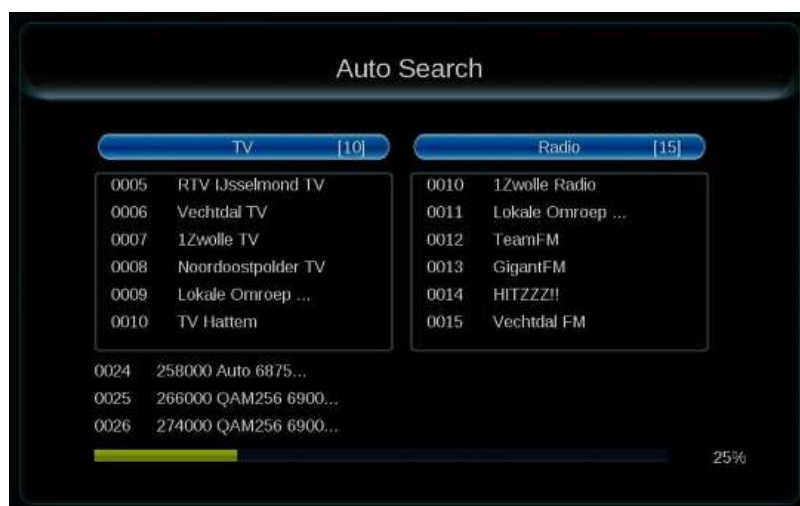


Fig. 19 — Installation menu > Auto Search

9.2 Manual Search

Path: MENU > Installation > Manual Search



Fig. 20 — Installation menu > Manual Search

Manual Search scans a single frequency. Use it if you know the frequency of a channel provided by your cable operator.



Fig. 21 — Installation menu > Manual Search

Setting	Description
Frequency	Frequency to scan, in MHz. Enter it with the 0–9 keys.

Setting	Description
Symbol Rate	Symbol rate in kbaud. It is set automatically when Modulation is Auto.
Modulation	Auto or a fixed QAM value (16, 64, 128 or 256 QAM).
NIT Search	Yes : uses the network information table to find the other frequencies of the network.
FTA Only	Yes : stores free-to-air channels only.
Start Search	Press OK to start the search.

The **RF Level**, **BER** and **C/N** bars show the quality of the signal on the selected frequency (see section 8.3).

9.3 Range Search

Path: MENU > Installation > Range Search



Fig. 22 — Installation menu > Range Search

Range Search scans all frequencies between a start and an end frequency.



Fig. 23 — Installation menu > Range Search

Setting	Description
Frequency Start / Frequency End	First and last frequency to scan, in MHz.
Symbol Rate	Symbol rate in kbaud, set automatically when Modulation is Auto.

Setting	Description
Modulation	Auto or a fixed QAM value.
FTA Only	Yes : stores free-to-air channels only.
Start Search	Press OK to start the search.

9.4 Delete All

Path: MENU > Installation > Delete All



Fig. 24 — Installation menu > Delete All

Delete All deletes all stored channels. The receiver asks for the password: enter it with the **0–9** keys. The first time you use a password-protected function, you are asked to create a password. The default password is **0000**. Press **MENU** or **EXIT** to cancel.



Fig. 25 — Installation menu > Delete All

9.5 LCN

Path: MENU > Installation > LCN



Fig. 26 — Installation menu > LCN

Press ◀ ▶ to select **Yes** (channels sorted according to the numbering of your cable operator) or **No** (channels numbered in the order in which they were found).

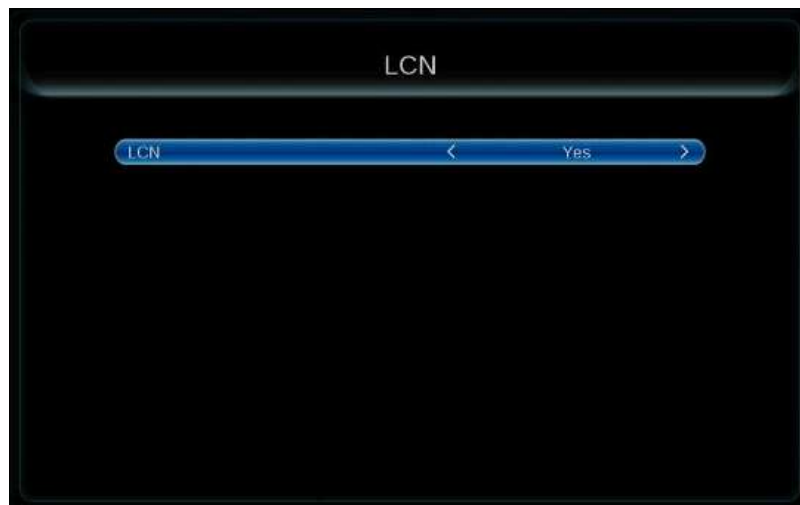


Fig. 27 — Installation menu > LCN

10. Media menu

Note: The functions of this menu require a USB storage device connected to the USB port on the front panel.

10.1 USB storage devices

Before using the media, recording and time shift functions, check that your USB device meets the following requirements.

Requirement	Details
Storage medium	USB flash drive or hard disk drive (HDD), connected to the USB 2.0 port. SSDs have not been tested. A flash drive must be reasonably fast, because it has no cache memory like a hard disk drive. A hard disk drive usually needs an external power supply.
Storage capacity	Use a device of reasonable size (for example a 128 GB flash drive). Hard disk drives of several terabytes take too long to start up and index: timer recordings may be missed because of this delay.
File system	FAT32. A device already formatted in NTFS on a computer also works.

Note: STRONG cannot test every brand, model and size of USB device. Compatibility with all devices cannot be guaranteed.

10.2 Music

Path: MENU > Media > Music



Fig. 28 — Media menu > Music

The **Music** screen shows the content of the USB device on the right and the player on the left. The partition is shown at the top of the list (for example **C:**). Select a file and press **OK** to play it. The player shows the elapsed and total time and the playback controls.



Fig. 29 — Media menu > Music

Key	Function
Red (Sort)	Sorts the files.
Green (Partition)	Selects another partition of the USB device.
Yellow (Play list)	Opens the play list.
Blue (Repeat)	Changes the repeat mode.
◀ ▶ (Volume)	Adjusts the volume.
FAV (Fav)	Adds the selected file to the play list.
Playback keys	Previous, rewind, play/pause, stop, fast forward, next.

10.3 Picture and Movie

Path: MENU > Media > Picture / Movie



Fig. 30 — Media menu > Picture and Movie



Fig. 31 — Media menu > Picture and Movie

Picture displays the photos and **Movie** plays the video files of the USB device. Browse the folders, select a file and press **OK**. Use the playback keys of the remote control (Play/Pause, ■, ◀◀, ▶▶, |◀◀, ▶▶|) to control playback, and **EXIT** to return to the list.

10.4 Recording and time shift

Connect a USB device, then press ● to record the current programme. Press ■ to stop the recording. To schedule a recording, use **Book Manage** (section 11.4).

When **Time shift** is enabled (section 10.8), press **Play/Pause** to pause live TV, then press it again to resume playback from where you paused.

10.5 Record Manager

Path: MENU > Media > Record Manager



Fig. 32 — Media menu > Record Manager

Record Manager lists your recordings, named with the channel and the date or the programme title. The preview window on the left shows the selected recording.



Fig. 33 — Media menu > Record Manager

Key	Function
Red (Rename)	Renames the recording.
Green (Lock)	Locks the recording with the password.
Blue (Delete)	Deletes the recording.
OK (Select)	Plays the recording.
Yellow (Audio)	Selects the audio track.

10.6 HDD Information

Path: MENU > Media > HDD Information



Fig. 34 — Media menu > HDD Information

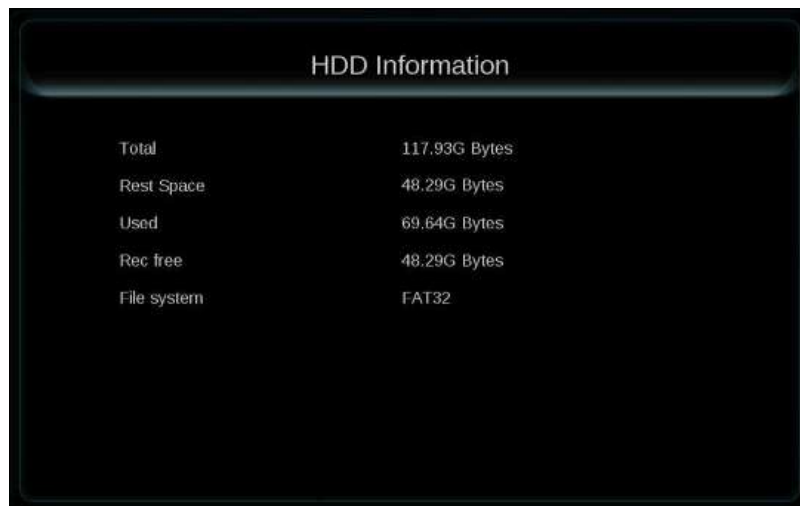


Fig. 35 — Media menu > HDD Information

Field	Description
Total	Total capacity of the USB device.
Rest Space	Free space.
Used	Used space.
Rec free	Space available for recordings.
File system	File system of the USB device (for example FAT32).

10.7 Storage Format

Path: MENU > Media > Storage Format



Fig. 36 — Media menu > Storage Format

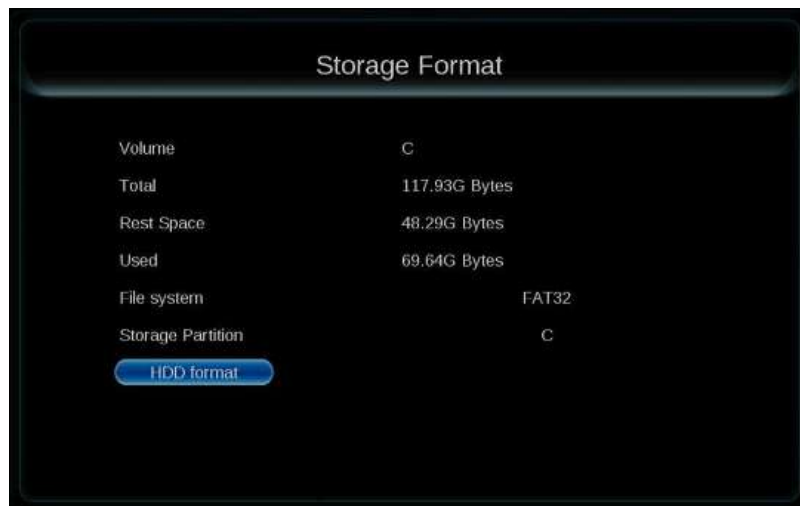


Fig. 37 — Media menu > Storage Format

Field	Description
Volume	Partition selected.
Total / Rest Space / Used	Capacity, free space and used space of the partition.
File system	File system of the partition.
Storage Partition	Partition to format.
HDD format	Press OK to format the selected partition.

Warning: Formatting erases all data on the partition, including recordings and media files. Back up your files first.

10.8 DVR Configuration

Path: MENU > Media > DVR Configuration



Fig. 38 — Media menu > DVR Configuration

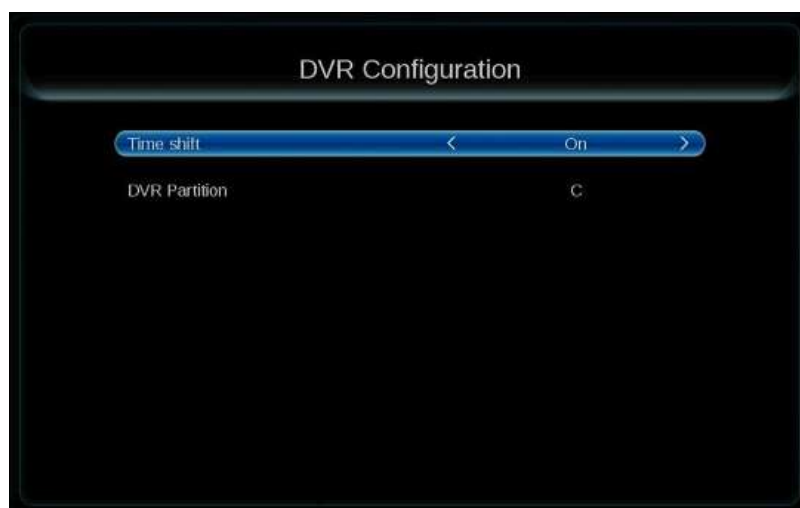


Fig. 39 — Media menu > DVR Configuration

Setting	Description
Time shift	On: allows you to pause live TV and resume it later (USB device required).
DVR Partition	Partition of the USB device used for recordings and time shift.

11. System menu

11.1 Language

Path: MENU > System > Language



Fig. 40 — System menu > Language



Fig. 41 — System menu > Language

Setting	Description
Language	Language of the menus.
First Audio	Preferred audio language.
Second Audio	Audio language used if the preferred one is not broadcast.
Subtitle Language	Preferred subtitle language.
Teletext Language	Preferred teletext language.

11.2 AV Setting

Path: MENU > System > AV Setting



Fig. 42 — System menu > AV Setting

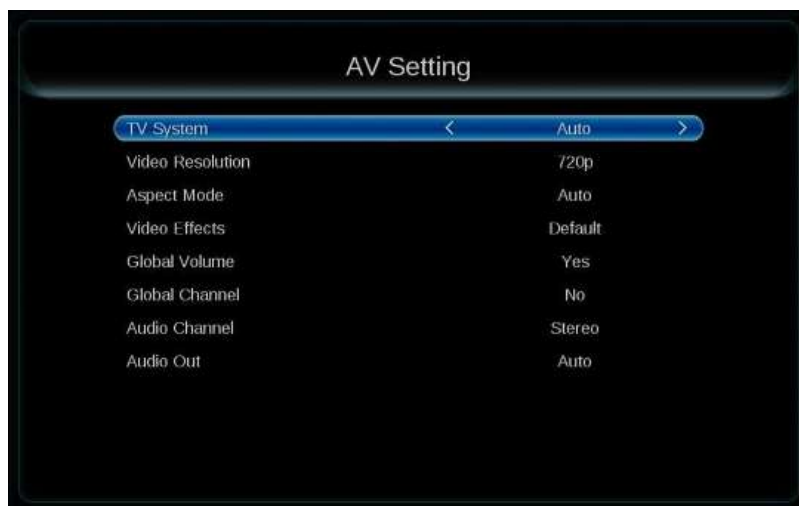


Fig. 43 — System menu > AV Setting

Setting	Description
TV System	Video standard of the output (Auto recommended).
Video Resolution	Output resolution on HDMI. Select the highest resolution supported by your TV.
Aspect Mode	Picture format (Auto recommended).
Video Effects	Video effect applied to the picture (for example Default).
Global Volume	Yes : the same volume level applies to all channels.
Global Channel	Yes / No .
Audio Channel	Audio mode (for example Stereo).
Audio Out	Digital audio output format on HDMI and S/PDIF (Auto recommended).

11.3 Local Time Setting

Path: MENU > System > Local Time Setting



Fig. 44 — System menu > Local Time Setting



Fig. 45 — System menu > Local Time Setting

Setting	Description
Country/Region	Your country or region.
GMT Usage	On: the time is set automatically from the broadcast signal. Off: you set the date and time manually.
GMT Offset	Time difference from UTC (for example UTC + 01:00).
Summer Time	On during daylight saving time.
Date / Time	Manual date and time. Available only when GMT Usage is Off.

11.4 Book Manage (timers)

Path: MENU > System > Book Manage



Fig. 46 — System menu > Book Manage (timers)

Book Manage lists the scheduled events.

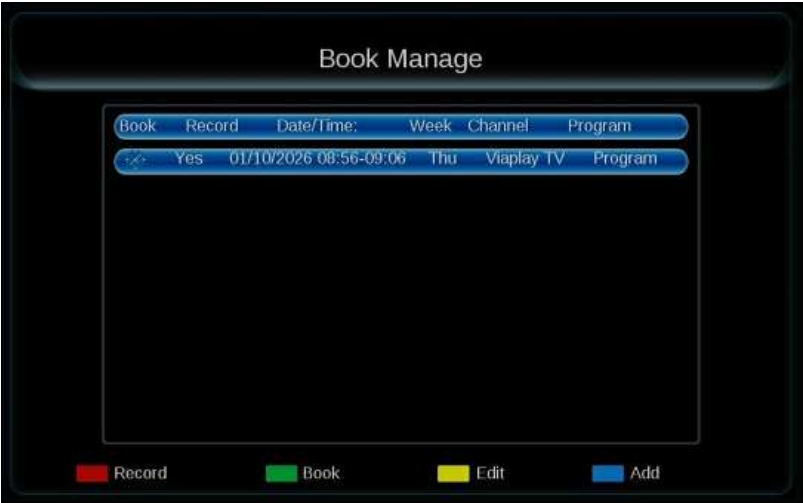


Fig. 47 — System menu > Book Manage (timers)

Column	Description
Book	Status icon of the event.
Record	Yes if the event is a recording.
Date/Time	Date, start and end time.
Week	Day of the week.
Channel / Program	Channel and programme concerned.

Key	Function
Red (Record)	Sets the selected event as a recording.
Green (Book)	Sets the selected event as a reminder (the receiver switches to the channel).
Yellow (Edit)	Edits the selected event.
Blue (Add)	Adds a new event.

When you add or edit an event, the **Timer Setting** window opens. The current time and date are shown at the top.

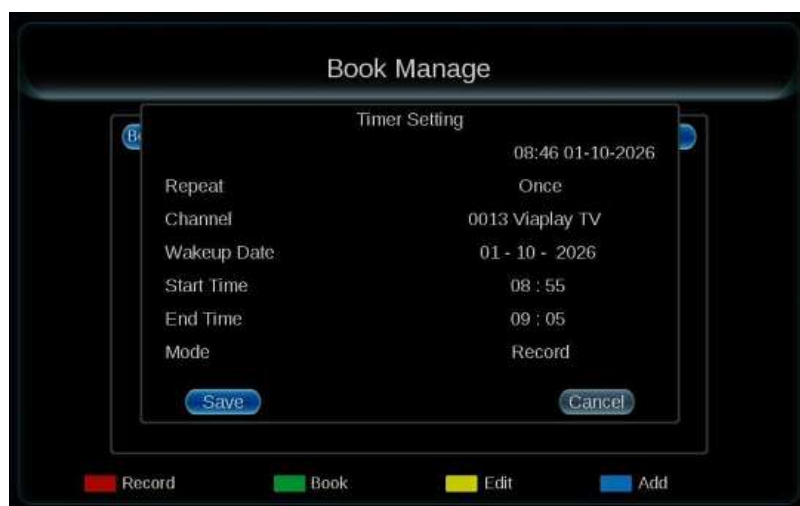


Fig. 48 — System menu > Book Manage (timers)

Setting	Description
Repeat	Frequency of the event (for example Once).
Channel	Channel to switch to or record.
Wakeup Date	Date of the event.
Start Time / End Time	Start and end time of the event.
Mode	Record: records the programme on the USB device.
Save / Cancel	Saves or cancels the event.

Note: For a recording, leave a USB device with enough free space connected. The receiver can be in standby: it wakes up at the start time.

11.5 Parental Lock

Path: MENU > System > Parental Lock



Fig. 49 — System menu > Parental Lock

The receiver asks for the password before opening this menu. The first time you use a password-protected function, you are asked to create a password. The default password is **0000**.



Fig. 50 — System menu > Parental Lock



Fig. 51 — System menu > Parental Lock

Setting	Description
Age Limit	Blocks programmes above the selected age rating. View All: no restriction.
Menu Lock	On: the menus are protected by the password.
Channel Lock	On: the channels locked in the channel list (section 8.2) require the password.
New Password / Confirm Password	Enter a new 4-digit password twice to change it.

Tip: Write down your new password and keep it in a safe place.

11.6 OSD Setting

Path: MENU > System > OSD Setting



Fig. 52 — System menu > OSD Setting

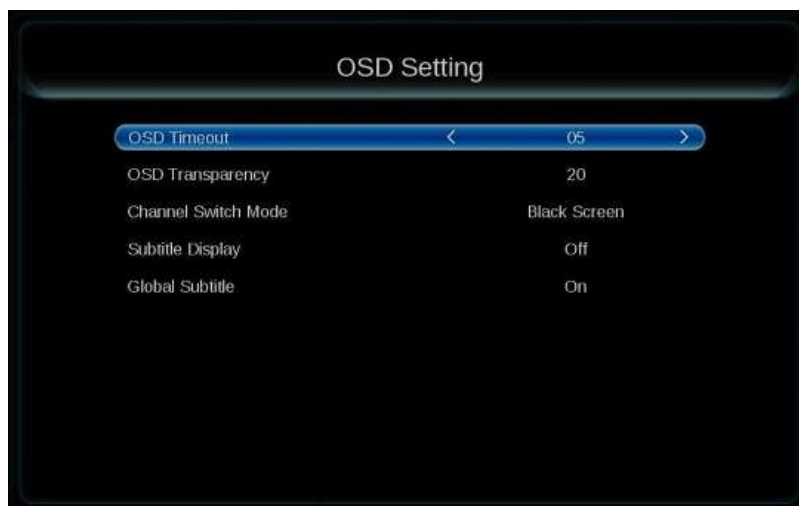


Fig. 53 — System menu > OSD Setting

Setting	Description
OSD Timeout	Display time of the information banner, in seconds.
OSD Transparency	Transparency level of the menus.
Channel Switch Mode	Picture shown while changing channels (for example Black Screen).
Subtitle Display	On: subtitles are displayed automatically, if broadcast.
Global Subtitle	On: the subtitle setting applies to all channels.

12. Tools menu

12.1 System Information

Path: MENU > Tools > System Information



Fig. 54 — Tools menu > System Information



Fig. 55 — Tools menu > System Information

Field	Description
Chip ID	Unique identifier of the receiver chip.
Software Version	Installed software version.
Hardware Version	Hardware version of the receiver.
Date/Time	Release date of the installed software.
Model	Model name (SRT3034).

Have this information ready when contacting support.

12.2 USB Upgrade

Path: MENU > Tools > USB Upgrade



Fig. 56 — Tools menu > USB Upgrade



Fig. 57 — Tools menu > USB Upgrade

Field	Description
Upgrade Mode	Part of the software to upgrade (All Code : complete software).
Upgrade File	Software file found on the USB device.
Start	Starts the upgrade.
Local Version / Bin Version	Version installed on the receiver and version of the file on the USB device.

1. Download the software file for the SRT3034 from www.strong-eu.com and copy it to the root folder of a USB device.
2. Connect the USB device to the receiver and open **USB Upgrade**.
3. Select the **Upgrade File** and check the versions displayed.
4. Select **Start** and press **OK**. The progress bar shows the progress. The receiver restarts at the end of the upgrade.

Warning: Do not switch off the receiver or remove the USB device during the upgrade. This can damage the receiver.

12.3 USB Backup

Path: MENU > Tools > USB Backup



Fig. 58 — Tools menu > USB Backup

USB Backup saves your channel list and settings (**Backup Mode: User DB**) to the connected USB device. Select **Start** and press **OK**. The progress bar shows the progress of the backup.

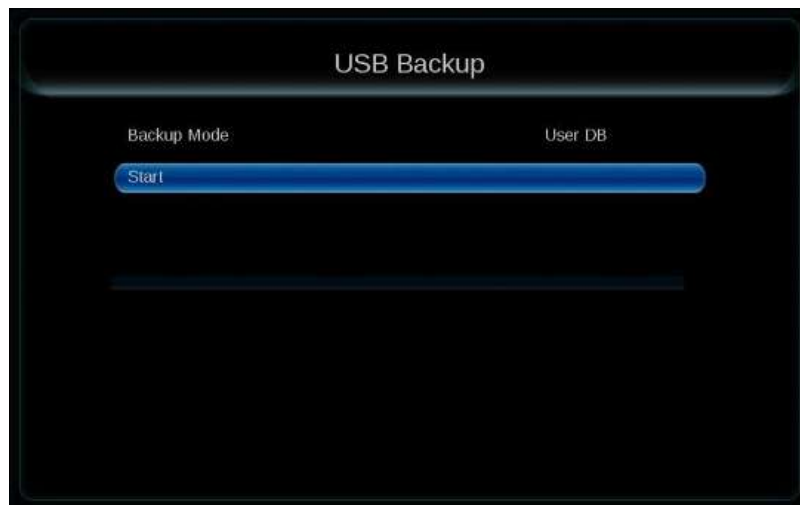


Fig. 59 — Tools menu > USB Backup

12.4 Auto standby

Path: MENU > Tools > Auto standby



Fig. 60 — Tools menu > Auto standby

The receiver switches to standby automatically if no key is pressed during the selected time. Press ◀ ▶ to select the delay (for example 3 hours) or disable the function. This setting saves energy.

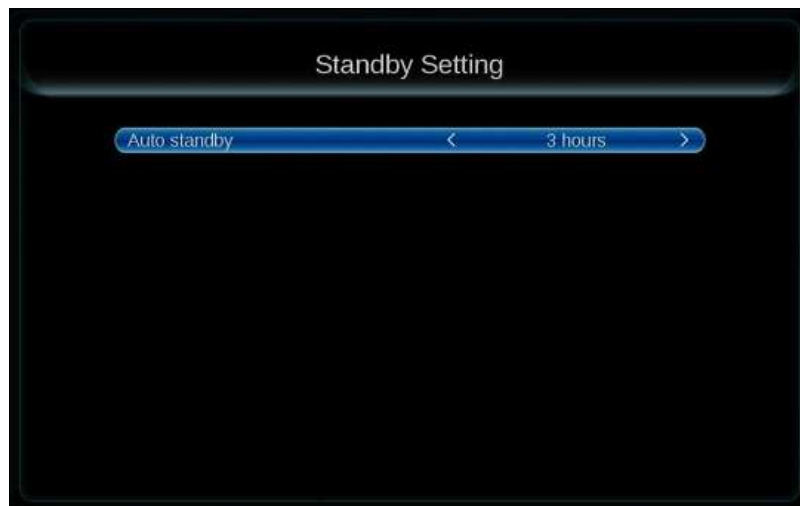


Fig. 61 — Tools menu > Auto standby

12.5 Factory Setting

Path: MENU > Tools > Factory Setting



Fig. 62 — Tools menu > Factory Setting

Factory Setting restores all settings to their factory values and deletes the channel list, timers and favourite lists. The password is also reset to its default value. Enter the password to confirm. The first time you use a password-protected function, you are asked to create a password. The default password is **0000**.



Fig. 63 — Tools menu > Factory Setting

After the reset, the first installation starts (section 5).

Warning: All your settings and channels are deleted. Use **USB Backup** (section 12.3) first if you want to keep them.

13. Troubleshooting

Problem	Solution
The LED display stays off.	Check that the power adapter is connected to the 12 V input and plugged into a working mains socket.
No picture on the TV.	Check the HDMI or SCART cable and select the correct input on your TV. Check that the receiver is not in standby.
"No signal" or no channels found.	Check the coaxial cable between the wall outlet and CABLE IN . Start a new Auto Search . If you know the frequency of your operator, use Manual Search and check the RF level and C/N bars.
Some channels are missing.	Check that FTA Only is set to No if you want to store scrambled channels. Scrambled channels require a subscription and cannot be watched with this receiver.
No sound.	Press Mute , check the TV volume, and set Audio Out to Auto in AV Setting .
The receiver switches to standby on its own.	Auto standby is active. Change or disable it in Tools > Auto standby .
The time is wrong.	Check GMT Offset and Summer Time in Local Time Setting .
The USB device is not recognised.	Check that the device is formatted in FAT32 or NTFS (HDD Information). A hard disk drive usually needs its own power supply. If necessary, format the device with Storage Format (all data is erased). See section 10.1.
A timer recording was missed.	Very large hard disk drives (several terabytes) can take too long to start up and index, so the recording may start late or be missed. Use a USB device of reasonable size (section 10.1).
I forgot my password.	Reset the receiver to its factory settings (Tools > Factory Setting , section 12.5). The password returns to its default value, 0000 .
The remote control does not work.	Replace the batteries and point the remote control at the front panel, without obstacles.

14. Technical specifications

Feature	Specification
Model	SRT 3034
Standard	DVB-C (EN 300 429)
Tuner	M88TC6800
Frequency range	47–862 MHz
Modulation	16, 64, 128, 256 QAM
Main processor	M88CC6000
Memory	SDRAM 64 MB, Flash 4 MB
Video resolution	Up to 1920 × 1080
Video decoding	MPEG-2 MP@HL, AVC/H.264 HP@L4.1, MPEG-4 SP, AVS/AVS+, VC-1
Aspect ratio	4:3, 16:9
Audio decoding	AAC, AC3, PCM; audio pass-through via HDMI; Dolby Audio
Connectors	Cable IN (IEC female), Cable OUT (IEC male, loop through), S/PDIF (coaxial), HDMI, TV SCART, USB 2.0 (5 V, 500 mA max.)
Features	7-day EPG, DVB subtitles, teletext (VBI/OSD), LCN, 8 favourite lists, parental lock, timers
Power supply	External adapter 12 V DC, 1 A; input 100–240 V AC, 50/60 Hz
Power consumption	12 W max.; standby max. 1 W
Operating temperature	0 °C to +40 °C
Storage temperature	–10 °C to +70 °C
Operating humidity	10–95 % RH, non-condensing
Dimensions (W × D × H)	168 × 110 × 38 mm
Weight	240 g
EAN	9120137873191

15. Support and legal notice

15.1 Support

For FAQs, documentation and software updates, visit **www.strong-eu.com**. Before contacting support, have the model (**SRT3034**) and the software version (**Tools > System Information**) ready.

Supplied by STRONG Austria. Represented by STRONG Ges.m.b.H., Teinfaltstraße 8/4. Stock, A-1010 Vienna, Austria. Email: support_at@strong-eu.com

15.2 Legal notice

This product complies with the applicable European directives. The CE mark certifies its compliance. STRONG is a registered trademark, a subsidiary of Skyworth.

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. Manufactured under licence from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. All other product names are trademarks or registered trademarks of their respective owners.

This product is intended for indoor use only in EU member states and EFTA states.

As a consequence of continuous research and development, technical specifications, designs and the appearance of the products may change without notice.

Copyright STRONG © 2026. All Rights Reserved. | www.strong-eu.com