



Assembly Manual

Speed sensor - 60029



Date: 2018.01.10

Promovec A/S
Brunbjergvej 2
DK-8240 Risskov

Tel. +45 7027 2623
Fax. +45 7027 2429
info@promovec.dk

Overview of the parts used for the assembly.


| Item number | Description | Pcs. | Picture |
|-------------|----------------------------|------|---|
| 51339 | Sensor, wheel speed f.cen | 1 |  |
| 51381 | Bracket for wheel speed s | 1 |  |
| 50121 | Screw for bottompart 5x10 | 1 |  |
| 51395 | Screw for speed sensor (5) | 1 |  |
| 51396 | Disc for speed sensor M5 | 2 |  |

Guide of assembly – step by step

Start by taking the parts for the speed sensor.




Assemble the speed sensor in the order as the picture (bracket, speed sensor, washer and screw)

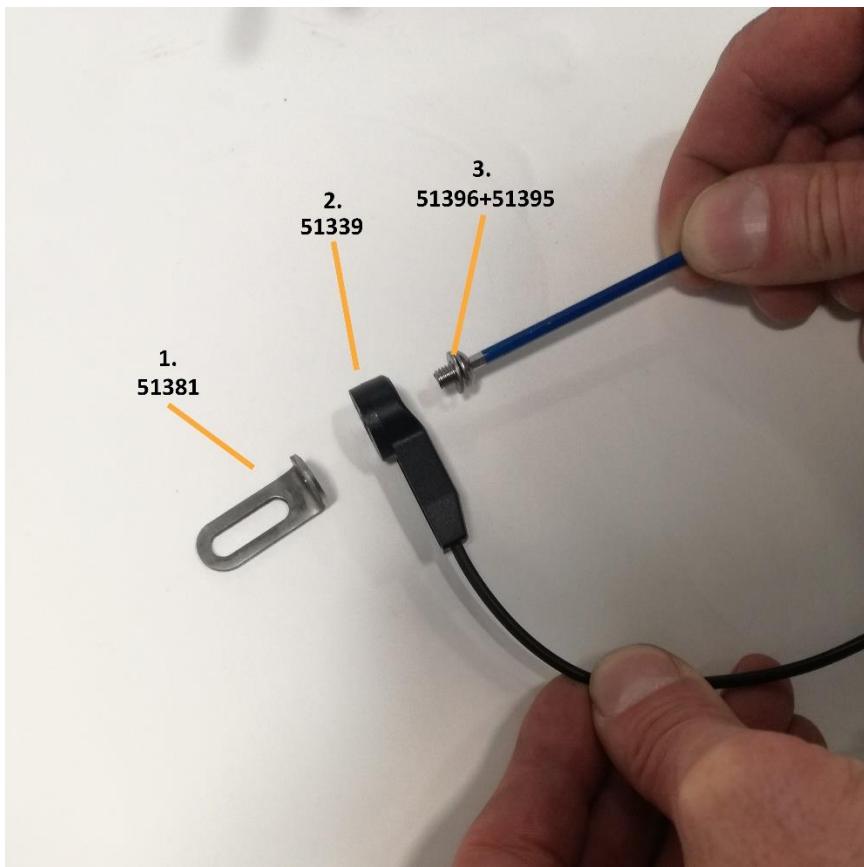

Add the rubber cap to the end of the speed sensor.




Mount the speed sensor to the frame.

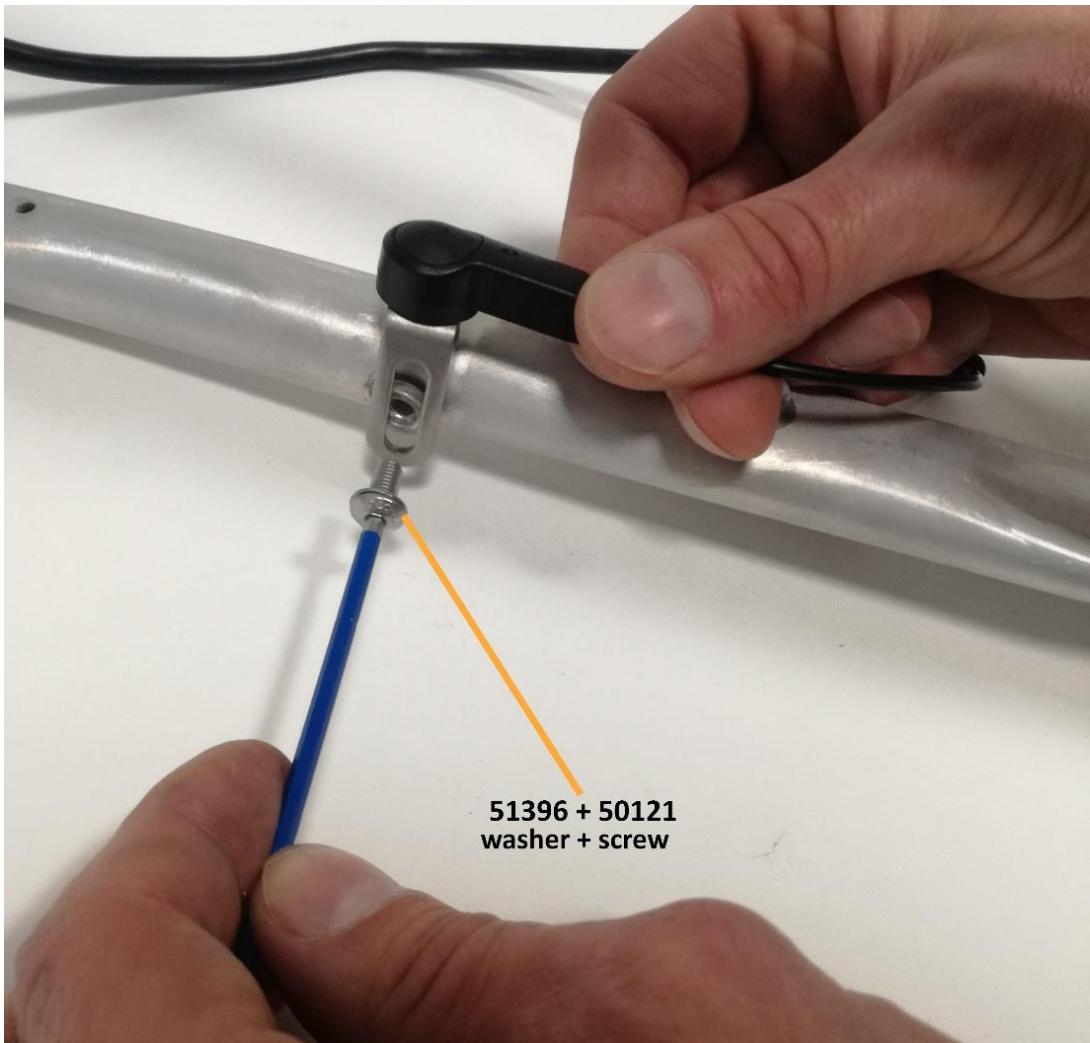

Connect the speed sensor to its plug on the center motor.



It is recommended to place the magnet with a distance around 3-10mm from the speed sensor.

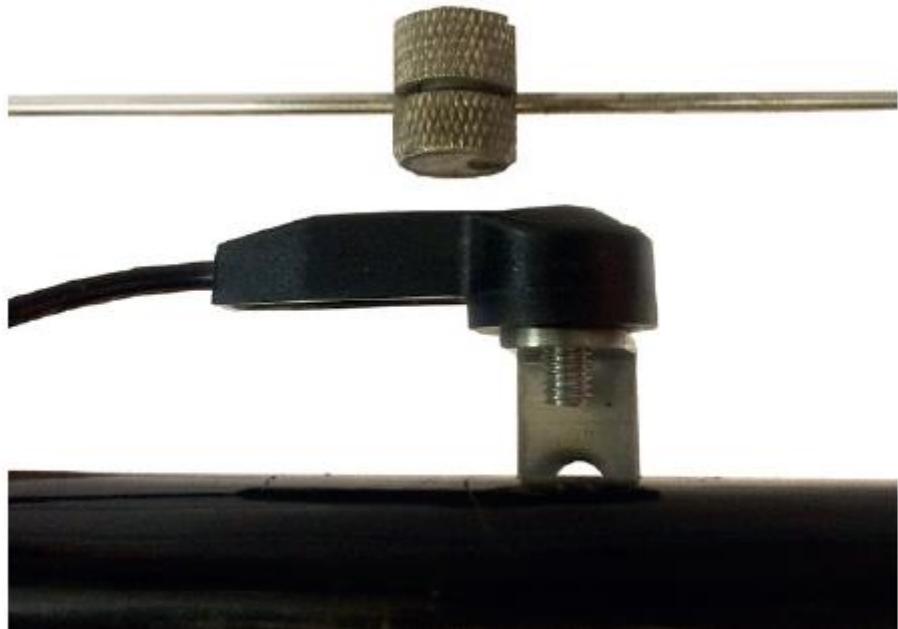

Test the bike, if the error code number 7 is shown adjust the speed sensor