


MIVO CONNECT

WIRELESS MBUS EXTENDER


QUICK MANUAL 1.0



Designad och tillverkad i Sverige av:
MIVO Technology AB
112 15 Stockholm
www.mivo.se

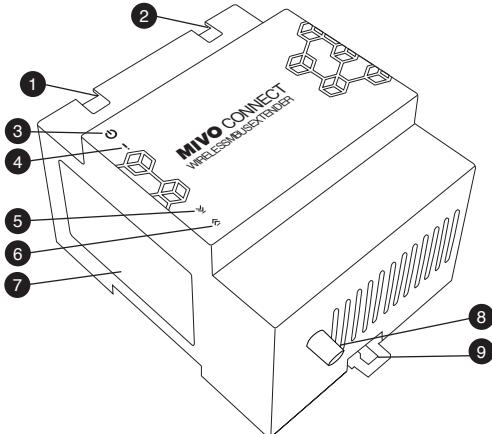

1. Connection to previous extender or MIVO Connect
2. Connection to next extender
3. Status LED
4. Wireless MBus Status LED
5. Wireless communication LED, packet sent
6. Wireless communication LED, packet received
7. Product information label
8. Wireless MBus Antenna connector (SMA)
9. Fixing latch

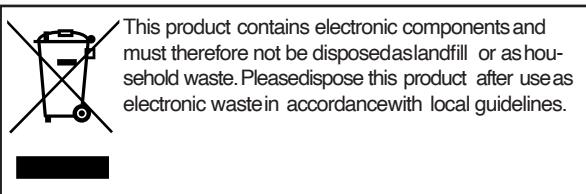



- Must be installed by a certified electrician following local electrical guidelines.
- Always place a circuit breaker prior to the product that breaks both L & N.
- Never work with power connected.
- Incoming power must be fused 16A or less.
- Please refer to the full manual for more information at www.mivo.se/help

Quick start

1. Disconnect power to the installation.
2. Mount the Extender on the DIN-rail on the right side of the last MIVO-Device.
3. Connect the included cable between Expansion Out on the previous device and Expansion In on the extender.
4. Connect the Wireless MBus Antenna to the antenna connector by turning it clockwise. Use a wrench to tighten to 0.3Nm, 0.5Nm max.

For more information read the full manual at www.mivo.se/help

LEDs (1 / 2)



Off	Starting
Switching red / green	Waiting for MIVO Connect to boot
Solid green	Operational
Solid red	Error, Contact MIVO



Off	Ok
Solid red	Error overload

LEDs (2 / 2)



Off	No Communication
Greenblink	Communication TX, packet sent.

Off	No Communication
Greenblink	Communication RX, packet received.