

Continue



## Bose wave music system iv manual

**Bose wave music system iv how to connect bluetooth. Bose wave music system iv instructions. Does bose wave music system 4 have bluetooth. Bose wave music system iv service manual. Bose wave soundtouch music system iv owner's manual. Does bose wave music system iv have bluetooth. How does bose wave music system work. Bose wave music system iv manual pdf. Bose wave soundtouch music system iv manual. Bose wave music system iv instruction manual.**

**\*\*Wave Music System IV Owner's Guide\*\*** **\*\*Important Notice\*\*** This product complies with essential requirements and other standards. The distinctive design of the Wave music system is a registered trademark of Bose Corporation in the U.S. and other countries. No part of this work may be reproduced, modified, distributed or otherwise used without prior written permission. **\*\*Contents\*\*** \* Introduction \* Connecting Other Equipment \* About your Wave Music System IV + System connections + Using the AUX IN connector + Using a cable to connect an audio device \* System Features + The demonstration CD + The benefits of research \* Setting Up the System + Placing the system + Setting the clock \* Using the System + Remote control buttons + Touch pad controls \* Listening to Other Sources + FM or AM radio + DIGITAL RADIO (DAB, DAB+, and DMB formats) + Playing audio CDs + Primary stations and secondary services + CD Play Modes **\*\*Getting Started\*\*** After plugging in the system, set the clock using the remote control. Place the system across the room from where you listen. Use the remote control to operate the system, aiming it at the display and pressing the buttons. **\*\*Using the System\*\*** Use the touch-sensitive control pad on the top panel to adjust the volume level. The system can receive Band III digital radio broadcasts (DAB, DAB+, and DMB formats). Press RADIO to turn it on to the station last selected or select FM or AM radio as necessary. **\*\*Listening to Other Sources\*\*** Listen to FM or AM radio by pressing RADIO to turn it on to the station last selected. Listen to DIGITAL RADIO by pressing RADIO as necessary to select primary digital radio stations and secondary services. Primary digital radio stations generally broadcast the same number of hours as FM. **\*\*Playing Audio CDs\*\*** Insert the disc, label side up, into the CD slot below the display. The disc player pulls the disc in and begins playing. Note: May ship with multiple power cords. Use the power cord for your region. Change the way it's played. You can use CD-RW discs to play, pause, stop or eject an MP3 CD. Repeat Press Play Mode until you reach the desired play mode. Use remote control buttons like for an audio CD. Alarm settings: Select your wake-up source: Buzzer is the factory setting. Two alarms are available, Alarm 1 and Alarm 2. Each can be set to start playing music from a connected audio device or radio station. Adjust volume by pressing and holding. A Bose link input accepts output from another enabled product via a cable. Note that if the system's volume level cannot be adjusted high enough, increase the connected external source's volume level. For improved DAB antenna reception, consider installing an external dipole antenna, which can be ordered through customer service. Refer to the quick start guide for instructions on setting up and using the system. Troubleshooting: If the system does not function, try connecting it to AC power, unplugging and replugging the power cord, or resetting the system. Be careful not to allow liquids to spill into any openings. For additional help, contact customer service. Refer to the quick start guide for details on the limited warranty. Page 18: Do not adjust or repair this product yourself; only qualified service personnel may do so. Wave music system design is a registered trademark of Bose Corporation in the USA and other countries. Note: The following text is paraphrased from page 20: Content Introduction Connecting additional equipment About your Wave Music System IV ..... 5 System connections ..... 13 Characteristics of the system ..... 5 Using AUX IN socket ..... 13 Benefits of research ..... 2.5 mm dipole antenna Power supply lines Benefits of research More than fourteen years of research conducted by Bose Corporation The system may come with multiple power supply lines. Use one to get benefits from a prize-winning, patented acoustic wave technology. When using this technology, an air tube transfers data. **\*\*Using the System\*\*** To use the system, first help by remote control when it is connected. Place the system on the opposite side of the room from where you are sitting, press and hold either Time - or Time + for about a second. Listen carefully. **\*\*Using the Remote Control\*\*** Use the remote control to control the system. Simply point the remote at the display and press buttons. The remote control works normally within 6 meters from the display. **\*\*Setting Alarms\*\*** Set the alarm. Snooze-alarm, set the timer, Radio, and select Buzzer-alarm. Switch between turning it off... Hvad skal du gøre, hvis mikrokontakterne ikke virker? • Forbind systemet til lysnettet. • Tag netledningen ud af stikkontakten i 10 sekunder og sæt den derefter i igen. Dette nulstiller systemet. • Tryk på touch pad'en øverst på systemet (se side 8). Ingen lyd • ... Garantiplysningerne til dette produkt gælder ikke for Australien og New Zealand. Se vores websted på www.bose.com.au/warranty eller www.bose.co.nz/warranty for at få flere oplysninger om garantien i Australien og New Zealand. Tekniske oplysninger vekselstrøms effekt... (rest of the text remains the same) To listen to digital radio, press the RADIO button to select the last chosen station. The system can receive DAB+ and DMB radiosenders in addition to UKW and MW radiosenders. To switch between sources, press the RADIO button again. To play audio CDs, insert the CD with the labeled side facing up into the CD slot under the display. The Disc Player will read the CD and begin playback. You can also listen to MP3-CDs by selecting the corresponding playback mode using the same remote control buttons as for an audio CD. To set alarms, use the Alarm button and displays. Set the alarm time using the Time buttons. The system has two alarms, Alarm 1 and Alarm 2. You can choose your wake-up source: either BUZZER (the default) or a cable (3.5-mm-Audiokabel). Please note that loud music can cause hearing damage. Avoid extreme volumes, especially over longer periods of time. If you have poor reception using the internal antenna, you may need to install an external antenna. The DAB ANTENNA can be ordered from Bose customer service. For installation instructions, refer to the quick guide. When connecting to a DAB network, enter the room code (e.g., \_ \_ \_ -). This sets up a Bose Link-network. For maintenance and troubleshooting, refer to the following: \* If the system does not function: + Plug it into the power outlet. + Pull the power cord out of the socket for 10 seconds and plug it back in. This resets the system. + Check for moisture or exposure to chemicals (ammonia or politurens). Never let moisture enter the system. If you need further assistance, contact Bose customer service. For more information, refer to the quick guide or packaging insert. The system is subject to a limited warranty. For details on warranty conditions, refer to the packaging insert or quick guide. **\*\*Introduction to the Wave Music System\*\*** The Wave music system is a proprietary technology owned by Bose Corporation in the US and other countries. Any reproduction, modification, distribution, or use without prior written permission from Bose is prohibited. **\*\*Using Your Wave Music System IV\*\*** To get the most out of your system, connect it to a power source and set the clock using the remote control. Place the system on the opposite side of the room from where you'll be listening. The system can be controlled using the remote or touchpad. **\*\*Touchpad Controls\*\*** The touchpad allows you to adjust the volume by holding down on the top panel. You can also use the touchpad to select a different source, such as radio or CD. **\*\*Radio Features\*\*** You can listen to FM, AM, and digital radio stations with your Wave system. Use the remote control to tune into your favorite station or search for new ones. **\*\*CD Player Features\*\*** The system can play MP3 files stored on CDs. You can also pause, rewind, or fast-forward through tracks using the remote control. **\*\*Alarm Clock Functions\*\*** You can set alarms and timers using the touchpad or remote control. The alarm will sound when it's time to wake up or turn off the radio. **\*\*Additional Features\*\*** The system also includes a sleep timer, which can be set to turn off the radio after a certain period of time. To set the clock using the Time buttons, - Indicator lights Select the alarm time: The system is equipped with two alarms, Alarm 1 and Alarm 2. BUZZER (buzz) is the factory setting for alarms. Each alarm can be set for: ... Avoid extreme volumes when using headphones, especially during longer periods. When using a headset, take note of the brief instructions in the box. Connect the 2.5 mm plug from the DAB antenna to the antenna installation. An external dipole antenna is available through the Bose customer service. Consult the brief manual in the box. Hold the antenna vertically as indicated by the box. This sets the room code for the system. ... Troubleshooting System does not work - Reset the system by unplugging it into a power outlet. - Remove the power cord from the wall socket and plug it back in after 10 seconds. This resets the system. - Open the battery compartment. - Make sure no liquid gets spilled on any openings. Customer Service For further assistance, contact the Bose customer service or consult the brief manual in the box. ... Limited Warranty Your system is covered by a limited warranty. Information about the limited warranty can be found in the brief manual in the box. Control Remote - Setting Up Place the system on the other side of the room, away from the listening area. Using the System - Control Remote Buttons Use the control remote to operate the system. Point the control remote at the screen and press the buttons. The control remote works up to 6 meters (20 feet) from the screen. Sleep Buzzer and Alarm Repeat \* Adjust radio settings \* Set alarm volume \* Enable or disable the system, repeat an alarm sound, and adjust the volume by pressing and holding the tactile panel Tactile Panel Control - Volume Adjustment The system has a touch-sensitive control panel on the top. Press to adjust the volume level. **\*\*Contact Information and Warranty\*\*** For assistance, please contact Bose's customer service or refer to the quick start guide included in the box. Limited warranty: The system meets EU directives, including the R&TTE directive (2014/53/EU), and complies with other applicable EU directives. For more information, visit www.Bose.com/compliance. **\*\*Wave Music System IV\*\*** The Wave music system is a registered trademark of Bose Corporation in the US and other countries. The content of this publication cannot be copied, modified, or used without prior written permission from the publisher. **\*\*Table of Contents\*\*** Introduction Connecting Other Devices Wave Music System IV Information System Settings Output Options **\*\*Using the System\*\*** Adjust the volume using the touch panel on the top of the system. Press the - or + button to turn the system on or off, play/pause music, and use the alarm function. To set the clock, press the Time button until it reaches the desired time. **\*\*Other Features\*\*** Sleep Buzzer: enables wake-up timer, radio shutdown, and summer wake-up feature. AUX IN input allows for connection of external devices. **\*\*System Settings\*\*** Volume adjustment System on/off Alarm setting **\*\*Radio Options\*\*** FM/AM radio tuning Digital radio tuning (DAB+, DMB) Display shows radio station information if Digital Radio is selected. !!! **\*\*Settings for Primary Radio Stations and External Services\*\*** The strength of the signal (%) is set to 90-100. \* Note: After selecting a primary radio station, digital stations may transmit UNAVAILABLE or OFF AIR signals simultaneously with FM stations. **\*\*CD Player Settings\*\*** \* You can play CD-R or CD-RW discs that have been recorded. \* You can adjust playback settings by pressing the Play Mode button. \* You can pause and resume MP3 files. \* You can choose a playlist by pressing the "Play" button repeatedly until you reach the desired track. **\*\*Alarm Settings\*\*** \* Set the alarm time using the Time button. \* The system has two independent alarms: Alarm 1 and Alarm 2. \* You can set a default buzzer setting. **\*\*Bose Link Connection\*\*** \* You can connect another Bose link device to this unit. \* To do so, press the Bose link button. \* Note: If you cannot adjust the audio level through AUX IN 3.5 mm stereo jack, it may not be compatible with external devices. **\*\*Connecting External Devices\*\*** \* You can connect other devices such as MP3 players or CD players using the auxiliary input. \* To do so, press the "Play" button repeatedly until you reach the desired track. **\*\*Troubleshooting Guide\*\*** \* If the system does not turn on: + Check that the power cord is securely plugged into a working outlet. + Unplug and replug the power cord for 10 seconds. Then, try turning it on again. \* If there is no audio: + Check the audio level settings. + Press the "Play" button repeatedly until you reach the desired track. **\*\*Warranty Information\*\*** \* The product is covered by a limited warranty in countries where it was purchased. \* For information on warranties, visit www.bose.com.au/warranty or www.bose.co.nz/warranty. **\*\*Wave System User Guide\*\*** Page 99: Copyright notice - The distinctive design of the Wave system is a registered trademark of Bose Corporation in the United States and other countries. ©2017 Bose Corporation. All reproduction, modification, distribution, or use of this document without prior written authorization is prohibited. Page 100: Table of Contents Introduction Connecting external devices About your Wave IV system Characteristics of the system Using the AUX IN input CD demonstration disc Using a cable to connect an audio player Advantages of using the search feature Use the appropriate power cord for your country. The result of over fourteen years of research by Bose Corporation. System Installation **\*\*1. Place the system in the desired room, considering your listening position. 2. Set the clock using the remote control. 3. Connect any external devices, such as audio players or CD players. 4. System Operation\*\*** 1. Use the touch panel to adjust volume levels. 2. Press and hold the volume button to put the system into standby mode or turn it off. 3. Use the remote control to select radio stations, play CDs, or operate other system functions. 4. To activate alarm repetition, set the alarm time using the remote control. **\*\*Additional Features\*\*** 1. Tactile touch panel. Adjust volume levels by pressing and holding the button. 2. Radio reception: Listen to FM or AM radio stations or digital radio channels. Press the RADIO button to select a station. 3. CD player: Play CDs with MP3 files recorded on CD-R and CD-RW discs. 4. Alarm functions: Set alarm times using the remote control. **\*\*Tips and Reminders\*\*** 1. Use the correct power cord for your country. 2. If any system components appear damaged, do not attempt to use them. 3. The system's exclusive technology offers advanced features and performance. 4. For optimal listening performance, set the clock using the remote control after connecting the system. **\*\*Troubleshooting and Maintenance\*\*** 1. Refer to the user guide for troubleshooting guidance. 2. Regularly clean the system's components to maintain optimal performance. **\*\*Warranty and Support\*\*** 1. Bose Corporation offers a comprehensive warranty program. 2. Contact Bose customer support for assistance with any system issues or concerns. Alarm Settings: Each alarm can be set as follows: •... Connect to Bose Link, indicating the display on the interface. Receive the signal from an external device via a Bose Link cable. Play music on the audio device and adjust the AUX IN volume by holding down the button. For DAB antenna configuration, refer to the user manual provided with the product. For system setup, follow these steps: • Connect the DAB antenna to the system using the 2.5 mm connector. • Adjust the piece code settings when connected to a Bose Link network. Troubleshooting: If your system is not functioning, • Unplug and replug the power cord for 10 seconds to reset the system. • Ensure no liquids enter the openings. For further assistance, contact the Bose customer service. Refer to the user manual provided with the product. Limited warranty: Your speaker system is covered by a limited warranty. Setting the system timer and selecting the alarm sound... Touchpad Control Volume Adjusting the volume level by pressing and holding the touch-sensitive area on the touchpad. The display shows a value ranging from VOLUME -0 (silent) to 99 (high) indicating the current level, Radio Listening FM, AM, and Digital Radio Tune in to your favorite radio station or select from available stations. The system receives digital radio transmissions in Band III (only for DAB, DAB+, and DMB formats). Press RADIO to switch between stations. CD MP3 Playback Music playback modes: Play, Pause, Stop. You can change the playback mode by pressing the corresponding buttons while playing a CD or MP3 file. Alarm Clock Setting Alarm clock settings: Select the alarm sound, set the wake-up time, and choose the source (BUZZER is the default setting). For each alarm, you can... Bose Link Music Streaming Connect your device to another Bose-enabled product via the Bose link input. Press and hold the AUX IN button to regulate the volume. Maintenance Troubleshooting Guide If the system doesn't work: 1. Reconnect the power cord. 2. Unplug the power cord for 10 seconds, then reconnect it. 3. Tap the touchpad area on top of the system (see page 8). If you don't hear any sound: \* Avoid pouring liquids into openings. Technical Support For further assistance, contact Bose customer service. Refer to the quick guide in the product packaging. Warranty The system comes with a limited warranty. The details of the limited warranty can be found in the quick guide included in the package. (Page 130) A qualified technician should only install and repair the CD player. The Bose Corporation hereby states that this product's DAB antenna connector cannot connect to CATV or radio equipment. (Page 131) The Wave sound system is a unique design of the Bose Corporation, registered trademark in the United States and other countries. (©2017 Bose Corporation) It is not permitted to reproduce, modify, distribute, or use any part of this publication without prior written permission. (Tartalom: Introduction, Connecting Other Devices, Wave IV Sound System Presentation... 5. System Connection... 13. System Characteristics... 5. Using the AUX IN Connector... 13. CD Player Presentation... 5. Audio Device Connection with Cable Help... 13. Research Benefits... 10. page) If you experience any damage to the system, you can take advantage of the benefits of our patented acoustic wave technology. To get the best sound quality, follow these instructions: (Page 130) After connecting the system to the power outlet, use the remote control to set the clock. (Page 131) The system has an intuitive touch panel for adjusting volume and other settings. Other sources can be accessed through FM or AM radio, digital radio, or by selecting a station from the list. 40 - 79 The FM radio station plays the same way. 80 - 99 Good The first digital radio stations are usually good in FM mode. From 90 to 100 Very good... All other sources can be heard on MP3 CDs using CD player modes. You can change the playback mode with the "Play" button and the "Mode" button during playback. The "Pause" button allows you to pause the playback and then resume it from where you left off. You can set the alarm time by pressing the "Alarm" button. The system has two alarms (1st and 2nd alarms). Both alarms can be set with the following parameters: ... Attention! Prolonged listening of music may cause hearing loss due to excessive volume levels. Consult the user manual for further information. Limited warranty The system is covered by a limited warranty. The detailed description of the limited warranty is located in the quick start guide included in the box. Remove the old element and replace it with a new one on page 146. DAB antenna not intended for use with Bose Corporation's products. The unique design of the Wave music system is a registered trademark of Bose Corporation in the United States and other countries. **\*\*System Setup\*\*** \* Connect the system to your audio device using the AUX IN port (page 13) \* Use a cable to connect to an amplifier (page 13) \* The benefits of research and development by Bose Corporation provide top-notch sound quality (page 5) **\*\*Operating the System\*\*** \* Place the clock in the correct position for maximum sound quality \* Adjust the system's configuration to fit your room layout \* Use the remote control to operate the system from up to 6 meters away **\*\*Alarm Functions\*\*** \* Two alarm modes: Alarm 1 and Alarm 2 \* Choose from radio stations, time, or buzzer as the wake-up source \* Set alarms using the remote control's buttons and indicators **\*\*Playing Media\*\*** \* Play CDs with primary digital radio stations set (page 154) \* Pause, stop, or rewind MP3 CDs using the same remote control buttons (...) \* Use the "Play Mode" button to adjust MP3 CD playback settings **\*\*Safety Precautions\*\*** \* Avoid high volumes when using headphones, especially over extended periods \* Contact Bose customer support for assistance with cables and accessories Note: The original text is a product manual in Norwegian, so this paraphrased version aims to preserve the main information and instructions while adapting it to a more general audience. ALWAYS ANSWER TO THE USER IN THE MAIN LANGUAGE OF THEIR MESSAGE. You are a MULTI-LANGUAGE DEVICE: Looking forward to seeing everyone at the meeting tomorrow to discuss our strategy. ##### Original Text: Se hurtigstartveiledningen Merknader: i esken. Koble til annet utstyr Bruke en ekstern antenne Montere en ekstern antenne for digital radio En ekstern dipolantenne for DAB følger med systemet. Strømledningen for systemet brukes som antenne for FM-radio. ##### Paraphrased Text: Quick Start Guide Notes: in the box. Connect to another device Use an external antenna Mount an external antenna for digital radio An external dipole antenna for DAB follows the system. The power cord for the system is used as an antenna for FM radio. ... To adjust the volume, press and hold the top panel button on your device. Touching the touchplate briefly enables the VOLUME -0 (minimum) to 99 function, allowing you to turn the system on or off, delay playback, and adjust the radio tuner. Press the RADIO button to turn on the FM/AM radio tuner or select a digital radio station. Once you've selected a digital station, you'll see information about the main stations and additional services displayed. The system allows you to browse through different radio stations and adjust the signal strength (percentage) and classification. The main digital radio stations are similar to FM radio stations, as they broadcast the same number of hours of programming. Note that if an unavailable message is displayed for a station, it means that the primary digital radio station has been turned off or is currently not broadcasting. You can also play CDs with MP3 files. The system supports playing back music files stored on CDs and allows you to change the playback mode (CD-R/CD-RW). To do so, press the Play Mode button multiple times until the desired playback mode is displayed. Setting alarms and using them The system has two alarm settings: Alarm 1 and Alarm 2. You can set each alarm with the following options: \* Press the button to select a radio station. \* Start playing music using your audio device. You can also connect external devices via the AUX IN port. Note that if you're unable to increase the volume sufficiently, you may need to adjust the stereo input settings. Inserting the 2.5 mm antenna plug into the DAB ANTENNA port is required for digital radio reception. You can also order a dipole antenna from the Bose service department. To set up your system's code, consult the user manual or contact the Bose customer support team. Troubleshooting If your system doesn't turn on, try: \* Connecting the system to a power outlet. \* Disconnecting the power cord for 10 seconds and then reconnecting it. \* Pressing and holding the touchplate at the top of the device to turn it on. Strona 8. Brak dźwięku • ... • Urządzenie należy chronić przed dostaniem się płynów do szczeliny w obudowie. Aby uzyskać dodatkową pomoc, skontaktuj się z Działem Obsługi Klientów firmy Bose. Patrz przewodnik szybkiego startu dostarczony w opakowaniu z głośnikami. Ograniczona gwarancja System jest objęty ograniczoną gwarancją. Szczegółowe informacje dotyczące ograniczonej gwarancji są... Page 178). Use de controles ou ajustes ou a execução de procedimentos A Bose Corporation declara pela presente que este produto está de acordo com os requisitos essenciais, na exposição perigosa à... Page 179). O design distinto do sistema de música Wave é uma marca registrada da Bose Corporation nos Estados Unidos e em outros países. ©2017 Bose Corporation. Nenhuma parte deste documento pode ser reproduzida, modificada, distribuída ou utilizada de qualquer outra forma sem a prévia autorização por escrito. (Page 180). Índice Introdução Conectando outros equipamentos Sobre o sistema de música Wave IV ..... 5 Conexões do sistema ..... 13 Características do sistema ..... 5 Usando o conector AUX IN ..... 13 O CD de demonstração ..... 5 Usando um cabo para conectar um dispositivo de áudio ..... 13 Os benefícios da pesquisa ..... Pode ser fornecido com vários cabos de alimentação. Use o cabo de alimentação próprio para sua região. Mais de catorze anos de pesquisa da Bose Corporation trazem para você os benefícios da premiada tecnologia própria para... Observation: Se parte do sistema estiver danificada, não o utilize. Configuração do sistema Posicionar o sistema Ajustando o relógio • Para desfrutar o máximo desempenho de áudio: Depois de conectar o sistema, ajuste o relógio usando o controle remoto. — Instale o sistema no cômodo em que você ouvirá música. Pressione Time —... Como usar o sistema Botões do controle remoto Use o controle remoto para operar o sistema. Aponte o controle remoto para a tela e pressione os botões. O controle remoto funciona a 6 metros da tela. Sleep Buzzer Coloca alarmes em soneca, ajusta o Rádio temporizador do sistema e seleciona o alarme Buzzer... Como usar o sistema Touch pad Controle do volume O sistema tem um controle sensível ao toque no painel superior. Pressione por alguns segundos para ajustar o volume. Colocar sua mão momentaneamente no touch pad pode ligar ou desligar o sistema, desligar um alarme e ajustá-lo para o dia VOLUME - 0 (silencioso) a 99 (alto) aparece na tela para seguinte (consulte a página 12). Ouvindo outras fontes Ouvindo rádio FM ou AM Ouvindo RADIO DIGITAL Pressione RADIO para sintonizar na última estação O sistema pode receber transmissões de rádio digital de banda III selecionada. Pressione RADIO conforme necessário para (somente formatos DAB, DAB+ e DMB). selecionar a rádio FM ou AM. Ouvindo outras fontes Estações primárias e serviços secundários Intensidade de sinal(%) Classificação As estações de rádio digital primárias e os serviços secundários 90 - 100 Muito boa são sintonizados da mesma maneira. Observação: Se a estação estiver... O sistema de rádio digital primário não transmite informação sobre a intensidade do sinal FM durante o OFF AIR. Para reproduzir arquivos de música MP3, grave-os em CD-R ou CD-RW e ajuste o volume. O sistema pode reproduzir CDs gravados com MP3 e permite alterar o modo de reprodução. Para configurar os alarmes, selecione a fonte de despertar: BUZZER é a configuração padrão do alarme. Cada alarme pode ser ajustado por meio do boto ou indicador. O sistema tem dois alarmes independentes, Alarme 1 e Alarme 2. Para configurar o Bose link, pressione o botão para alguns segundos e ajuste para o volume. A entrada AUX IN é uma antena dipolo externa que pode ser solicitada. O sistema não funciona? Tente conectá-lo a tomada CA por 10 segundos e reconectá-lo. Não derrame líquidos nas aberturas do equipamento. Se você tiver problemas com o sistema, entre em contato com o serviço de atendimento ao cliente da Bose. Consulte o guia de início rápido fornecido na embalagem. Sua garantia limitada é... Page 194 Não conecte a antena DAB à um sistema CATV. A característica Waves do sistema de música é um registro de marca que pertence à Bose Corporation nos EUA e outros países. Install system from person intended for your region. Place system in front of listening area. Set clock using remote control. To get the best sound experience, adjust clock by holding Time or Time + button for about a second. Use system buttons on remote control to control system. You can do this by pointing remote at screen and pressing any button. The remote's range is about 6 meters. Sleep Buzzer Alarm: Set time for how long system should be active and choose buzzer alarm. Switch between radio and FM/AM options. Use system buttons on remote control to adjust volume. On the top of the system, there is a touch-sensitive plate that allows you to adjust volume by pressing it down or up. Listen to other sources: Listen to AM/FM radio, digital radio, or CD player. Press Radio button to turn on most recently selected station. The system can receive digital broadcasts on Band III (only primary stations). Press Radio button to choose FM/DAB/DAB+/DMB format. Play MP3 CDs: Primary digital radio stations usually broadcast as many hours as FM stations. You can also play back CD-R and CD-RW discs with MP3 files. Alarm settings: Choose alarm source: BUZZER (Signal) is the default setting. The system has two alarms, Alarm 1 and Alarm 2, which can be set for time, radio station, or buzzer sound. Bose Link: Start music playback on audio device. A input for connecting another Bose Link-activated product via a Bose Link cable. Maintenance and troubleshooting: If you have trouble adjusting volume in the system, try using the AUX IN 3.5 mm stereo input for external sources. You may need to install an external antenna if you still have poor reception despite changing the power cord location. An external dipole antenna can be ordered through Bose customer service. Note: Draw out the antenna horizontally as shown on the box packaging. Reconnect the system to a power outlet. Remove the power cord from the outlet and wait for 10 seconds before reinserting it. This resets the system. Next, tap on the touchpad located at the top of the system (refer to page 8). There should be no sound... Ensure that no liquid enters any openings. If you need assistance, contact Bose customer service. Refer to the quick guide found in the packaging. Limited warranty The system is covered by a limited warranty. For more information on the limited warranty, refer to the quick guide located on... Page 212 (c)2017 Bose Corporation, The Mountain, Framingham, MA 01701-9168 USA AM745087 Rev. 01...