

I'm human



Element tv user manual

Element tv instruction manual. Element tv user guide. Element tv locked settings. Element tv setup instructions. Element tv manual. Element tv manual controls. Element roku tv user manual.

Given text content here **Federal Communications Commission Statement** This equipment has been tested and found to comply with the limits of a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. **Warnings and Precautions** TO REDUCE THE RISK OF ELECTRIC SHOCK NO USER-SERVICEABLE PARTS INSIDE. ■ If you can not fit the plug into the electrical outlet, contact an electrician to install a grounding outlet. ■ Always operate this equipment from the type of power source indicated on the rear of the serial/model plate. ■ Never overload wall outlets and extensions. **Listening with Earphones** ■ Listen at moderate Volumes to avoid hearing damage. ■ If you hear no sound during playback, do not turn the Volume up as the music may suddenly begin at a high Volume. Excessive sound pressure from earphones and headphones can cause hearing loss. 1. Turning on/off Connect the power cord to the wall outlet. Your TV Front/Left /Right Side View and Controls Right Side View VOL+ Adjusts the volume up and down. Selects the main menu item and change values for items when in the OSD mode. ▲▼ Scans up and down through channels. Selects sub-menu item when in the OSD mode. Page 13 Chapter Rear View and Jacks EARPHONE Connects to the external headphone for private listening. YPbPr IN /AUDIO(L/R) IN Connects to the DVD player, Digital Set-Top-Box, or other AV equipment with component(YPbPr) video and audio output jacks. HDMI IN Connects the all digital AV equipment with HDMI... Your Remote Control POWER S.MODE P.MODE CAPTION SLEEP P.SIZE JUMP MUTE VOL. INPUT GUIDE EXIT INFO MENU LIST FAV.CH TIMER FREEZE Turns the TV on and off. Cycles through the multi-channels TV sound (MTS) options: SAP/MONO/ STEREO S.MODE Selects sound effect options: Surround/ Live/Dance/Techno/Classic/Soft/Rock/ Pop/Off. Page 15 Chapter Installing the TV POWER S.MODE P.MODE CAPTION SLEEP P.SIZE JUMP MUTE VOL. INPUT GUIDE EXIT INFO MENU LIST FAV.CH TIMER FREEZE Effective range: The remote can control the TV from up to inch away, if pointed directly at the receiver. Chapter 2 Installing the TV Refer to the owner’s manual of any external equipment to be connected. When connecting any external equipment, do not connect any AC power cords to wall outlets until all other connections are completed. Connecting a TV Cable or an Antenna Antenna Connection The antenna requirements for good color TV reception are more important than those for a black &... Page 17 Chapter Installing the TV Use one of the following two diagrams when connecting an outdoor antenna. A: Shows how to use a VHF/UHF combination outdoor antenna. B: Shows how to use a separate VHF and/or UHF outdoor antenna. A. Combination VHF/UHF antenna B. Page 18 Cable TV (CATV) Connection This reminder is provided to call the CATV system installer’s attention to Article 820-40 of the National Electrical Code (NEC) that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building accurately, or as close to the point of cable entry as possible. Page 19 Chapter Installing the TV Use a supplied antenna cable to connect the TV signal to the TV’s TV CABLE terminal. Use the DC plug of the AC-DC adapter to the DC 12V port at the back of the TV. Press the MENU button on the remote control to display the Main menu, and use the ◀ buttons to select TV. Channel Scan Tuner Mode Cable Channel Skip Favorite List Time Zone Eastern Time Enter Connecting AV Equipment Use a HDMI cable to connect the AV equipment’s HDMI output jack to the TV’s HDMI IN jacks. Connect all AC power sources before turning on the power switch of the TV or other connected equipment. Connecting a PC Use a VGA cable to connect the PC’s VGA output jack to the TV’s VGA input jack. Use an audio cable to connect the PC’s audio output jacks to the TV. Using the Program Guide Press the INPUT button on the remote, then use the ▲▼ buttons to navigate through the program guide menu. The program guide feature provides information such as program title, duration, time remaining, rating, and closed caption availability. Operating the Menu Press the power button to turn the TV on. Press the MENU button on the remote control to display the main menu. Use the ◀ buttons to select a menu option and make adjustments as needed. Customizing VIDEO Settings Press the power button to turn the TV on. Press the MENU button on the remote control to display the main menu, then select VIDEO. Highlight an individual video option using the ▲▼ buttons and adjust settings using the ◀ buttons. Exit the menu by pressing the MENU button. Customizing AUDIO Settings Press the power button to turn the TV on. Press the MENU button on the remote control to display the main menu, then select AUDIO. Highlight an individual audio option using the ▲▼ buttons and adjust settings using the ◀ buttons. Exit the menu by pressing the MENU button. Press the power button to turn the TV on. Navigate to the Main menu using the MENU button, then select TV with ◀ buttons. Adjust settings for individual options using ▲▼ buttons, change with ◀ buttons, and exit with the MENU button. The Favorite List allows selection of regional TV systems, including USA: Eastern Time/Time Zone, Indiana/Central time/Mountain Time/Arizona/Pacific Time/Alaska/Hawaii. Select channels with the ▼ button and shows with repeated OK button presses. In the SETUP menu, select analog or digital closed caption modes and Closed Caption. Adjust display settings for gamma correction and brightness, and fine-tune red/green/blue ratios: Bright/Middle/Dark. The Parental block menu includes options for U.S. TV Ratings (Content-Based Rating and Age-Based Rating), Canadian English Ratings, and U.S. Movie Ratings. Select ratings to activate or block programs with ▶ buttons and OK button presses. The provided text outlines the user manual for an LED TV model E2SW5018. It covers various topics including troubleshooting, specifications, and safety instructions. Troubleshooting: The text provides a chart to help identify possible causes of issues with the TV and potential solutions. Specifications: The document lists technical details such as panel size, brightness, contrast ratio, resolution, input connector options, and power consumption. Display Mode: The screen resolution has been optimized for specific display modes. It's recommended to adjust the screen resolution according to the system signal mode to avoid video issues. Safety Instructions: The manual emphasizes the importance of reading and keeping the instructions, adhering to all warnings and following operating guidelines. Key safety tips include: - Not using the TV near water or moisture - Cleaning with a dry cloth only - Avoiding blockage of ventilation openings - Installing according to manufacturer's instructions - Protecting the power cord from damage - Using only specified attachments/accessories - Referencing servicing to qualified personnel for damaged units. Please ensure the unit is stored in a well-ventilated area and avoid exposure to rain, moisture, or direct sunlight, which may cause damage. Keep objects filled with liquids away from the device. Do not touch battery compartments with bare hands as they can be hazardous. Always unplug the TV during thunderstorms or if it's not in use for an extended period. Never allow water to enter the TV or power adapter. Safety Precautions: • Don't obstruct ventilation slots in the back cover. Place your TV in a cabinet with at least 5cm (2") clearance around it. • Avoid touching or shaking the screen, as this may damage internal circuits. Treat your remote control with care. • Clean the TV using a soft, dry cloth only. Never use solvents or petroleum-based fluids. • Keep your TV away from heat sources like radiators, stoves, and amplifiers that produce heat. • Ensure you don't defeat the safety purpose of the polarized or grounding-type plug. • Protect your power cord from being stepped on or pinched, especially at plugs. Unplug the apparatus during lightning storms or when unused for long periods. Servicing: • Refer all servicing to a qualified service technician. Servicing is required if your TV has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has spilled on it, objects have fallen into the TV, or it's been exposed to rain or moisture. • Always connect your TV to a power outlet with protective grounding. What's Included: • Front View: Switch between On/Standby mode using the buttons. Use CH +/- and VOL +/- to navigate channels and adjust volume. The LED light indicates when the TV is activated, and the IR Infrared Receiver is also included. • Rear View: Wall Mounting Warning - Never place your TV in an unstable location, as it may fall and cause injury or death. To avoid this, use recommended cabinets or stands and ensure your TV doesn't overhang the edge of supporting furniture. Preparations: • Remote Control: Use the remote control to turn on/off your TV. • Connecting External Devices: Follow the setup instructions for connecting external devices. • Turning On/Off Your TV: Connect the power cord, then press the button on the main unit or remote control to enter Standby Mode. To completely turn off the TV, disconnect the power cord. Initial Setup: (Note: The text continues beyond this point) Here's a rewritten version of the text: When you turn on your TV, it will automatically take you to the Setup Wizard. Use the arrow buttons to choose your preferred mode and press OK to confirm. Customizing Your TV Settings: To switch between different input sources like TV, AV, component, HDMI, VGA, or USB, press the SOURCE button on the remote control or main unit. Then, use the arrow buttons to highlight your desired source and press OK. Channel Selection: Use the CH/CH buttons on the remote control or main unit to quickly change channels. Alternatively, press the 0-9 buttons to select a channel directly. You can also enter a specific channel by pressing "4", then "5" for example, to reach channel 45. Volume Adjustment: Adjust the volume using the VOL +/- buttons on the remote control or main unit. If you want to mute the sound, press the MUTE button again to turn it off and resume by pressing the VOL + button. Customizing Your TV Settings (continued): Stream your favorite shows and movies with apps like Netflix, YouTube, Vudu, and more. Visit elementelectronics.com for a full list of available apps. Media: Access photos, music, and videos on your connected devices through the MY MEDIA menu. Viewing Photos: After selecting a photo file, use the arrow buttons to view individual pictures. The picture function bar will appear while the photo is playing, allowing you to select desired functions. TV Settings: Customize your TV settings by navigating to the main interface and highlighting TV Settings. Adjust options like general picture settings or audio settings as needed. SOUND MODE: Enable audio enhancement modes for an improved listening experience. Standard settings for audio output include: - BASS: controlling low pitched sounds - TREBLE: controlling high pitched sounds - BALANCE: adjusting speaker volume in multi-speaker systems - DIGITAL AUDIO OUTPUT: selecting between PCM and RAW modes - SURROUND SOUND: turning On/Off to enhance listening experience - AUTO VOLUME: turning On/Off for automatic volume control - AUDIO LANGUAGE: choosing from English, French, Spanish Network settings can be adjusted by: - Pressing MENU to access the main interface - Using Arrow buttons to select TV SETTINGS and confirming with OK - Selecting NETWORK to adjust options - Choosing Wired or Wireless network connection - Displaying current network and IP address information The LOCK menu offers a 4-digit password for security, which can block undesirable programming from appearing on the TV. Parental Control allows users to restrict programming based on viewer ratings, with options including: - General Audiences and Children blocks - Rating systems such as MPAA and TV Parental Guidelines - Additional content restrictions in the Content Block menu Before setting up Parental Control, consider: - Choosing acceptable ratings for viewers - Blocking auxiliary video sources entirely or partially - Selecting allowable content based on individual parameters To activate Parental Control, you can toggle it on and off with the Lock On/Off option. Different viewing restrictions can be set for general audiences and children simultaneously. However, specifying one content block does not automatically restrict other programming from video sources. Leaving AUX Inputs unblocked may still allow certain programs to appear despite specified ratings. Parental Control cannot be disabled by simply disconnecting the TV's power source. Block hours will reset if power is restored, unless another electronic device is connected and causing interference. If you experience issues with your TV not turning on or displaying an incorrect picture, check the following troubleshooting steps: Possible TV issues include problems with picture brightness, horizontal/vertical bars, or shaking images due to local interference from appliances or tools. Blue screens may be resolved by selecting the correct source, while poor reception on some channels could be caused by station or cable issues. Lines or streaks in pictures are often addressed by adjusting the antenna direction, and no output from one speaker can be fixed by rebalancing it in the menu option. In cases of VGA mode problems, signal range may need to be adjusted along with checking the signal cable connection and input source. Vertical bars or strips on the screen, horizontal noise, and incorrect position can be resolved by setting auto configure or adjusting clock, phase, or H/V position. Unstable screen colors or a single color issue could stem from signal cable problems or reinstalling the PC video card. Regular TV maintenance is crucial for preventing early malfunctions. This includes careful and regular cleaning to extend its lifespan. It's essential to turn off the power, unplug the cord before any cleaning process, and avoid placing the TV in areas with extreme temperatures. Ideal storage temperatures range from 32° to 122°F (0° to 50°C), while working temperatures should be between 32° to 95°F (0° to 35°C). Never place the TV directly under sunlight or near a heat source, and ensure there's at least 5cm distance for sufficient ventilation. Also, avoid impeding the ventilation openings with objects or placing naked flame sources nearby. For cleaning purposes, use a soft cloth with a mixture of lukewarm water and fabric softener or dish washing detergent to gently wipe the screen without any excess water, then let it air-dry before turning on the TV. Uses and generates radio frequency energy but, unfortunately, does as well.