

I'm human





**\*\*VIZIO TV User Manual\*\* \*\*Safety & Certification\*\*** Congratulations on your new VIZIO TV! Before using your TV, please read these safety instructions carefully. To ensure safe operation, follow these safety guidelines: • Never overload power strips and extension cords, as this can cause a fire or electric shock. • Avoid touching the connector with your hands, as this can lead to electric shock. • Install the wall socket near your TV and make sure it is easily accessible. • Only use the specified voltage for your TV, as using any other voltage can cause a fire or electric shock. **\*\*TV Antenna Connection Protection\*\*** If you plan to connect an outside antenna or satellite dish to your TV, make sure it is electrically grounded to provide protection against voltage surges and static charges. **\*\*Table of Contents\*\*** 1. Getting to Know Your TV 2. Setting the Timer 3. Using the Info Window 4. Front Panel 5. Rear Panel The TV has various ports for connecting different devices, including: - HDMI (Connects an HDMI device) - Component/Composite (Connects a component or composite device) - Audio Out (Connects to an RCA device or sound bar) - Coaxial (Connects to a coaxial cable from cable, satellite, or antenna) - USB (Connects a USB thumb drive for photo, music, or video playback) - Optical Audio Out (Connects to an optical/SPDIF audio device) - Ethernet (Connects an Ethernet cable to a modem/router) **Power Port:** Press to turn on the TV. For connecting devices: 1. Verify the device's port matches the TV's available ports. 2. Connect the appropriate cable and turn both devices on. 3. Set the TV's input to match the connection used. D24H-G9 has additional requirements for Composite In/AV In, which require adapters not included with the device. For audio output: 1. Verify the device's audio port matches the available ports on the TV. 2. Connect the appropriate cable and turn both devices on. Wall-mounting instructions are provided separately. Using the remote control: - Replace batteries by prying open the back cover using a coin. - Input: Changes the displayed input - Power: Turns the television on/off - App Launcher: Quickly launches a pictured app - Exit: Closes the on-screen menu • Before setting up your TV, ensure it's installed, powered on, and connected to a stable electrical outlet. • Have your wireless network password ready if you're connecting wirelessly. • Connect an Ethernet cable to the TV's Ethernet port for wired connections. **Ramp Test Pattern Off 2:** Use the remote's Arrow buttons to highlight Off and select a color for the ramp test pattern, which displays immediately. **Audio Settings:** Adjust Lip Sync for display-image audio synchronization or choose Digital Audio Out options (Auto, PCM, Dolby D, or Bitstream). To access audio settings, press Menu > Audio. **Network Settings:** Your TV features Ethernet and Wireless-N (for certain models) connectivity. Connect via Ethernet cable or set up a wireless network by unplugging the cable. Connect to a Hidden Network: Enter your network name (SSID) and password using the on-screen keyboard to connect. **Timers:** Set the Auto Power Off feature to turn off after 10 minutes of inactivity, and deactivate if desired. Use the Blank Screen feature to turn the TV off while audio streams. **Setting Up Channels:** Scan for channels and remove weak or unwanted ones with the Skip Channel feature. **Find Channels:** The TV may need to scan for channels before displaying programs and information. **Listening to Alternate Audio:** Enable Digital Language by selecting Secondary Audio Programming (SAP) for alternate language audio in some analog over-the-air and cable channels. Not all programs support SAP. 1.3 Using Parental Controls The parental controls on the TV allow for blocking certain channels or programs without a password, while other devices may have their own settings. 2. **Setting Up Closed Captioning** To manage program content according to its rating, Program Rating feature must be enabled. Typical options include: opaque background and transparent window, where only a strip of background appears behind the text as it expands. 3. **Renaming Devices on Input Menu** Input names can be renamed to make them easier to recognize on the input menu. 4. **Changing TV Settings** The SYSTEM menu allows for: - Checking for updates - Viewing system information - Changing the on-screen menu language - Setting time zone and local settings - Adjusting CEC settings - Adjusting power mode settings 5. CEC Settings CEC function enables controlling devices connected to HDMI (ARC) input with the included remote, without programming. TV is set to Eco Mode by default, using less than 0.5W of power when powered off. 6. **Managing Mobile Devices and Accessibility Settings** The TV can be paired with a mobile device for easy control across multiple devices. Naming your TV helps differentiate it from other cast devices in the home. **VIZIO TV Accessibility Features** ===== Your new VIZIO TV offers several accessibility features to help you get the most out of it. Here's how to use some of these features: **Editing TV Name** ----- • Using the Reset & Admin Menu: Press the Menu button on the remote or use the Arrow buttons to highlight System and press OK. This will allow you to restore the TV to its factory default settings and access other system settings. **Setting a System PIN** ----- • Using the USB Power Feature: You can set a System Pin to lock content and picture modes as well as prevent accidental system resets. To create a PIN, go to the SYSTEM menu and select "Set System PIN Code". Follow the on-screen instructions to enter your desired PIN. **Charging Devices via USB** ----- • The USB port can be used to charge devices. • Option 1: Press the Menu button on the remote to access the on-screen menu. Select "USB Power" and follow the prompts. • Option 2: Use the Arrow buttons to highlight "USB Power" and press OK. **SmartCast TV** ----- • SmartCast TV lets you discover, stream, and control your content like never before. • Access top apps like Netflix more easily using the included remote to browse and launch content directly from the big screen. • Discover new shows and movies with SmartCast TV's intuitive interface. **Playing USB Media** ----- • The USB Media Player allows you to connect a USB thumb drive to your TV and play music, video, or photos. • To display USB media, save your videos onto a USB thumb drive and format it as FAT32. Only support file extensions (.mp3, .jpg, etc) are allowed. **Connected Sources** ----- • Displays connected USB devices. • Use the remote to navigate and highlight specific devices. **Looking at the remote control, press OK to return to the left column.** The current folder displays the folder path, while photo connected sources show connected USB devices. The options include USB1: Current Folder root, Start Fullscreen Slideshow, Sort by Date or File Name, and View Thumbnails/Folders. The folders contain A.jpg, B.jpg, C.jpg, D.jpg, E.jpg, F.jpg, G.jpg, H.jpg. Additionally, troubleshooting and technical support are available. You can find answers at SUPPORT.VIZIO.A or take a moment to register your product at VIZIO.COM/PRODUCT-REGISTRATION. **Registration** is recommended as it offers customized support with information on hand. **News & Offers** are also available from SmartCast TV. To resolve issues, check the troubleshooting guide for the remote not responding or no sound. This includes ensuring batteries are properly inserted and pressing volume up or mute buttons accordingly. To download the VIZIO SmartCast App, ensure your phone or tablet is connected to Wi-Fi and follow on-screen instructions. **Channel Inputs** can be disabled by pressing the input button on the back of the TV or basic remote. The Federal Arbitration Act prevails over arbitration and jurisdiction rules. Consent is required to disclose any arbitration information without prior written consent from you or VIZIO. Software licenses are subject to software license agreements and your use of this product is governed by VIZIO's privacy policy, which may be updated. Copyright 2018 VIZIO INC. ALL RIGHTS RESERVED. Ensure batteries are inserted according to guidelines to avoid damage. Incorrect battery polarity may cause leakage, harming the remote or operator. Keep batteries away from excessive heat sources like sunlight or fires. If issues arise, contact the dealer: - Power cord damage - Liquid spills or dropped objects - TV exposed to rain or moisture - TV drop or damage - Substantial performance changes Prevent exposure to liquids and avoid placing objects on the TV. Use the mains plug as a disconnect device and keep it accessible. **\*\*CAUTION\*\*** Only qualified service personnel should perform repairs. Avoid servicing unless qualified, to prevent electric shock. The lightning symbol indicates hazardous voltage inside the product, which may cause electrical shock. **\*\*WARNING\*\*** Prolonged exposure to loud sounds can damage hearing. Take precautions to avoid permanent damage. **Install TV safely** - Securely anchor it to prevent movement - Store accessories out of children's reach - Follow manufacturer recommendations for cabinets and stands The American Academy of Pediatrics advises against television viewing for children under two years old. **\*\*WARNING\*\*** Never place a TV in an unstable location, as it may fall and cause serious injury or death. Preventing injuries: - Use recommended cabinets and stands - Ensure furniture can support the TV safely - Keep the TV away from overhanging edges - Avoid placing the TV on fragile materials - Educate children about furniture climbing hazards **Thank you for choosing VIZIO and congratulations on your new TV!** To get the most out of your product, read these instructions before using it and keep them for future reference. Make sure to check the package contents for any missing or damaged parts. To purchase accessories or installation services, visit our website at [www.vizio.com](http://www.vizio.com) or call toll-free (877) 698-4946. We recommend registering your VIZIO product on our website. Extended warranties are available for peace of mind and to protect your investment beyond the standard warranty period. Visit [www.vizio.com](http://www.vizio.com) for more information. When reading this manual, pay attention to symbols indicating important warnings or notices. **Important safety instructions:** • Always switch off the power before connecting other components to your TV • Read these instructions carefully • Keep them in a safe place for future reference • Heed all warnings and follow all instructions • Don't use your TV near water or block any ventilation openings • Clean only with a dry cloth and avoid installing it near heat sources • Use only the provided plug to avoid electrical shock • Protect the power cord from being walked on or pinched • Only use attachments specified by the manufacturer • Unplug your TV during lightning storms or when unused for long periods of time Refer all servicing to qualified service personnel if your TV has been damaged in any way. **Ground Clamps (NEC Section 810-20)** are used to protect TV Antennas from voltage surges. The clamps ensure that the mast is properly grounded, preventing damage from electrical charges. According to the National Electrical Code, it's essential to follow specific guidelines for grounding conductors and connection to grounding electrodes. When installing an outside antenna or satellite dish, make sure it's electrically grounded to protect against voltage surges and static charges. Article 810 of the NEC provides information on proper grounding procedures, including the size of grounding conductors, location of the antenna discharge unit, and requirements for connecting to grounding electrodes. **Grounding Conductors (NEC Section 810-21)** are crucial in ensuring the safety of TV Antennas. The code requires that these conductors be sized according to specific guidelines, taking into account factors such as the length of the lead-in wire and the type of antenna discharge unit used. Failure to properly ground the mast and supporting structure can result in damage from electrical charges. The Power Service Grounding Electrode System (NEC ART 250, part H) is responsible for protecting against voltage surges and static charges. This system involves connecting the grounding electrode to the service equipment and ensuring that it's properly bonded to the grounding conductor. TV Antenna Connection Protection requires careful consideration of the National Electrical Code guidelines. By following these guidelines, you can ensure the safe installation of your TV antenna and protect against electrical damage. **\*\*TV Safety and Maintenance\*\*** To safeguard your TV, ensure it's protected during lightning storms or when unused. Simply unplug the TV from the power outlet and disconnect any cables or antennae. **\*\*Safe Antenna Placement\*\*** When positioning your antenna, avoid placing it near overhead lights or power circuits to prevent accidental falls into these areas. Remember, coaxial cable screens should be connected to earth in building installations. 1. Parental controls allow you to limit what your kids can watch on TV. 2. You can lock or unlock channels depending on their age rating. 3. The parental control menu is found under settings. 4. To access the parental control menu, go to settings > parental controls. 5. From there, you can change the TV settings and set up closed captioning. Registered trademarks and/or trademarks of DTS, Inc. in the United States and/or other countries. c. DTS, Inc. All Rights Reserved. For DTS patents, see . Manufactured under license from DTS, Inc. DTS, the Symbol, DTS and the Symbol together, and DTS Studio Sound II are registered trademarks and/or trademarks of DTS, Inc. in the United States and/or other countries. c. DTS, Inc. All Rights Reserved.\* Only available on D50x-G9 and V505-G9Page 7 2018 VIZIO INC. ALL RIGHTS RESERVED.180815DL Page 1 D-Series \*\* User Manual Scan to learn more. Models: D24hJ09, D24fJ09, D32hJ09, D32fJ04, D40fJ09 & D43fJ04 ... View VIZIO Privacy Policy / . . . . . Page 3 **Safety & Certification** • **CAUTION:** Always use a power outlet that is properly grounded. **THANK YOU FOR CHOOSING VIZIO IMPORTANT SAFETY INSTRUCTIONS** Your TV is designed and manufactured to operate within defined design limits. • Unplug this TV during lightning storms or when unused for long periods of time. And congratulations on your new VIZIO TV! Misuse may result in electric shock or fire. To prevent your TV from being damaged, • When moving your TV from an area of low temperature to an area of high temperature changes may cause condensation in the housing. Wait before turning on your TV. Read the following safety instructions before operating your product, and retain them for future reference. Be sure to inspect the package carefully to avoid causing fire, electric shock, or component damage. Keep these instructions in a safe place for future reference. contents should be checked regularly to ensure there are no missing or damaged parts. • A distance of at least three feet should be maintained between your TV and any heat source, such as a radiator, heater, oven, amplifier, etc. Do not install your TV before connecting other components to your TV. **PRODUCT REGISTRATION** close to smoke. Operating your TV close to smoke or moisture may cause fire or electric shock. Heed all warnings. To purchase or inquire about accessories and installation services for your VIZIO product, visit our website at [vizio.com](http://vizio.com). ... Page 4 • If any of the following occurs, contact the dealer: • ALWAYS educate children about the dangers of climbing on furniture to reach the television set or its controls. - The power cord fails or frays. • ALWAYS route cords and cables connected to your television so they cannot be damaged. Do not attempt to repair or service your TV yourself. Opening or removing the back cover may expose you to high voltages, electric shock, and other hazards. If tripped over, pulled Never place a TV in an unstable location or expose it to rain or moisture. Do not drop or damage the TV in any way, and keep it away from water if it's been exposed. If your TV is damaged, contact your dealer for servicing. To prevent electrical shock or fire, ensure proper anchoring of both furniture and the TV itself on tall surfaces like bookcases or cupboards. When connecting an outside antenna or cable system to the TV, make sure it's electrically grounded for protection against voltage surges and static charges. Unplug the TV during lightning storms or when left unattended, and disconnect the antenna or cable system according to NEC Section 810-20. Avoid locating antennas near overhead light or power circuits, and keep them away from falling into such lines or circuits. Given article text here The provided text appears to be a user manual or instruction guide for a television device, specifically detailing its features and how to use it. Here are some key points from the text: • The device is manufactured under license from DTS, Inc. and Dolby Laboratories. • It has various ports, including HDMI, Composite, and Optical, which can be used to connect different devices such as soundbars, receivers, and game consoles. • To use the remote control, aim it directly at the sensor on the front panel of the TV. • The power indicator flashes on when the TV turns on and goes out after several seconds. • To turn off the TV, press and hold the power button for 5 seconds. The text also covers how to connect devices to the TV using various cables, including HDMI, Composite, Coaxial, and Optical. Additionally, it provides instructions on how to wall-mount the TV, including choosing the right mount and ensuring that it can support the weight of the TV. Overall, the text is designed to help users understand how to use and configure their television device. 1. Remove old screws from wall mount by loosening and taking them out. 2. Attach TV and wall mount to wall as instructed, using a UL-listed bracket that can hold TV weight. 3. Tip: Get help when lifting TV to avoid injury or damage. 4. Do not use included screws for mounting TV in walls. 5. Properly dispose of batteries according to local laws and regulations. 6. Keep remote control batteries away from children. 7. Use VIZIO and Google terms of service by pressing "Accept All" on device. 8. Change input source by opening on-screen menu with MENU button, then press INPUT button to select desired input. 9. Adjust picture settings like color temperature, audio, network, and TV channel settings through on-screen menu. 10. Return to previous menu screen at any time using BACK button. The TV offers various navigation buttons to adjust picture settings. For backlight, users can fine-tune LED brightness for optimal brilliance. To modify picture mode settings, navigate to Menu > Picture > Picture Mode Menu and select Color Temperature. To enhance contrast, use the Navigation buttons on the remote to highlight Contrast and adjust the white level of the picture accordingly. Vivid setting produces brighter images with reduced detail loss in dark or bright areas, while Warm produces an orange-hued picture and Cool a blue-hued one. Color settings allow users to adjust color intensity, and Bright is ideal for everyday TV viewing. Changing the Picture Aspect Ratio involves navigating to Menu > Picture > Picture Aspect and selecting from options such as Film Mode (for optimal film watching), Normal (default), Black Detail (for larger brightness areas), Panoramic (to fill 16:9 screens with an algorithmic stretch), Edge Enhancement (for smoother edges), Color Calibration (for precise color calibration), and Wide (for aspect ratio stretching). Additionally, Local Contrast adjustments allow for localized contrast control. The Color Tuner Settings section enables users to show or hide the Flat Test Pattern for color management system settings. Color Tuner settings allow you to customize color management. Use remote buttons to select hue, saturation, white balance, turn off color channels for testing, and display SMPTE patterns. Press OK to save changes. Adjust value using left/right navigation buttons when finished. To access the color tuner table: press OK after selecting picture mode, advanced picture, color calibration, and then color off. Note that manual color calibration requires specialized training, an input with precisely set colors, and a light meter. Custom picture modes allow you to save a group of customized settings for different picture viewing conditions and video sources. To create one, go to Menu > Picture > Input Picture Settings > Save Picture Mode. You can use the Navigation buttons to highlight and change the settings you want. Here are some key features: • Custom picture modes allow you to configure display size and position. • You can save a custom picture mode using the "Save Picture Mode" option. • Color Space Range lets you select the color space for your source, with options for YCbCr or RGB (depending on your device). • Copy Picture Mode copies settings from one custom picture mode to another. You can also copy and apply these settings to other inputs. • If you're done making changes, don't forget to save them. To lock all custom picture modes, go to Menu > Picture > Lock Picture Mode > On. You'll need to enter your system PIN code to do this. If you want to delete a custom picture mode, select the Delete button on the corresponding menu page. Additionally, you can adjust audio settings such as Talk Back and surround sound. For example, if you're using a VIZIO sound bar, you might want to set it up with the CEC settings under the SYSTEM menu. You can enhance your TV's sound by selecting AC-4 Bass and improving dialogue clarity. To adjust network settings, start by testing your connection. You can find the TV's MAC Address under Manual Setup, then scroll down to the bottom of the list. To test your network connection: Go to the Network menu > Test Connection, and fill in the IP Address fields with four sets of numbers (e.g., 192.168.0.1). Your subnet mask is also located here, represented by another set of four numbers. If you're connected using an Ethernet cable, you won't see the wireless network connection options. To set up a wireless connection, unplug the Ethernet cable first. Once disconnected, enter your access point name in the preferred DNS server field. When setting up TV channels, you can scan for available channels and skip any unwanted ones. After scanning, you might find that some channels are too weak or you don't want to watch them. To remove these channels from memory, use the Skip Channel feature. If you move your TV to a new location with different channels, it will need to rescan. For digital audio, you can select a preferred language or enable video description for programs that support it. Note that not all programs have secondary audio programming (SAP). The Analog Audio Language feature only works when SAP is being broadcast by the program. Also, keep in mind that not all channels offer stereo sound, and some may use SAP for audio in different languages. Mono mode in the TV's parental controls allows all speakers to produce the same sound, without any distinction between left and right sounds. Setting up Parental Controls: To block or unblock a rating type, use the Navigation buttons to highlight it and press OK. When a channel is locked, it cannot be accessed. Locking a channel is useful for preventing children from viewing inappropriate material. **Accessing Parental Controls Menu:** 1. Set up a system PIN code by navigating to Menu > TV Channels > Parental Controls > Enter in PIN. 2. To block all unrated content, highlight Block Unrated Shows and use the Navigation buttons on the remote to select On. 3. The Lock icon appears locked when a channel is blocked, and unlocked when it's unlocked. **Accessibility Settings:** 1. To access the Accessibility menu, navigate to Menu > Accessibility. 2. To change the appearance of digital closed captions, navigate to Menu > Accessibility > Captions > Digital Style. 3. To activate or deactivate Close Captions for current content, select the desired option in the Digital Style menu. To personalize your viewing experience, navigate to page 26 of the Talk Back section. From there, use the Up/Down Navigation buttons on your remote control to highlight the setting you want to adjust. You can choose from several options, including opaque background and transparent window settings. These settings affect how text appears behind the captioning text. The default "As Broadcast" mode displays only a strip of background behind the text, which expands as more text becomes visible. For further customization, you can also experiment with changing font styles for closed captioning text. This includes adjusting text size, color, and opacity to suit your preferences. For instance, if you want larger or smaller text, you can use the Text Size setting. Similarly, you can change the text color by selecting from a range of options. When it comes to system settings, you have several choices to make your TV more user-friendly. You can adjust the on-screen menu language to suit your preferred language. To do this, go to Menu > System > Language and select your desired language. Additionally, you should set your TV's time zone accurately by navigating to Menu > System > Time > Time Zone. Another important setting is Daylight Saving Time (DST). If DST is enabled in your region, you'll want to make sure it's turned on for accurate timing. To do this, go to Menu > System > Time > DST and toggle the switch to enable DST. Don't forget to save your changes by pressing OK. Your TV also allows you to rename devices connected to the input menu. This makes it easier to recognize which device is currently active. For example, if you have a DVD player connected to HDMI-1, you can rename that input to "DVD Player." To edit an input name, go to Menu > System > Input Name and select the device you want to rename. Finally, consider changing your TV's power mode to balance energy efficiency with performance. Your TV is set to Eco Mode by default, which uses less than 0.5W of power when the TV is powered off. If you prefer a faster startup time or want to turn on your display when it's connected to another device, switch to Quick Start Mode instead. To make these changes, navigate to Menu > System and select the setting you want to adjust. Some settings may require additional steps, such as entering a custom name for your TV or renaming an input device. Start Mode and press OK. ... Using USB Power Feature, TV is set to turn off after 10 minutes without signal. Turn indicator light On or Off. Auto Power Off can be deactivated. Always On - power always available; Off When TV Off - power only available when TV is on. Use the Blank Screen Feature to save LED life. Set Timers to turn TV off after a set period. Setup sleep timer... Enter PIN > Save. Pair VIZIO Voice Remote using USB dongle attachment. Reset TV to factory settings by entering system PIN code and following prompts. Enable or disable viewing data, personalize advertising choices, and view VIZIO Privacy Policy. Access support code for customer service assistance. Note: This rewritten text maintains the original meaning and applies a rewriting method based on the given probabilities (40% for SE, 30% for NNE, 30% for IB). To turn off personalized ads on your VIZIO TV, go to the Menu > Admin & Privacy > Viewing Data and toggle it from "On" to "Off". This will prevent advertisers from using your viewing data to deliver targeted ads. You can also disable Ad Replacement, which replaces standard ads with personalized ones in Linear TV. If you're having trouble enabling or disabling Viewing Data, contact VIZIO Customer Support for assistance. When enabled, ACR technology collects information about the audio and video programming content on your internet-connected display unit, including broadcast television, advertisements, and other commercially available content. This data is associated with your IP address and a unique device number. VIZIO shares this viewing data with third-party advertisers and publishers to help them create more relevant content recommendations. However, you can change your Viewing Data settings at any time within the Settings Menu of your TV without affecting its functionality. To access additional features on your VIZIO TV, use the INFO button to display information about your TV's current input or channel, picture resolution, and network name. You can also launch content with one click using the Marquee Content feature and discover new shows, movies, and more on popular streaming apps like WatchFree+. VIZIO WatchFree+ offers a vast range of free entertainment options, including news, movies, sports, comedy, and music. To access these channels, simply press the WatchFree+ button on your remote and navigate through the intuitive on-screen guide. With hundreds of live TV channels to choose from, you're sure to find something that suits your taste. To display USB media, connect a formatted FAT32 flash drive to the TV and select the content you want to play using the navigation keys on the remote. The TV will recognize the USB and allow you to view music, videos, or photos. This area displays the contents of the currently selected folder. You can browse among files using Curr the row and OK buttons on the remote. A.jpg B.jpg C.jpg root ulscr Start Slideshow Sort: Name AZ older View: Thumbnails D.jpg E.jpg F.jpg djs setting Settings Browse Music ... Page 40 Product Registration and Support Get helpful tips and register your TV. Scan with your phone camera or QR reader. Customized Support Get live assistance quickly with your information on hand . News and Offers Take advantage of the latest news and special offers from VIZIO . Updates and Enhancements Stay up-to-date with important product updates and notifications . More questions? Find answers at: SUPPORT.VIZIO.COM ... Page 41 The remote is not responding. Where do I find information on the accessibility features of this product The TV image does not cover the entire screen, and other VIZIO products? Please ensure proper battery insertion matching the and + symbols. Visit [vizio.com/accessibility](http://vizio.com/accessibility) for picture aspect ratio information. Replace batteries with fresh ones, or contact [Accessibility@vizio.com](mailto:Accessibility@vizio.com) or call 18776984746. The TV displays "No Signal." Your HD TV is precisionmanufactured using an extremely high level of technology. However, sometimes pixels may not display correctly due to inherent product issues. These occurrences are normal and do not constitute a defective product. If you are streaming apps like Netflix to your VIZIO SmartCast Home "... Help Topics I see "noise" or static on the screen. How do I connect to my WiFi network? The television will not turn on using Alexa or Google Assistant. When digital capabilities exceed a digital broadcast signal, the signal is upconverted. This can sometimes cause irregularities in the image. Ensure your TV's wireless name and password are correct. Tap on Menu > System > Power Mode > Quick Start to ensure Quick Start Mode. If you are using an antenna, move it closer to the TV or around the room for a stronger signal. Select your WiFi network from the list, enter the password, and tap on Settings icon > Network > Wireless Access Points to confirm connectivity. Given article text here 1. When watching content on your TV, press the INFO button on the remote or VIZIO SmartCast Mobile app to view the current resolution and video version displayed. 2. To exit Demo Mode, press and hold the INPUT button on the back of the TV for a few seconds until it shows as a Dolby Vision icon. 3. The TV remembers the viewing mode for each input source, but if you switch to a new source with different settings, you may need to re-enter the demo mode. 4. The TV's specifications include a 24", 32", and 43" screen size range, with varying viewable areas and dimensions without and with a stand. 5. To ensure safe operation, this device complies with Part 15 of the FCC Rules and Industry Canada's license-exempt RSSs, and must be used in accordance with the manufacturer's instructions to avoid interference or harm. 6. The TV operates on a no-protection no-interference basis, but users are responsible for providing reasonable protection against harmful interference and may need to obtain additional licenses for certain uses. This equipment from Cet is compliant with Canada's Industry Standards for licensing exemptions as per the Canadian National Radio (CNR) regulations. However, it does not guarantee that its functionality will not cause harmful interference to radio communications or other electronic devices. If this device causes any disturbance in your television or radio reception, you should try turning it off and on again. Operating this product is restricted to indoor use only for the 5GHz models. The FCC/ISED has set radiation exposure limits, which this equipment complies with. For non-commercial purposes, VIZIO offers a one-year warranty from the date of original purchase. If you're using this product commercially, the warranty covers ninety days from the date of initial purchase. Any dispute or claim concerning your VIZIO product must be settled through individual arbitration rather than in court. This includes any controversy that may arise during download processes for applications not covered under this warranty. VIZIO reserves the right to charge extra fees for trademark, trade name, and service mark usage by other languages. Contact information like Email: [Accessibility@vizio.com](mailto:Accessibility@vizio.com) or Phone: 1-877-698-4746 might be subject to change without notice. This User Manual is for reference purposes only, specifically regarding non-VIZIO products. VIZIO doesn't control third-party apps on the included IR remote and assumes no liability for their availability or interruption. Additional terms apply to these apps, including subscription fees, internet service, and device capabilities affecting 4K or HDR features. Battery Disposal: Proper disposal is crucial; do not throw away batteries in a fire or with regular trash as they might explode. Replace them with recommended equivalents by VIZIO for safe disposal. Product specifications, functionality, design, and other information are subject to change without notice, and VIZIO isn't responsible for errors. Visit [vizio.com/environment](http://vizio.com/environment) for more on recycling and battery disposal guidelines.