

I'm not a bot



Lavastoviglie atlantic atinr.d14a manuale

Lavastoviglie atlantic atinr.d14a+ manuale.

Prima di utilizzare la lavastoviglie: - Leggere attentamente le istruzioni per l'uso e la guida di consultazione. - Dopo aver tolto l'imballaggio, verificare che la lavastoviglie non abbia subito danni durante il trasporto e che la porta chiuda perfettamente. - Il materiale d'imballaggio deve essere tenuto fuori dalla portata dei bambini in quanto potenziale fonte di pericolo. - Tutti gli allacciamenti alla rete idrica ed elettrica devono essere eseguiti da personale qualificato sulla base delle istruzioni fornite dal costruttore. Utilizzare la lavastoviglie solo a scopo domestico e per gli usi previsti: - Non risciacquare le stoviglie sotto acqua corrente. - Utilizzare sempre la lavastoviglie a pieno carico oppure, se si è riempito solo un cestello, selezionare il programma di lavaggio a mezzo carico (se disponibile). Smaltimento: - Il prodotto è stato fabbricato con materiale riciclabile. - Al momento della demolizione, procedere seguendo le normative locali per lo smaltimento dei rifiuti. Sicurezza per bambini: - Non permettere ai bambini di giocare con la lavastoviglie. - Conservare il detersivo, il brillantante ed il sale in un luogo asciutto, fuori dalla portata dei bambini. Consigli generali: - La porta aperta può sostenere solo il carico del cestello estratto, stoviglie comprese. Non utilizzare la porta aperta come base di appoggio e non sedersi né salire sulla stessa: la lavastoviglie potrebbe capovolgersi! - Non usare solventi nel vano di lavaggio: pericolo di esplosione! La sostituzione del cavo di collegamento alla rete deve essere effettuata da un tecnico specializzato, dopo aver acquistato uno nuovo uguale presso il Servizio Assistenza. When setting up your dishwasher for the first time or when the water hardness changes: * Adjust the selector to the correct position by rotating it with a screwdriver. The selector is located on the inside of the door, above and to the left. * Refer to the table below to determine the correct position. + If the water hardness falls into Category 1 (soft), do not use salt. Only use salt designed for dishwasher use! * Important: Do not fill the salt reservoir with substances other than salt, as this can damage the appliance. To set up your dishwasher: 1. Remove the lower basket. 2. Unscrew the cap by rotating it to the left. 3. For the first use only, fill the water reservoir to the top. 4. Fill the salt reservoir to the top (with approximately 1.5-2 kg of salt) and mix with a spoon handle. 5. Replace the cap by rotating it to the right. 6. Insert the lower basket. 7. Immediately run a washing cycle after filling the salt reservoir to remove any excess salt solution. To check the salt level: * The dishwasher has an electric or optical indicator to show when the salt reservoir needs to be refilled. + Electric indicator: A light on the control panel will turn on when it's time to refill the salt reservoir. + Optical indicator: When the salt reservoir is full, a float will rise and become visible through a window on the cap. The float will sink below the surface when the reservoir needs to be refilled. Water hardness categories: * Grado di durezza (German) / degré de dureté (French) + 1: dolce (soft) - 0-5 °dH / 0-9 °fH + 2: media (medium) - 6-10 °dH / 10-18 °fH + 3: medio-dura (hard) - 11-15 °dH / 19-27 °fH + 4: dura (very hard) - 16-21 °dH / 28-37 °fH + 5: molto dura (extremely hard) - 22-28 °dH / 38-50 °fH To facilitate drying and prevent water spots, use a dishwasher detergent that contains a rinse aid. Before using the dishwasher for the first time, fill the dispenser. Important: Only use rinse aid specifically designed for dishwasher use! 1. Press the A button to open the lid (see diagram). 2. Pour the rinse aid into the opening until it reaches the "Max" line (approximately 100 ml). 3. Close the lid. 4. If you accidentally spill any rinse aid, remove it immediately to prevent excessive foam formation that can affect the washing process. 5. Check the rinse aid level regularly. Note: The manufacturer's default setting is position 4. If you're not satisfied with the results, you can adjust the dispenser by pressing the A button and adjusting the dosage using coins or a similar method. The dishwasher detergent was not completely dry, so it was necessary to adjust the dose to a higher position (5-6). 3. Close the lid. Optical indicator: Clear = add blanching agent. Dark = sufficient blanching agent. Electronic supplementary indicator (if present): The light on the control panel lights up when it is necessary to add blanching agent. Page 650 For the detergent, there are a small and large compartments. To avoid pollution, do not use a quantity of detergent higher than that indicated. The amount of product needed varies depending on different brands. If you use tablet detergents, follow the instructions provided by the manufacturer exactly. The "new generation" detergents contain enzymes that allow for the best washing results if Bio programs are used. However, these programs are also recommended for all other detergents. How to fill the detergent dispenser: Use only dishwasher detergent. Fill the detergent dispenser only before starting the wash program. 1. Press button A to open the lid. 2. Pour in the detergent. For programs with pre-washing: • Pour 2/3 of the recommended amount of detergent into the large compartment. • Pour 1/3 into the small compartment. For programs without pre-washing: Pour the entire amount of detergent into the large compartment. If the packaging recommends doses of detergent higher than 45 ml (maximum capacity of the large compartment), pour the remaining detergent into the small compartment. For "Half Load" function activated programs (if available): Use a smaller quantity of detergent. 3. Close the lid. Compartment Large compartment Small compartment Page 751 Before any cleaning or maintenance operation, turn off the appliance and close the water tap. Cleaning the exterior: To clean the exterior, use a damp cloth and mild soap. Do not use abrasives. Inside cleaning: Launder the gasket on the door and inside the door with a damp cloth to remove food residue. Brush spray arm upper: 1. Unscrew the nut (rotating counterclockwise) (A) and pull out the brush arm downwards (B). 2. Rinse the nozzles. 3. To reattach the brush arm, center it in the rotating support and insert it. 4. Tighten the nut (rotating clockwise). Make sure the nut is securely tightened (you should feel a click). The brush arm must rotate freely. Brush spray arm lower: 1. Press the two levers that secure the lower arm (C) inward and pull out the arm upwards (D). 2. Rinse the nozzles. 3. To reattach the lower arm, center it on the rotor pin and insert it. 4. Push the arm down until it clicks into place. 5. Check that the levers are inserted correctly into their seat (you should feel a click). The brush arm must rotate freely. Cleaning filters: 1. Rotate the filter completely. ... 1. Remove the coarse filter to the left and take it out (E). 2. Turn the fine filter completely and extract it from the central coarse filter (F), being mindful of the cavities on the underside of the filter. 3. Take out the fine filter (G). 4. Clean all filters regularly by washing them under running water and check that there are no impurities left inside the dishwasher. 5. Reassemble: Insert and secure the fine filter into the central coarse filter, being mindful of the cavities on the underside of the filter. Insert the filter group and secure it by rotating it to the right. Make sure the filters are properly inserted. The correct installation of filters is crucial for achieving good washing results.