

Continue



Compair delcos 1000 bis manual

Delcos 1000 error codes. Compair delcos 1000 manual. Compair delcos 3100. Delcos 1000 manual. Compair delcos 3100 user manual pdf.

New manuals include a parts list and service manual for compressor and pump units. At present, the forum is unavailable due to technical works, which will take several minutes to complete. Please refresh the page for verification of work completion. Thank you for your understanding! Quick reference guide for Delcos 1000 SM 1345: Access Code: Press and hold for 5 seconds START & buttons Enter Code: STOP Main Selection Menu RESET: Resets Faults/Warnings Mains Pressure: UP: Note: Not accessible on pressure switch-controlled models (L04 & L05) Scrolls Up in Menu Routines DOWN: Scrolls Down in Menu Routines Network Pressure and Pressure Settings Operating Times: Running and Loaded Hours Maintenance: Service Times Operating Mode: Operating Settings MINUS: Scrolls Left/Decreases Values Factory Pre-setting: Default Values RIGHT: Scrolls Right/Increases Values ENTER: Selects/Confirms Values DL067AA See overleaf for details CompAir Drucklufttechnik GmbH, Argenthaler Straße 11, D-55469, Simmern/Hunsrück, Germany. Tel: +49 6761 8320 Fax:+49 6761 832409 Email: Training Enquiries: 04/2007 SM 1346 Pressure band 2 can be configured via terminal block X2 Pressure band 2, cut-in pressure Pressure band 2, cut-out pressure The error codes in the right display can be found in the fault storage table (see user manual). Fault message indicated (E1 = latest entry) The menu point for the additional automatic restart after power failure (PF) is only displayed if this function has been activated. See chapter "additional automatic restart after power failure" within the user manual. Limited power failure time Start delay for deferred startup(s) Automatic re-start Local/remote control Loc = Local control Etn = Remote control Operating mode Aut = Automatic operation cnt = Continuous operation Operating mode Access Code From Press. & Temp. display :Press and hold & buttons for 5 seconds (display changes to:) Enter code: Accessible and Visible on code entry only Shutdown at - 100 hours Remaining time oil change Remaining time fine separator Remaining time air filter Pressure band 1, cut-in pressure & * * Maintenance Remaining time oil filter Fault storage Press. & Temp. display * Hold down for 5 seconds Protocol Compressor number Soft-stop time Max. number of starts per hour Star/delta changeover time Start-up blockage low temp. Early warning excess. comp. temp. Shutdown excess. comp. temp. Startup protection Operating pressure Factory pre-settings Change of settings if the settings are to be changed, select the corresponding menu point and press the key. The setting value will flash and can now be changed with the or keys. This does not apply to factory pre-settings, with the exception of the (Starts per hour) settings. (see "Change coasting time" within the user manual). Pressure band 1, cut-out pressure Mains pressure display Mains pressure Operating hours Load hours Operating times