

Click Here



Bunker hill security manual 62284

Bunker hill security manual. Bunker hill security safe manual. Bunker hill security system manual. Bunker hill security camera manual.

Bunker Hill Security System Manual - English This device complies with FCC Rules, Part 15. Operates under two conditions: 1. Doesn't cause harm, accepts any interference. Components and Controls include Setup Instructions for installing batteries (CAUTION: proper polarity). Sensor and Receiver installations require CAUTION for hidden utility lines and optimal placement (e.g., avoiding heat sources). Power Switch has three settings: Off, Hi (loud beep and LED flash), Low (short beep and LED flash) Operation involves setting Power Switch to "Hi", allowing 30 seconds for warm-up, and testing Sensor by walking into the protected area. Low Battery notifications require replacing batteries when LEDs on Sensor or Receiver turn on. If unusual noises or vibrations occur with the tool, get it fixed before using it again. Before each use, check the tool's overall condition for any problems that could affect its safe operation. This includes checking for loose parts, cracks in batteries or other components, and misaligned or stuck parts. After each use, wipe down the outside of the tool with a clean cloth to keep it clean. Also, replace the batteries in the receiver or sensor when their low battery light comes on. The Arlo Pro HD Security Camera System user manual is a comprehensive guide for setting up and using the camera system. The manual is divided into multiple pages, with each page providing detailed instructions on how to load specific features or settings.