

How to Check & Reset the Water Sensor

Most new A/C Units have Safety Water sensors installed.

This one is located on the front of the air handler.



This one is located in the drain pan on the floor (you may or may not have this one).

SENSOR SNAPS LIKE A GFI BREAKER DURING A CLOG

