

Hello Tunes Quick Start Guide

STEP

- 1 Plug Hello Tunes USB-C cord into USB-C Power Adapter.
- 2 Place Hello Tunes on a flat surface and plug into wall outlet.
- 3 Complete set up by filling out intake form to configure notifications for contacts at hello-everyday.com/support or contact customer support.



Scan me to complete set up

Dashboard access link will be sent via text or email after activation is completed.

Sensor Light Indicator — Can be disabled upon request
 red = searching for cellular connection
 white = sensor on and IS NOT detecting presence
 green = sensor on and IS detecting presence
 flashing blue = pairing mode on to connect additional call buttons by pressing button during first 10 sec after plugging Hello Tunes into power

Tune Knob — Channel selector

Leftmost position = music off/reset

Clockwise to turn radio on and choose between 4 music channels

Vol Knob — Adjusts music volume.





Call Button — Push to send an immediate notification
(can be replaced with blank cap if not used)

MicroSD Card Slot — Removable to add own music. Gently push in to release.

Hello Tunes Dashboard Quick Start Guide

Daily Report at 7/14, 11:15 am:
 No alerts.
 Manju B is active today.
<https://hello-everyday.app/xbu?tk=BoyKJXho>
 Click link in daily report to access dashboard.

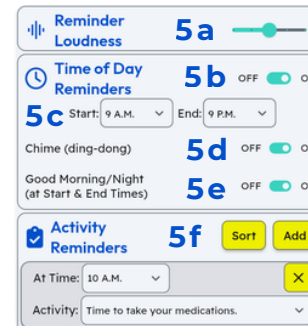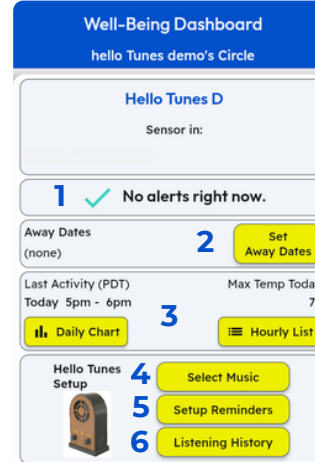

1. Checks activity between midnight and daily report time (ex. 10:15 AM)
 2. Pause notifications for extended away dates.
 3. See sensor data by hour (5 min increment view available in “more details” in daily chart)
 4. Select the music station for the four channels. Built-in stations available:
Early Jazz, Tin Pan Alley, Folk & Traditional, Classical Selections, Opera Arias, Hymns & Gospel *
- Personalize music playlist by saving your own music to microSD card folders (see insert for more information)

5. Setup audio reminder announcements
 - a. Adjust volume for audio reminders only (music volume unaffected)
 - b. Enable/disable hour time announcements
 - c. Choose start time and end time for time announcements (default: 9 AM to 9 PM)
 - d. Enable/disable chime (ding-dong) sound for time announcements
 - e. Enable/disable “Good morning” at first time announcement and “Good night” at last time announcement
 - f. Click Add to schedule activity reminders. Choose time and activity from preset dropdown list, including play music from a channel (regardless of channel selector position & can be turned off with tune knob).

6. See Listening History
 - a. Track minutes listened for stations played
 - b. Tracks time of day music plays while sensor is detecting presence

* Pre-loaded music are royalty-free, Public Domain (PD) content.

🎵 Enjoy Your Favorite Music 🎵

A Guide to Adding Your Songs to your Hello Tunes device

What You'll Need

- ✓ A computer
- ✓ An internet connection for option 1
- ✓ Hello Tunes microSD card removed from side slot
- ✓ USB-C microSD card adapter (incl.)



Option 1: Buy and Download Digital Songs

- Go to a trusted digital music store like Amazon Music or iTunes Store
- Search for a song or artist you love
- Select buy as MP3
- After purchase, download from library to computer

Option 2: Use Music You Already Own (From CDs)

If you have audio CDs, you can transfer the songs to digital. Tutorials for Import/Rip CD available online or employ professional services like MusicShifter or AVPMedia

Third-party services are provided for reference only and are not affiliated with/endorsed by Hello Everyday.

Move Your Music to Hello Tunes with MicroSD Card

1. Insert the Hello Tunes microSD card into USB-C microSD card adapter
2. Insert the USB-C microSD card adapter into USB-C port on computer
3. Open the card folder
4. Drag and drop your MP3 music files into folder labeled "01", "02", "03" and/or "04". Folder labels correspond to channel. **Do not change folder names and do not add to "mp3"**
5. Eject card from computer, remove from adapter and reinsert SD card back into Hello Tunes side slot.
6. Access your Hello Tunes dashboard to change music.

Note: It may take up to 2 hours for Hello Tunes to detect new files. Changes to music selection on dashboard may take up to 2 hours to reflect on device.