

Interact Drive Jack Plate Controller

Interact Drive takes the guesswork out of setting a jack plate height or engine trim so you can get away quickly, every time. Use Interact Drive to quickly recall your memorized positions. It works with any jack plate and trim control switch and allows you to predictably fine tune the jack plate and engine trim by moving both in set increments.



Harness for Interact Drive, NMEA 2000

A wiring harness for connecting the Interact Drive directly to the motor.



Dometic Pro-Trim

The single function Pro-Trim is the ultimate combination of design, function and value. It allows the boat driver to keep both hands on the steering wheel for safe and convenient control.

Part no.	Description
40-0116-126	Interact Drive Jack Plate Controller
40-0116-127	Harness for Interact Drive, NMEA 2000 <i>(sold separately)</i>
40-0116-130	Pro-Trim Jackplate Controller for Interact Drive <i>(sold separately)</i>

Note: The images shown are for illustration purposes only and may not be an exact representation of the product.

Main features

Allows you to save your favorite engine trim and jack plate positions

Quickly loads your presets; no need to adjust your boat manually every time

Fine tuning is easy thanks to an intuitive controller

Synchronizes two engines

Provides 0-5 V jack plate height signal

MFD integration

CAN expandability