

Continue



Uniden dect 6.0 manual instructions

Uniden dect 6.0 manual. Uniden dect 6.0 manual nz. Uniden dect 6.0 phone no dial tone. Uniden 6.0 manual. Uniden dect 6.0 user manual.

User manual for Uniden D1484/D1481 Series cordless phone system. Covers various models including CS6219/CS6219-2/CS6219-3/CS6219-4 and others. The manual also applies to other Uniden products such as DECT 6.0 CS6219-2, CS6228-3, CS6228-6, and more. For model D1484/D1481 Series, the package should include a base with answering system and cordless handset, rechargeable battery (BT-1021), battery cover, AC adapter (PS-0035), and telephone cord. If any items are missing or damaged, contact Uniden's Customer Care Line immediately. Important safety instructions include not exposing the unit to rain or moisture, avoiding use near water or during electrical storms, and proper disposal of batteries. The manual also provides information on getting started with the phone, installing it, using the menu, and basic features such as finding the handset, phonebook, caller ID, and redial lists. 1. Getting Started with Your Phone Installing and Charging the Handset Unpack all handsets, battery packs, and battery covers. If you need to remove a cover, press in on the notch and slide the cover down and off. Line up the battery connector with the jack inside the handset; the connector only fits one way. Push the connector in until it clicks into place; tug gently on the wires to make sure the battery is securely connected. Replace the battery cover and slide it into place. Use an AC adapter to connect the power jack on the base to a regular indoor (120V AC) power outlet. Connect any chargers the same way. 2. Connecting the Handset Place a handset in the base with the display facing forward. If the display doesn't light up, reseat the handset or connect the base to a different outlet. For 2 or more handsets, place each handset in a charger. B Charge the handset completely (about 15 hours) before using. Connect the Telephone Cord Use the telephone cord to connect the TEL LINE jack on the base to a standard telephone wall jack.