

ODC Daily Coaling Plan

16/09/2025

Geologist Contact: 0473 223 132




Coal Locations

Location	Coal Type	Destination	Comments
T03	C_VU1_VU3	SP_F (north)	Stockpile separately to the LL1 OX
	C_LL1		Thin seam – take care when mining Tip Stockpile South to North
	C_LL2T_LL2B		
	C_LL3B	SP_M	Thin seam – take care when mining.
T04	C_LL1	SP_B	C_LL1_FA if faulted coal. Keep separately
	C_LL2T_LL2B	SP_P	C_LL2B_LL2T_FA if faulted coal. Keep separately
	C_LL3B	SP_M	
	C_VU1_VU3	SP-Q	
T05	C_LL1	SP_A	Thin seam – take care when mining
	C_LL2T_LL2B	SP-C	
	C_LL3B	SP-R	Thin seam – take care when mining
	C_VU1_VU3	SP_O	

Location	Coal Type	Destination	Comments
T03/04 – VL Trial	C_VL11_VL12	VL_Pad	North-Eastern Section (Separate from other VL)
	C_VL13	SP_T	Southern End
	C_VL15	SP_T2	Northern End


NON-
Trial
VL1 to
VL_PAD

Ideal Roof and Floor Conditions

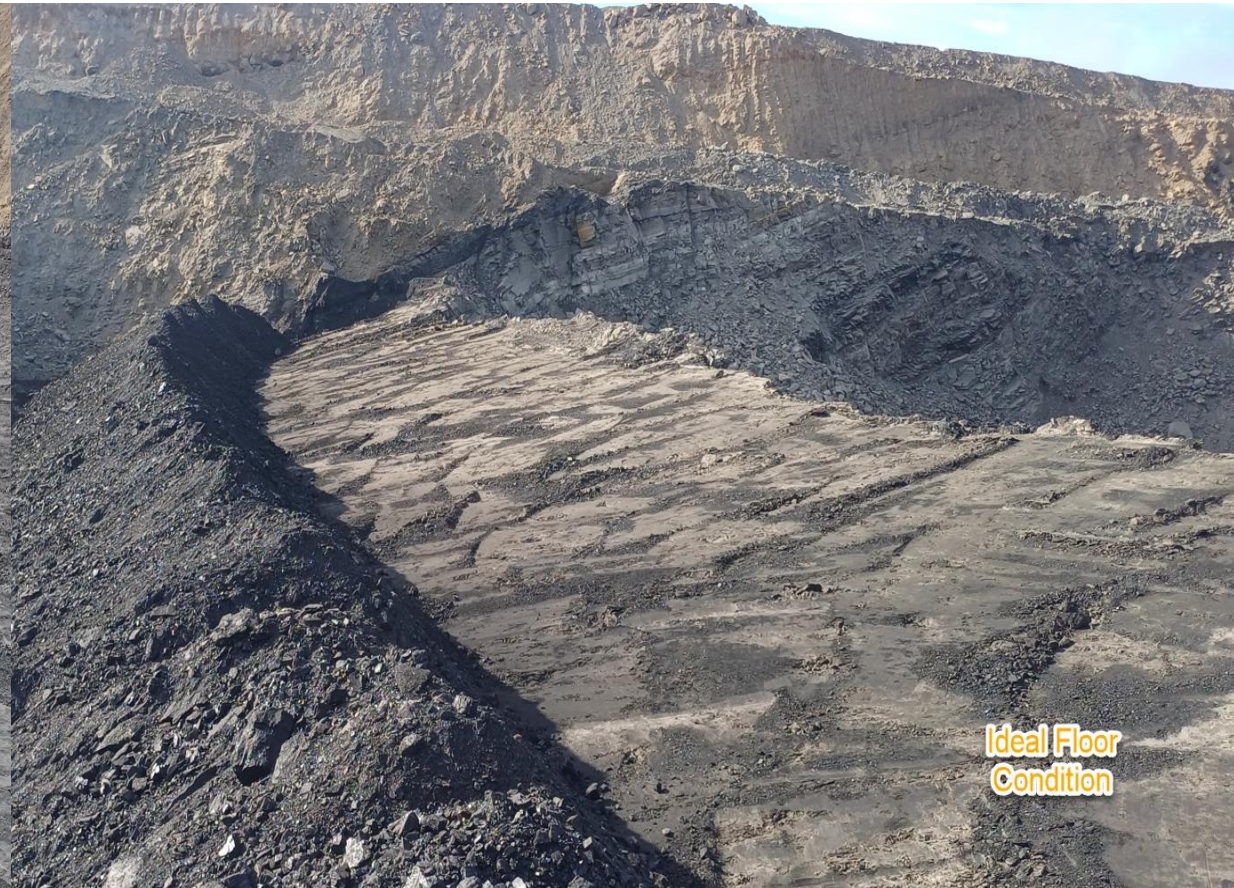

T04/S02

COAL CODE	STOCKPILE	COMMENTS
C_VU1_VU3	SP_Q	
C_LL1	SP_B	C_LL1_FA if faulted coal. Keep separately
C_LL2B_LL2T	SP_P	C_LL2B_LL2T_FA if faulted coal. Keep separately
C_LL3B	SP_M	

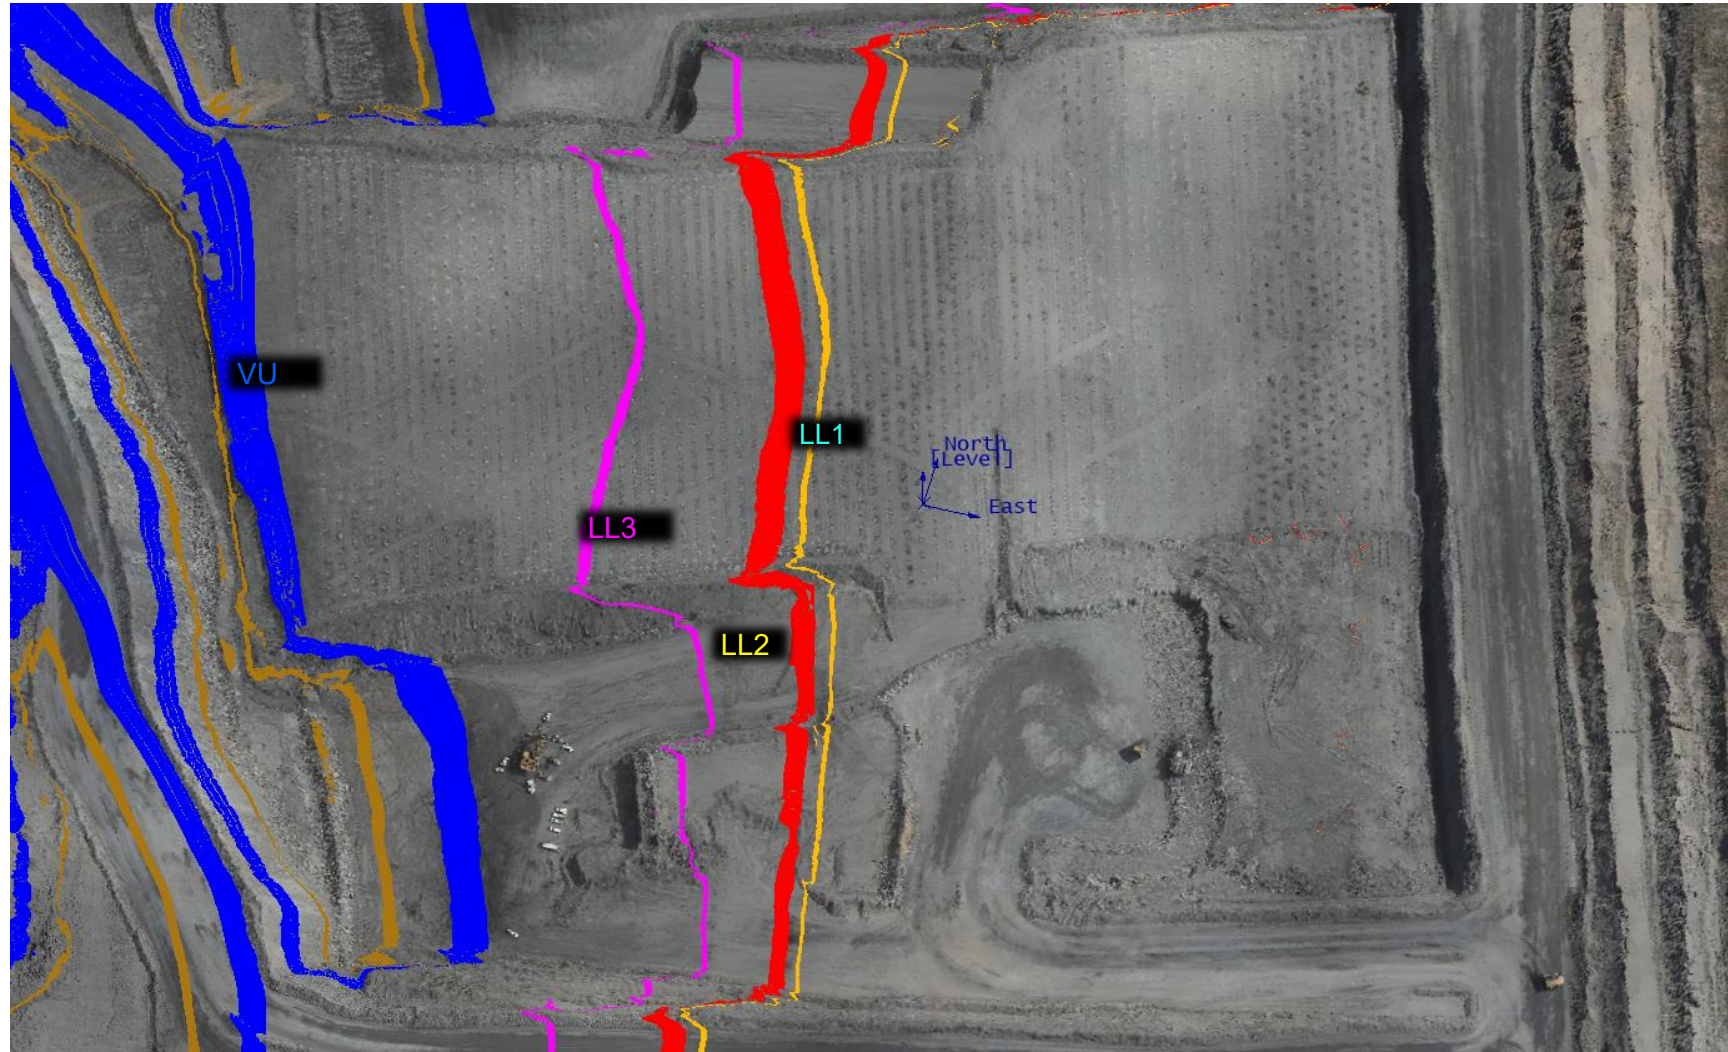

COAL CODE	STOCKPILE	COMMENTS
C_VU1_VU3	SP_Q	
C_LL1	SP_B	C_LL1_FA if faulted coal. Keep separately
C_LL2B_LL2T	SP_P	C_LL2B_LL2T_FA if faulted coal. Keep separately
C_LL3B	SP_M	





T04/S02




T05/S02

COAL CODE	STOCKPILE	COMMENTS
C_LL1	SP_A	Thin seam – take care when mining
C_LL2T_LL2B	SP_C	
C_LL3B	SP_R	
C_VU1_VU3	SP_O	

Flitch 133

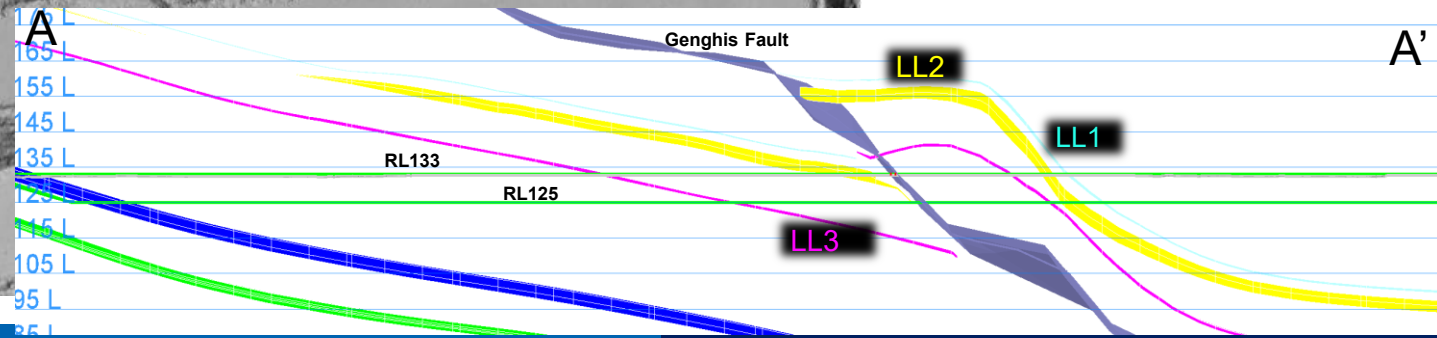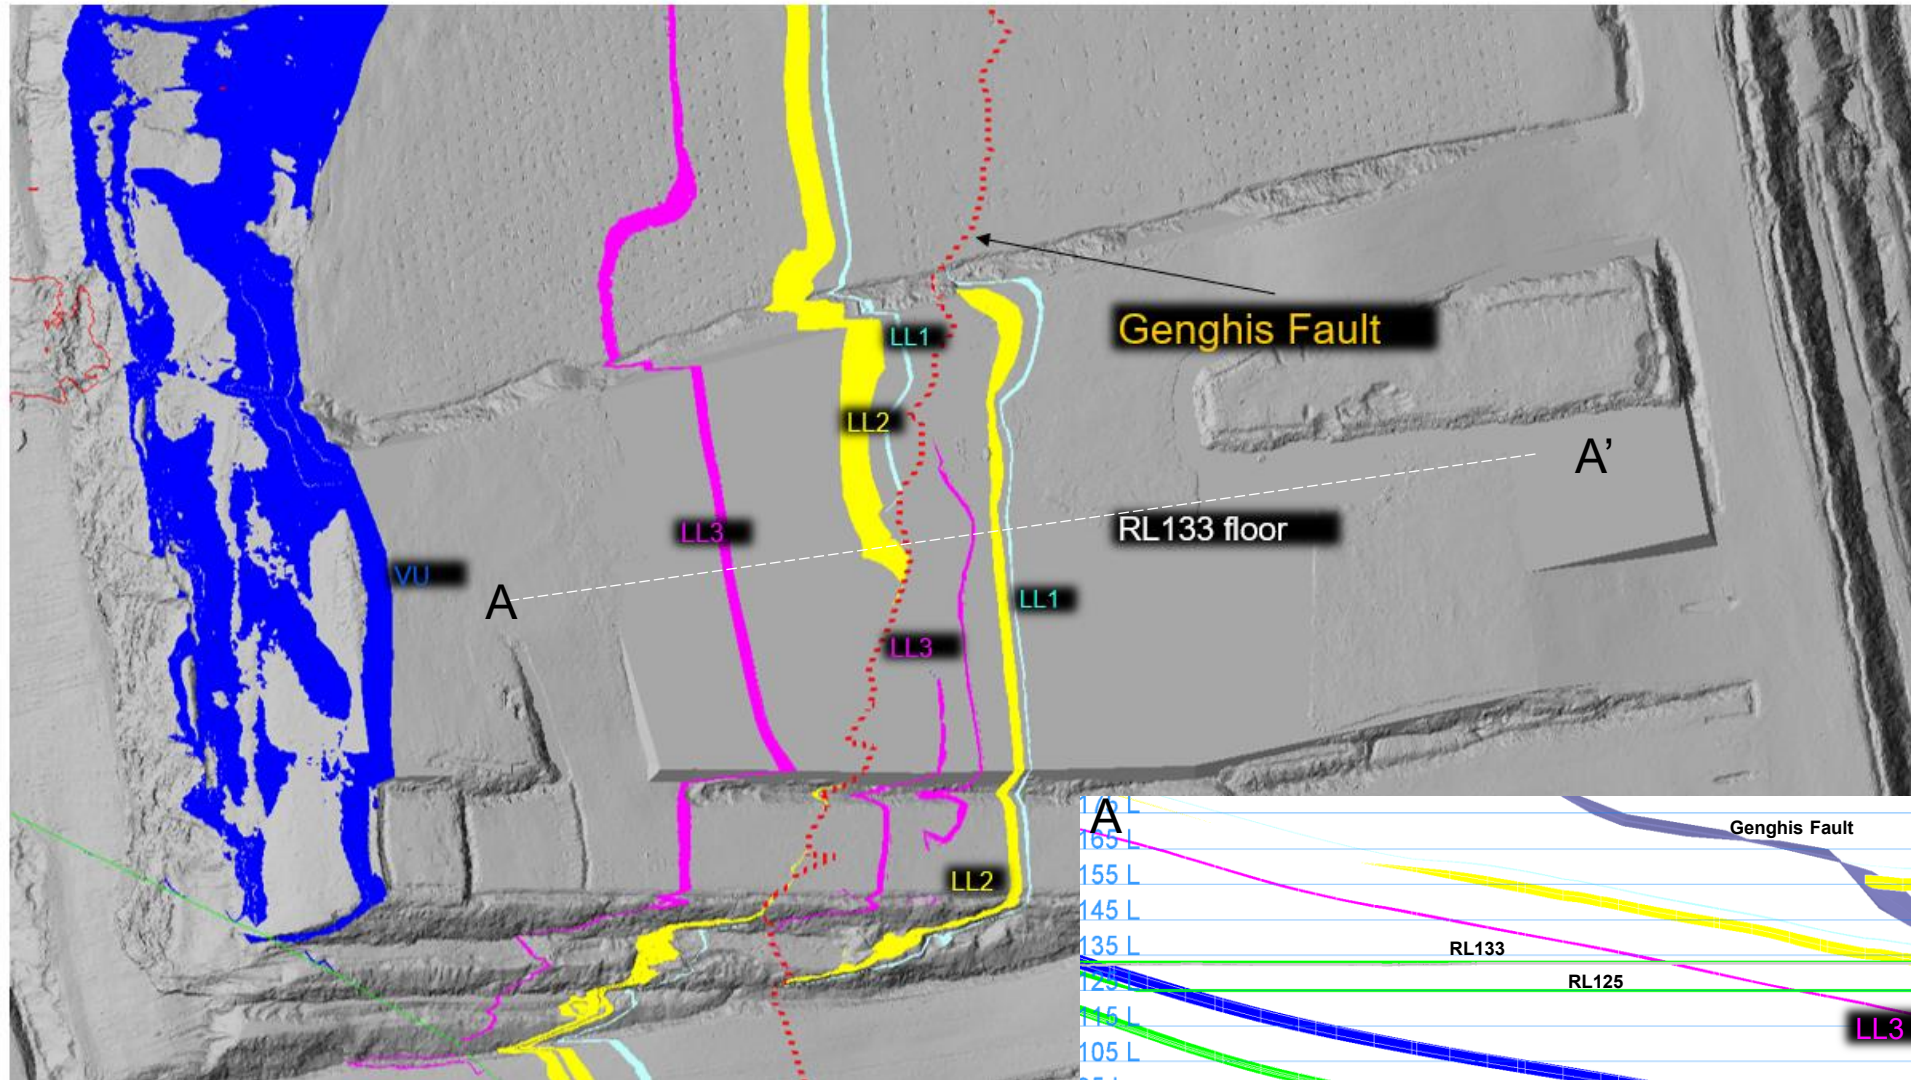

Flitch 133

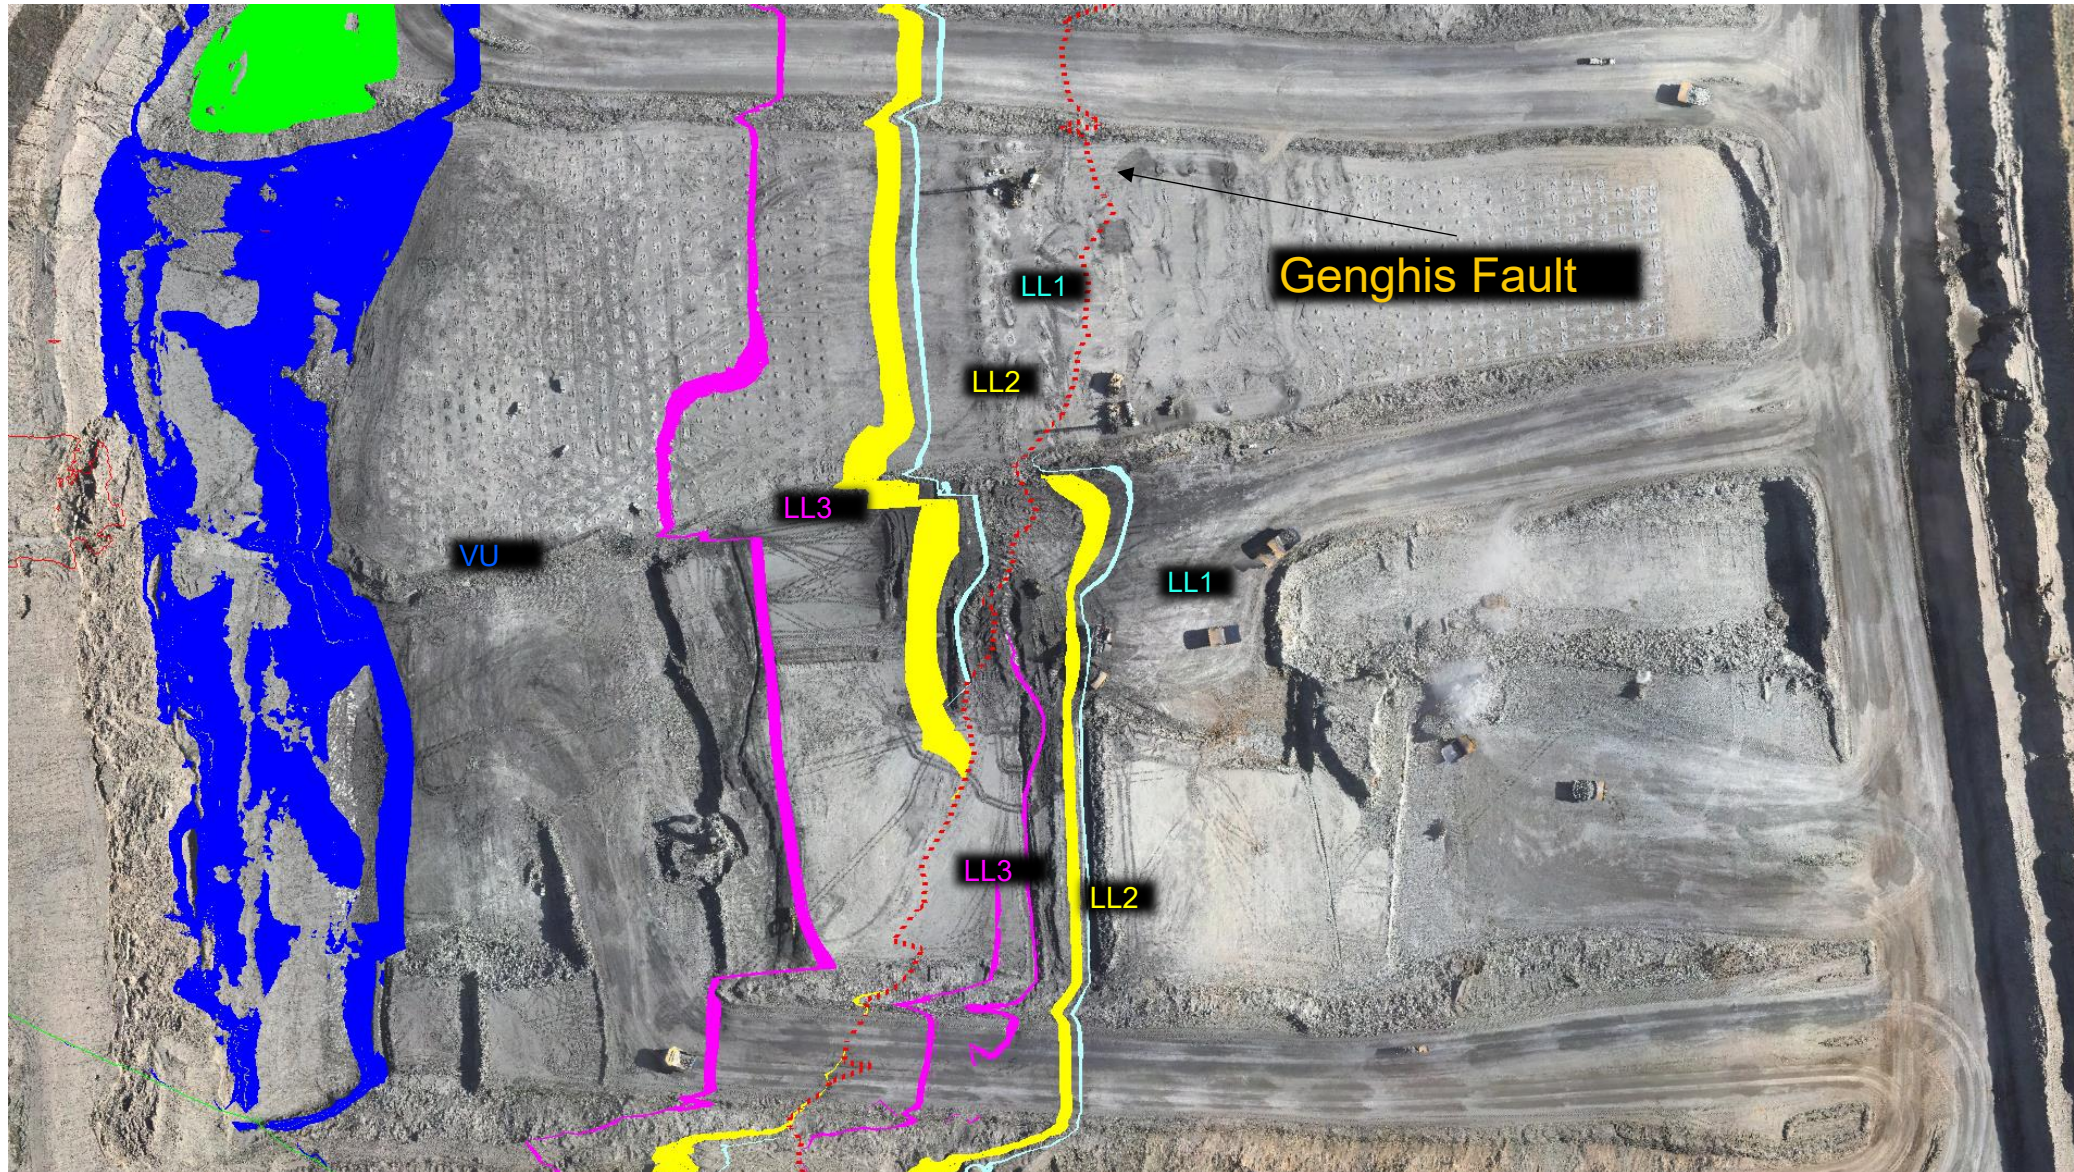


T05/S02 - RL125




T05/S02


COAL CODE	STOCKPILE	COMMENTS
C_LL1	SP_A	Thin seam – take care when mining
C_LL2T_LL2B	SP_C	
C_LL3B	SP_R	
C_VU1_VU3	SP_O	

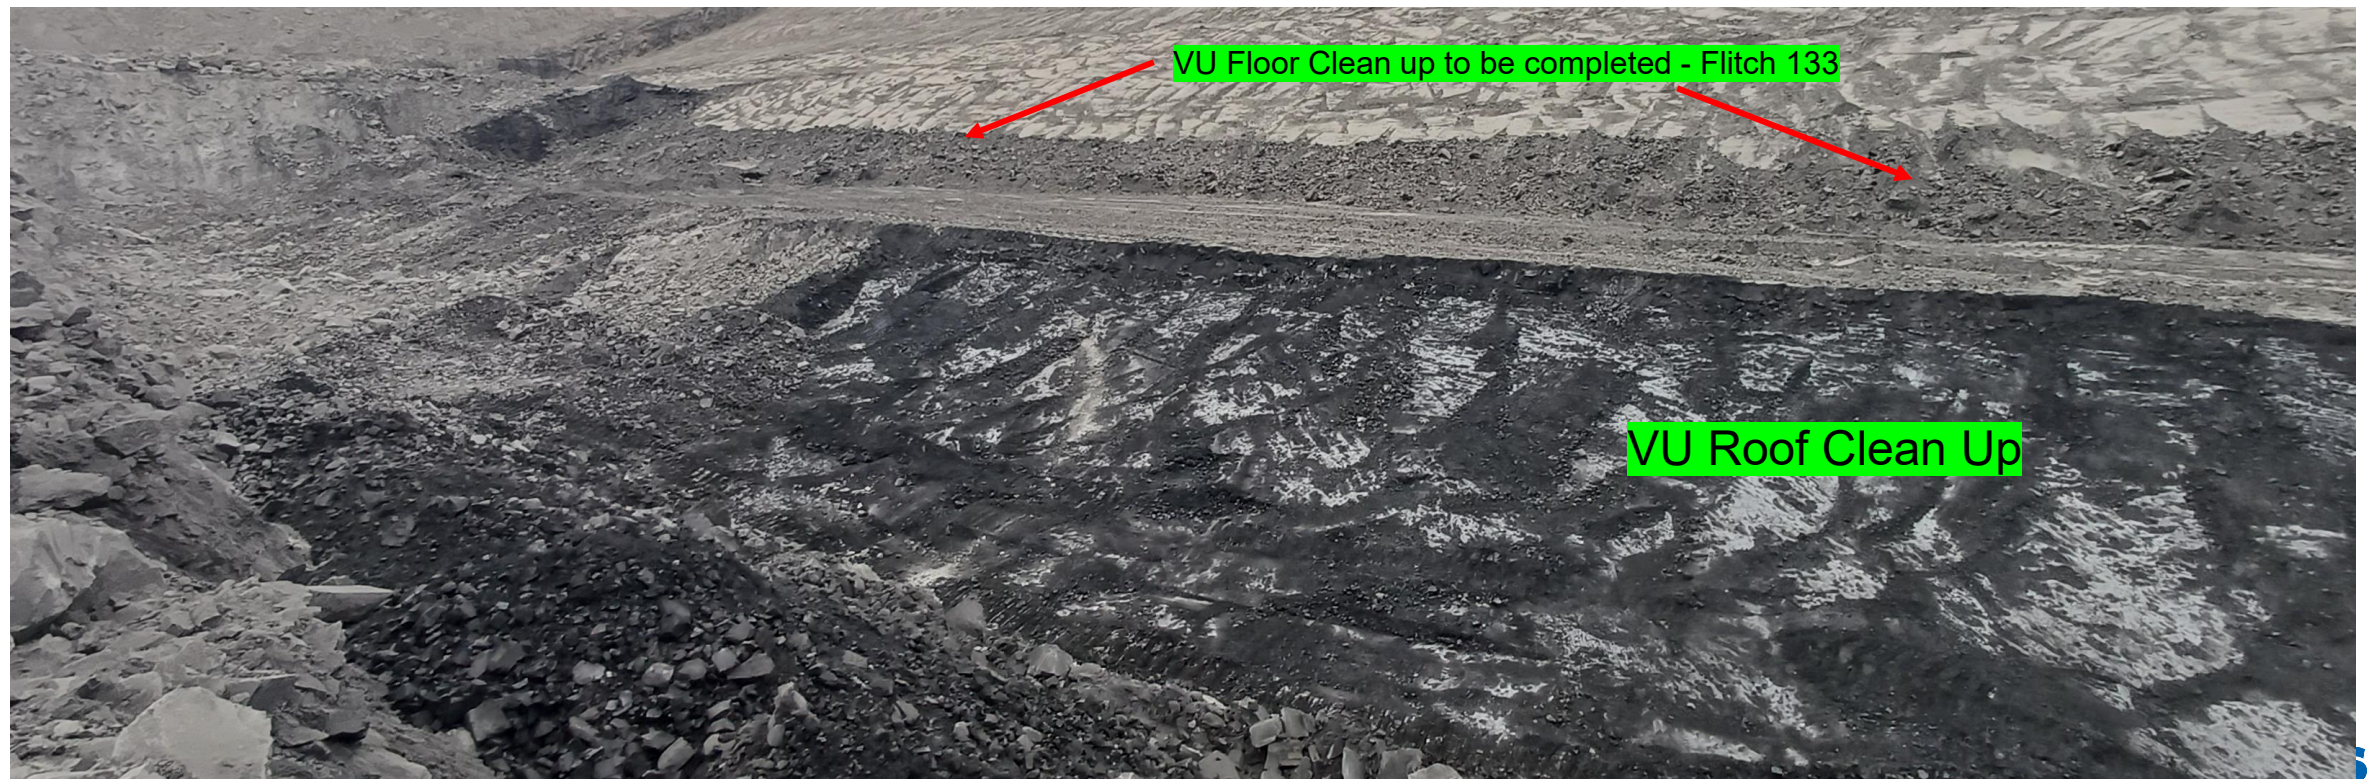

T05/S01 Ramp 6 De-Stack

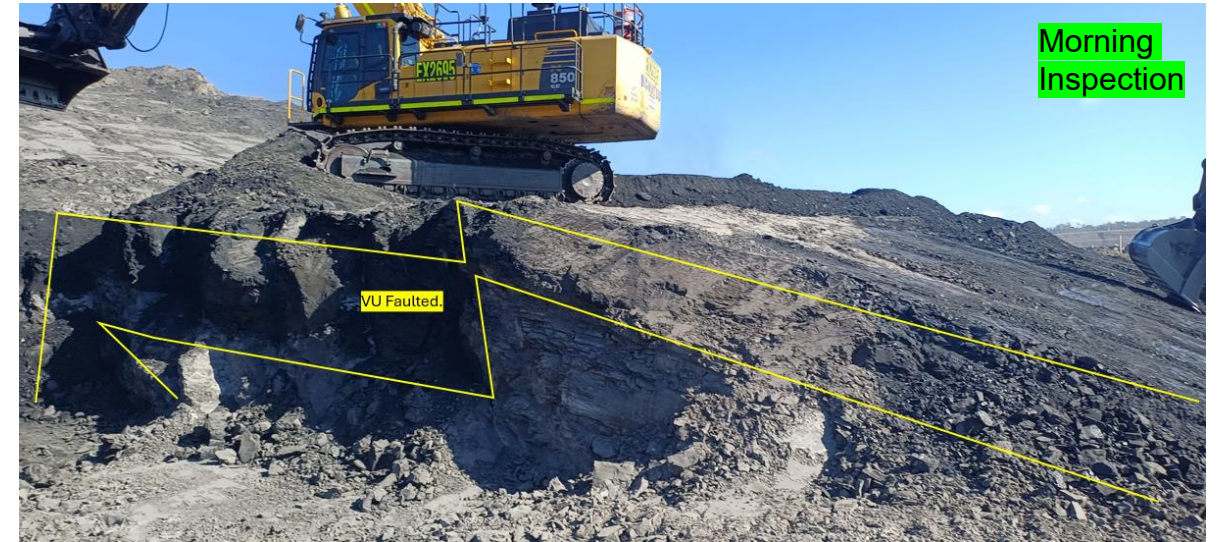

ROM

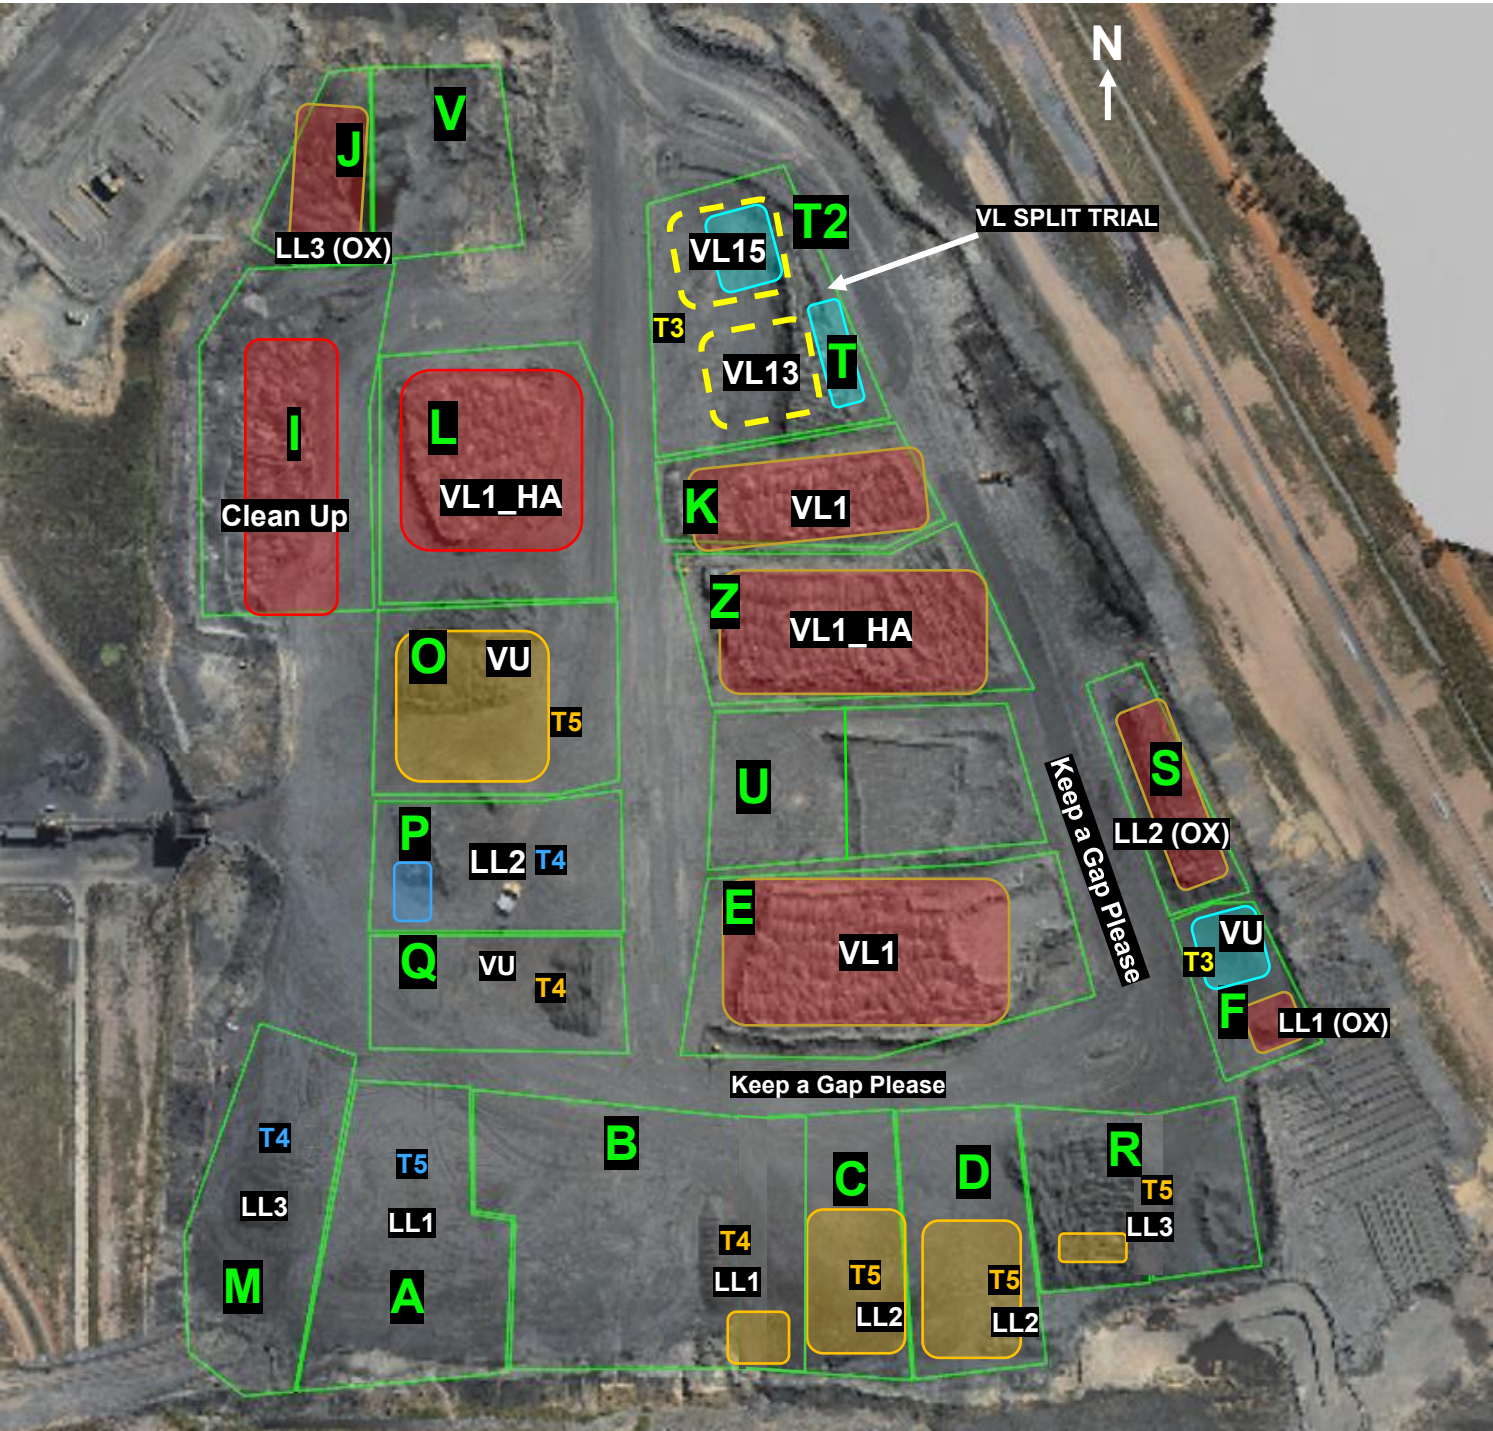

ROM

VL1 ROM Pad

VL11_VL12 – VL Trial – keep separate and maintain access



31/08/25

THIASS

CHPP Coal Feed Sequence

Communicate any direct feed start and finish time to CHPP control.

Comments

Currently running Blend 2

- Once Stockpile C is exhausted change to Blend 3
- Once Stockpile D is exhausted change to Blend 4
- Once Stockpile P is exhausted change to Blend 5

In Truck Blending required for Blend 2, 3 , 4 and 5 (email sent)

	Blends								active
	Feed 1	Feed 2	Feed 3	Ratio	ROM Loaders	ROM Trucks	Direct Feed	Comments	
VL TRIAL	SP-T2			Straight				VL Trial Blend (VL15)	
Blend 2	SP-C	SP-E		1:1				1 x LL2 (T05S01): 1 x VL	x
Blend 3	SP-D	SP-E		1:1				1 x LL2 (T05S01): 1 x VL	
Blend 4	SP-P	SP-E		1:1				1 x LL2 (T04S01): 1 x VL	
Blend 5	SP-O/Q	SP-I		1:1				1 x VU (T05S01) : 1 x CC	
Blend 6	SP-K			Straight				Straight VL	
Wet weather									

