Protect your investment with a Vehicle Service Contract.

We offer a variety of coverage levels, options and terms — all with great benefits included — to make it easy to find the right plan for your needs and budget.

All of our plans are completely transferable, adding substantial resale value to your vehicle should you sell it too!

Scan for more information.



*This brochure is for reference only. Please refer to your Service Contract for complete component/parts listings, and coverage details for ALL plans, options and benefits. All Rosemark Warranty Service contracts are administered exclusively by Rosemark Warranty Services.

ADDITIONAL BENEFITS



24/7 EMERGENCY ROAD SERVICES

Available at no cost for towing up to 25 miles, battery jumpstart, flat tire change, fuel delivery* and locksmith services.



TRIP INTERRUPTION

Reimbursement for food/lodging expenses, up to \$90 per day for up to 3 days if a covered mechanical breakdown occurs more than 100 miles from home.



RENTAL CAR

Reimbursement for rental vehicle expenses, up to \$50 per day for every 8 hours (or portion thereof) of labor time required to complete the repair, up to a maximum of seven (7) days.



COMPETITIVE LABOR RATES

Labor charges are based on All Data time to repair or replace a covered component up to \$150 per hour of posted labor time.



NATIONWIDE COVERAGE

Access to an authorized repair network anywhere in the U.S.

*You are responsible for the actual cost of delivered materials. All services are subject to maximum reimbursement limits. Coverage may not be available in all states. Restrictions & limitations may apply. Roadside services provided by our nationwide partner.

For Claims Call

866-217-5309

Or email your claim to claims@rosemarkwarranty.com See instructions for submitting claims via email at rosemarkwarranty.com



VSC





4516 Lovers Lane Dallas, TX 75114

VEHICLE SERVICE CONTRACT

Coverage up to 96 Months 24/7 Roadside Assistance Quick & Easy Claims



EXCLUSIONARY

This top level protection includes coverage on all factory installed mechanical or electrical components except those items listed in the exclusions section* of your contract. Coverage also includes all of the additional benefits listed on the outside panel of this brochure, plus rental car, labor, fluids and diagnostic charges.

*EXCLUDED ITEMS INCLUDE, BUT ARE NOT LIMITED TO:

Maintenance, rust, corrosion, body repairs, convertible tops, leaks, squeaks, rattles, sun damage, weather stripping, graphic equalizers, DVD players, VHS players, speakers, visual and other electronic equipment (including game systems), telephones, radar detectors and GPS equipment (unless factory installed), and electronic transmitting/receiving devices, and all other items not covered by the original manufacturer. Please refer to your contract for a complete list of exclusions.

COMPREHENSIVE

The BEST stated coverage available. Parts covered include but are not limited to all components listed in Powertrain Plus Coverage in addition to audio, hybrid systems and factory installed entertainment and navigation systems.

POWERTRAIN & POWERTRAIN PLUS

*Failed or Failure: A component which has received recommended factory service but which is broken or can no longer function within manufacturer's service limits. Coverage will expire when your vehicle reaches 150,000 miles as indicated on your odometer or the expiration of the term of this Agreement, whichever occurs first. After,150,000 miles seals and gaskets will be covered only if required in conjunction with a covered repair.



GASOLINE ENGINE

All internal lubricated parts within the engine including pistons, piston rings, piston pins, crankshaft, main bearings, thrust washer, connecting rods, connecting rod bearings, camshaft, camshaft sprocket, camshaft bearings, timing belt/chain, timing chain guides, timing belt/chain tensioner, push rods, rocker arms, rocker arms shafts, balance shaft, hydraulic lifters, solld lifters, intake valves, exhaust valves, valve guides, valve springs, valve spring retainer, valve keepers, valve stem seals, oil pump, silent shaft. Harmonic balancer; intake manifold; exhaust manifold; freeze plugs; throttle valve cable; engine mounts. Cases, housings, engine block, oil pan and cylinder heads are covered only if damaged by the failure of an internal lubricated part.

DIESEL ENGINE

All internal lubricated parts within the engine including pistons, piston rings, piston pins, crankshaft, main bearings, thrust washer, connecting rods, connecting rod bearings, camshaft, camshaft sprocket, camshaft bearings, timing chain in timing chain gairs, timing chain guides, timing chain tensioner, push rods, rocker arms, rocker arm shafts, balance shaft, hydraulic lifters, solid lifters, intake valves, exhaust valves, valve guides, valve springs, valve spring retainer, valve keepers, valve stem seals, oil pump, silent shaft. Harmonic balancer; intake manifold; exhaust manifold; vacuum pump; freeze plus; EGR cooler; throttle valve cable; engine mounts; glow plugs. Engine block, oil pan and cylinder heads are covered only if damaged by the failure of an internal lubricated part.

TURBO CHARGER/SUPER CHARGER

(factory installed only) Turbocharger/Supercharger Housing and all internal lubricated parts.

TRANSMISSION

All internal lubricated parts within the transmission including torque converter, valve body, valve body shift solenoids, accumulator rings, accumulators, adjusters, bands, bearings, boost valve, center support chain, check balls, clips, clutch drums, clutch packs, clutomate transmission only, control rings, counter shaft, detent valve, gears, governor, governor gear, output shaft, parking gear, planetary gears carrier, planetary gears, pressure regulator valve, pressure switchs, ring gears, groll pins, separator plate, servo rings, servo sleeves, shift forks, shift shafts, shift valves, shifter shaft, snap rings, sprags, springs, sprockets, stator shaft, sun gear shell, sun gears, synchronizer hey(s), synchronizer ring, synchronizer sleeves, synchronizer springs, synchronizer(s), transfirs shaft. Transmission mount bushings; drive avale shafts; constant velocity plints; flywheel/flex plate; transmission coder; oil lines; from cable; detent gear grans gring; front pump preform pump gears; front pump guide rings; front pump vanes; range selector cable; retainers; side cover; vacuum modulator; external switches and solenoids; electronic controller; back up light switch; speed sensor; speedometer drive quer. Transmission oil pan are covered only if damaged by the failure of an internal lubricated part.

TRANSFER CASE

All internal lubricated parts within the transfer case including main shaft, output shafts, bearings, drive sprocket, synchronizers, planet carriers, shift forks, chain. Transfer case is covered only if damaged by the failure of an internal lubricated part.

FRONT WHEEL DRIVE/REAR WHEEL DRIVE SYSTEM

All internal lubricated parts within the drive axle/transaxle assembly including differentials, ring gear, pinion gear, pinion bearings, axle bearings, axle races, axle flange, carrier bearing, center bearings, differential carrier, drive axle bearings, pins, retainers, shims, side gears, slip joint, spider gears. Pinion flange; U joints; axle shafts; CV joints; drive axle; drive shaft, flex disc; half shafts; hub bearings; wheel bearings; yokes; lock ring; lock nuts. Drive axle housing is covered only if damaged by the failure of

FOUR WHEEL DRIVE/ALL WHEEL DRIVE SYSTEM

All internal lubricated parts within the drive axle/transaxle assembly including differentials, ring gear, pinion gear, pinion bearings, axle bearings, axle races, axle flange, carrier bearing, center bearings, clifferential carrier, drive axle bearings, pins, retainers, shims, side gears, slp piont, spider gears. Pinion flange; U joints; axle shafts; (O joints; drive axle; drive shaft; flex disc; half shafts; wheel bearings; yokes; lock ring; lock rings; Automatic locking hubs; manual locking hubs; hub bearings; four wheel drive actuator motor; front axles; front drive shaft, four wheel drive engagement switch. Drive axle housing is only covered if damaged by the failure of an internal lubricated part.

ALS AND GASKETS

Seals and Gaskets of covered components designed to prevent the loss

of necessary coolants, lubricants and fluids are covered.

AIR CONDITIONING AND HEATING r pulley; air conditioning condenser; air conditioning

Heater core; blower motor; air conditioning compressor; air conditioning compressor pulley; air conditioning compressor pulley; air conditioning compressor pulley; air conditioning exporator; air conditioning ordenser; air conditioning exporator; air conditioning power module, controller and relay; air conditioning and heating dash control unit/temperature control programmer; accumulator; heater control valve; highylow cut-off switches; cycling switch; ider pulley; idler pulley bearing; serpentine belt tensioner; electronic temperature control sensors; temperature sensor internal; ambient temperature sensor. Refrigerant only if needed in continuition with the repair of a Coverded Part

COOLING SYSTEM

Water pump; belt tensioners; radiator; oil cooler; cooling fan clutch; cooling fan electric motors; fan blade assembly; coolant reservoir sensor.

GASOLINE FUEL SYSTEM

Fuel sending unit; fuel pump; fuel injectors; fuel injection rails; fuel pressure regulator; metal fuel lines; throttle body; idle air control solenoid; idle air control motor; warm up regulator.

DIESEL FUEL SYSTEM

Fuel sending unit; fuel pump; high pressure fuel pump; lift pump; accessory vacuum pump and injector pump; fuel injectors; fuel distributor; fuel pressure regulator; fuel/water separator; metal fuel lines; throttle body; idle air control solenoid; idle air control motor; warm up regulator.

ECTRICAL

Alternator, voltage regulator; distributor (excludes cap, rotor and spark plug wires); distributor shaft; distributor bushings; distributor pear; distributor housing; horns; oil pressure sending unit; engine management sensors; ignition cold, ignition module; ignition module; proservation module; body control module; anti-theft system; anti-theft system switches, serva and siren; starter motor; starter drive; convertible top engagement switch and motor only; cruise control module; cruise control switch; cruise control cancellation switch; cruise control resume switch; power door lock solenoids; primary instrument cluster; electronic driver information display, display module and power supply; power seat motor and transmission; seat heater assembly; brake light switch figger switch; rear defroster; headlight switch; mirror switch; power mirror heating elements; sunroof switch; back up light switch; turn signal switch; washer pump switch; window switches; wiper switch; trunk lid release activator and motor; washer pump motor; windshield wiper motor; rear wiper motor; headlight wiper motor; power window regulator; power mirror motor; safety restraint system; air bag; air bag control module; it bag sensors and switches; impact sensors; illuminated visors.

SUSPENSION

Upper and lower control arms; control arm shafts and bushings; radius arm and bushings; trailing arm; track bar; stabilizer shaft, links, and bushings; upper and lower ball joints; torsion bars; torsion bar mounts; torsion bar bushings; coil springs; leaf springs; steering knuckles; spindles; steering dampener; electronic height level sensor; electronic height level controller; electronic height level air compressor; compressor relay; mode switch; wheel bearings; wheel seals.

BRAKES

Brake master cylinder; brake power assist boosters; brake power assist valves; disc brake calipers; bleeders; brake adjusters; backing plates; brake pedal apply pin; wheel cylinders; combination valve; proportioning valve; metering valve; brake hydraulic lines and fittings; vacuum and fluid reservoirs; hydro boost unit; parking brake cable; pressure differential switch; brake fluid level sensor; residual pressure check valve; return spring; self-adjuster mechanism; springs clips and retainers; parking brake lever; parking brake ratchet assembly.

ABS SYSTEM

ABS booster; ABS pump/motor; ABS control processor; ABS dump valve; ABS sensors; ABS selectronic control compressor; ABS hydraulic control unit; ABS modulator valve; ABS compensating valve; ABS accumulator.

STEERING

Steering gear; rack and pinion; rack and pinion mounts and bushings; power steering pump; power steering hoses and couplings; power steering cooler; steering main and intermediate shafts; steering column; steering column bearings; steering column couplers; electronic power steering motor; steering box; pitman arm; ider arm; tier ords; a fair all ink; tilt wheel mechanism; rack bellows; center link; control valve; relav rod.

AUDIO, HYBRID SYSTEM, ENTERTAINMENT & NAVICATION SYSTEMS

(Factory installed only) AM radios, AM/FM radios, satellite radios, antenna motor, cassette players, CD players, and CD changers (excluding speakers and Graphic equalizers). IMA control unit for battery; IMA control unit for electric motor; junction board assembly; IMA motor stator assembly; IMA motor rotor assembly; PDU unit[pre-driver]; PDU converter, (Factory instancy, MFb players, and navigation equipment.

RENTAL CAR, LABOR, FLUIDS & DIAGNOSTIC CHARGES

Up to \$50 per day for up to 7 days after a covered claim is opened. Labor rate is modified up to \$150 based on All Data time to repair or replace a covered component as part of an authorized repair. Up to \$200 fluid allowance for any covered repair including the applicable refrigerant. Up to 2 hours or \$200 diagnostics coverage (whichever is less).

EXCLUSIONARY l**C**D \mathbb{C}_{2} 等 等 继 # # **(**