


Adjustments for SynchroEnhanced™ Control




For maximum seating comfort we recommend that you adjust your chair in the numerical steps indicated below.

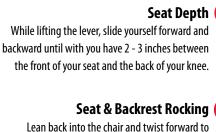

Lean back into the chair and twist forward to allow seat and backrest to rock freely. Twist backward to lock chair into a fixed position.

Backrest Height (Lift lever, lean slightly forward and guide the backrest up or down with both hands. Release lever when lumbar region is best supported.

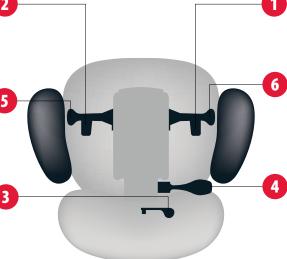

Seat Height

Lift the lever while seated and the chair will go down. Remove your weight, lift the lever, and the chair will rise.

Backrest Tension

The tension adjustment provides a controlled rocking motion to the chair. Make sure the chair is in rocking motion (See step 4). Twist forward for more resistance and twist backward for less.

Backrest Angle

Lift the lever and lean forward or back to desired backrest angle. Release the lever to set your desired angle.

Backrest Height Adjustment for Mesh Backrest



Mesh Back Adjustment

Grab the backrest with both hands, lean slightly forward, and lift the backrest until it clicks into place. Lift the backrest all the way up to reset.

Adjustment for Optional Air Bladders

Thoracic Air Bladder Adjustment

(Left Side) Pull the rubber bulb from the holder and pump. You will feel the bladder inflate in the thoracic region of your back. To deflate, simply press the release valve at the base of the rubber bulb.



Lumbar or Sacral Air Bladder Adjustment

(Right Side) Pull the rubber bulb from the holder and pump. You will feel the bladder inflate in the lumbar or sacral region of your back. To deflate, simply press the release valve at the base of the rubber bulb.

Foot Ring Adjustment for Stools



Footring Adjustment

Turn the ring counter-clockwise to loosen. Raise or lower to your desired height, then turn clockwise to tighten.



Stand Ring Adjustment

Lift the paddle and raise or lower the ring to your desired height. Release the paddle and it will lock in place.



