


Remove these screws to detach the shutter from the CCD housing. Do not unplug the shutter.

Sometimes the blades get stuck on the pads around the outside of the bottom

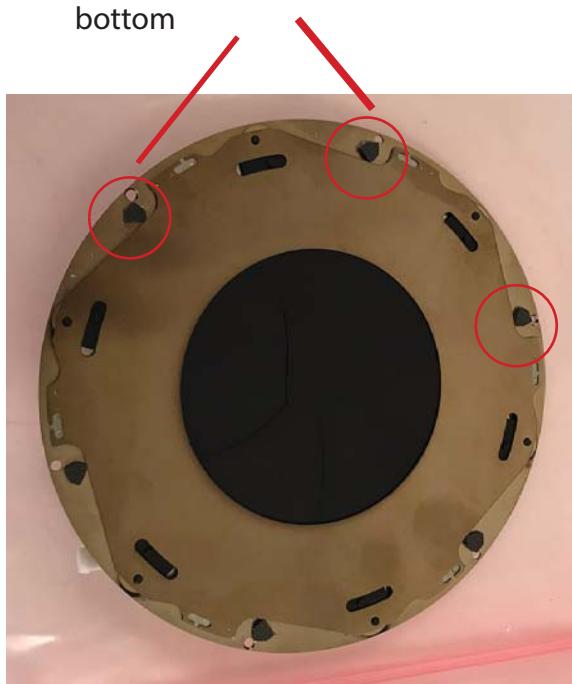

Push here to exercise the shutter

