

Friteuses CORE SMART

SICOTRONIC

SICOTRONIC

1 / a

2 / c

3 / b

4 / dN

- F** 1 / a Interrupteur ON/OFF
2 / c Enclenchement du chauffage
3 / b Demande de chauffage
4 / dN Neutre

- D** 1 / a Hauptschalter ON/OFF
2 / c Zuschalten der Heizung
3 / b Anforderung der Heizung
4 / dN Neutral

- E** 1 / a Main switch ON/OFF
2 / c Switching on the heating
3 / b Requirement of heating
4 / dN Neutral



Tension de commande : 24VDC
Steuerspannung : 24VDC
Control voltage : 24VDC