


DALI power supply **datasheet**

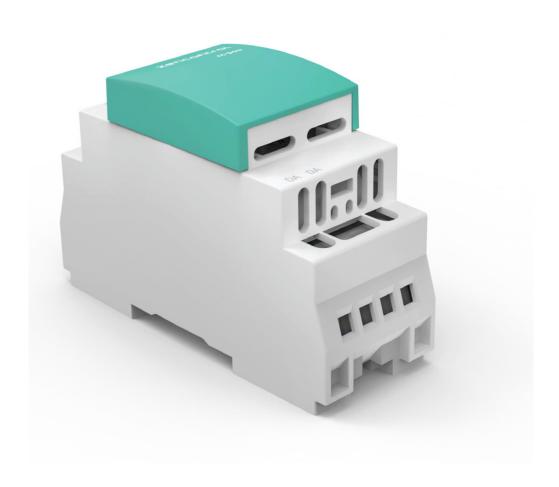

Features

- 235 mA DALI line current
- DALI-2 compliant power supply
- Compliant to IEC 62386-101 Ed 2.0
- Advanced bus power supply, as defined by IEC 62386-101 Ed 2.0
- Suitable for distribution board mounting on standard 35 mm DIN rail











Product range

Order code	Description
zc-psu	DALI -2 power supply, DIN mount

Features

- Suitable for one DALI line
- 235 mA DALI line current
- Compatible with DALI systems
- DALI-2 compliant power supply
- Protected against short circuit and DALI over-voltage
- Tested and compliant to IEC 62386-101 Ed 2.0
- Advanced bus power supply, as defined by IEC 62386-101 Ed 2.0
- Suitable for distribution board mounting on standard 35 mm DIN rail


DALI power supply **datasheet**


Specifications


Supply voltage	230 V ~ 50 Hz
Control system	DALI-2
Guaranteed supply current	235 mA
Maximum supply current	250 mA
DALI voltage	16.5 V nominal line voltage
Wiring	1 - 4 mm² Strip 6 - 7 mm
Operating temperature	0 to 45°C
Material	PC
Classification	Class II
Mounting	DIN rail (35 mm)
Ingress protection	IP20
Compliance standards	IEC 61347-2-11 IEC 62386-101 Ed 2.0 CISPR 15 EN 55015 EMC-2004/108/EC LVD-2006/95/EC

Dimensions

92.5 / 62 / 36 mm

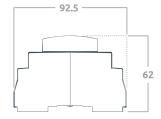

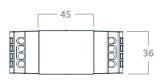

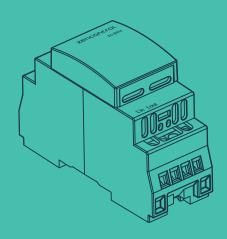

Product range

Order code	Description
zc-psu	DALI-2 power supply, DIN mount

Specifications

Supply voltage	220 - 240 V ~ 50 Hz
Control system	DALI-2
DALI output voltage	16.5 V dc nominal line voltage
Guaranteed supply current	235 mA
Maximum supply current	250 mA
Wiring	1 - 4 mm² Strip 6 - 7 mm
Operating temperature	0 to 45°C
Material	PC
Classification	Class II

Short circuit protection

A DALI line load greater than the nominal current (> 240 mA) will cause the device to enter short circuit protection after 1.2 seconds. During short circuit protection the output will be disabled for 3 seconds and then restored. Once restored the process may repeat if the line current is still greater than nominal rated current.

Safety information

- This product must only be installed by a licensed electrician.
- Before commencing installation turn off and isolate the electrical supply.
- There are no user serviceable parts, attempting to service any part of the product will void the warranty
- DALI is not SELV and as such should be treated as LV.
- As the installer, it is your responsibility to ensure you comply to all relevant building and safety codes. Refer to application standards for
- When the installation is complete, leave this manual with the building's owner for future reference.


Dimensions



92.5

Mounting options DIN rail mount (35 mm) **Dimensions** 92.5 / 36 / 62 mm 36 45

System overview

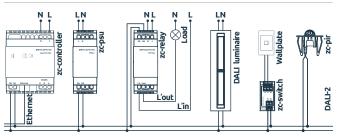


Installation

Remove the product from the box and inspect it for any damage. If you believe the product to be damaged or otherwise unsound, do not install the product. Please pack it back into its box and return it to the place of purchase for replacement.

If the product is satisfactory, proceed with the installation:

- 1 Ensure safety warnings are adhered to.
- 2 Mount the DALI power supply on DIN rail inside a mains rated enclosure as shown in fig 1. To remove from DIN rail, release the clip mechanism with a flat blade screw driver, as per fig 2.

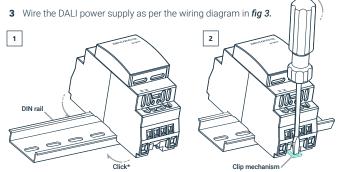

Wiring diagram



Wire preparation



Notice



For more information on compliant software see our website zencontrol.com







