

Lantech

User Manual (Hardware)

T(P)GS-3208GF

L2+ (w/8 PoE at/af) M12 NAT router switch



V1.02

Oct. 2025

RP-001-31


Approval Information

Version 1.02	Name	Title	Date
Author	Alice Huang	Marketing	2025.10.28
Verifier	Jacky Chou	HW QA	2025.10.28
Approver	Thomas Lee	RD head	2025.10.28

[illegible]

Recommendation for Shielded network cables

STP cables have additional shielding material that is used to reduce external interference. The shield also reduces emissions at any point in the path of the cable. Our recommendation is to deploy an STP network cable in demanding electrical environments. Examples of demanding indoor environments are where the network cable is located in parallel with electrical mains supply cables or where large inductive loads such as motors or contactors are in close vicinity to the camera or its cable. It is also mandatory to use an STP cable where a power device (like an IP camera) is used outdoors or where the network cable is routed outdoors.

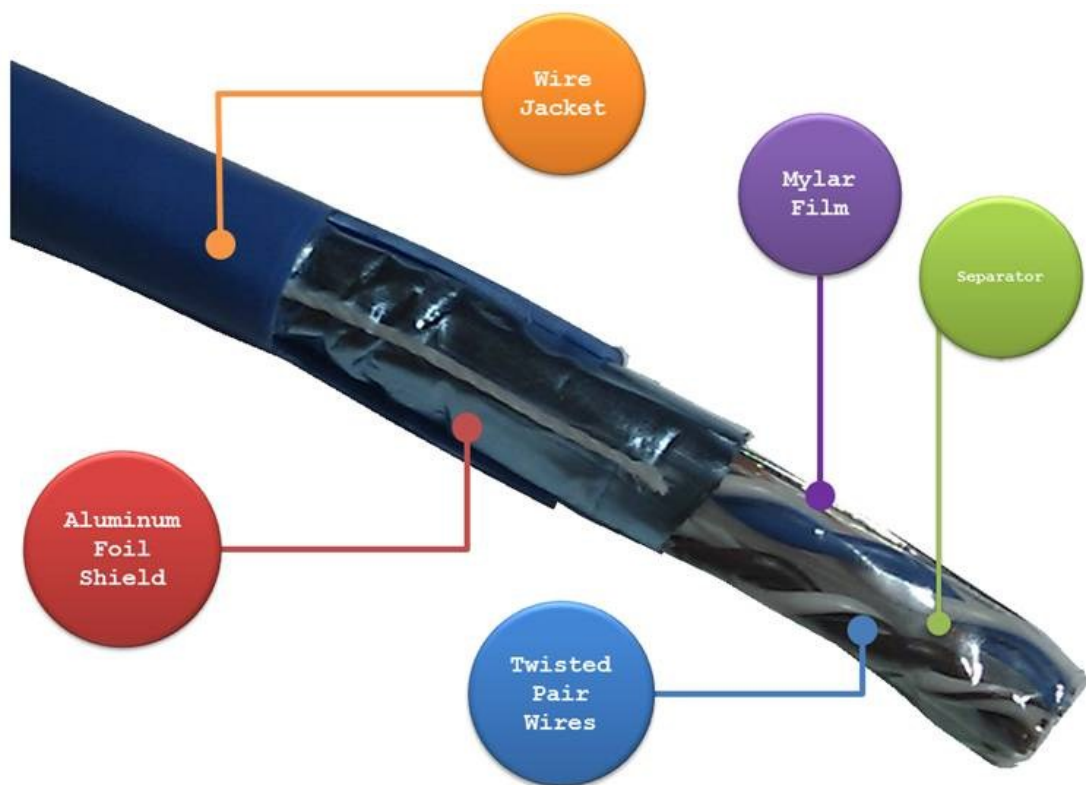

Important Notice

Lantech Communications Global, Inc. reserves the right to modify the equipment, its specification or this manual without prior notice, in the interest of improving performance, reliability, or servicing. At the time of publication all data is correct for the operation of the equipment at the voltage and/or temperature referred to. Performance *data* indicates typical values related to the particular product.

No part of this documentation or information supplied may be divulged to any third party without the express written consent of Lantech Communications Global Inc. Products offered may contain software which is proprietary to Lantech Communications Global Inc. The offer or supply of these products and services does not include or infer any transfer of ownership.

Interference Issues

This Equipment has been tested and has been found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a commercial or industrial installation. This equipment generates, uses, and can radiate radio frequency energy. It may cause harmful interference to radio communications if the equipment is not installed and used in accordance with the instructions.



**CLASS 1
LASER PRODUCT**

Caution – Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation

exposure

FCC Warning

This Equipment has been tested and found to comply with the limits for a Class-A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. It may cause harmful interference to radio communications if the equipment is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CE Mark Warning

This is a Class-A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Content

Chapter 1	Hardware Description	6
1.1	Physical Dimension	7
1.2	Package Content:	7
1.3	Front Panel	8
1.4	IP Protection	9
1.5	LED Indicators	11
Chapter 2	Hardware Installation	13
2.1	DIN RAIL installation	13
Chapter 3	Connect Cable	17
3.1	Power input M12 connector.	17
3.2	Console & USB dongle M12 connector	19
3.3	10/100/1000T interface M12 connector	20
3.4	LC Fiber connector	22
3.5	Ground interface M6 connector	23
Chapter 4	Maintenance	24
Chapter 5	Console Management	25
5.1	Connecting to the Console Port	25
5.2	Login in to the Console Interface	25
Chapter 6	Reset the Switch	27

Chapter 1 Hardware Description


Lantech T(P)GS-3208GF are high performance OS2 IP54 industrial NAT router switches by M12 connectors which provides L2 wire speed and advanced security function for connecting PD network.

In this paragraph, it will describe the router switch's hardware spec, port, cabling information, and wiring installation.

Model name	1000M Fiber	10/100/1000T	PoE at/af
TPGS-3208GF	2	8	8
TGS-3208GF	2	8	

1.1 Physical Dimension


IP54, 272.5mm(W)x100mm(H)x84.4mm(D)

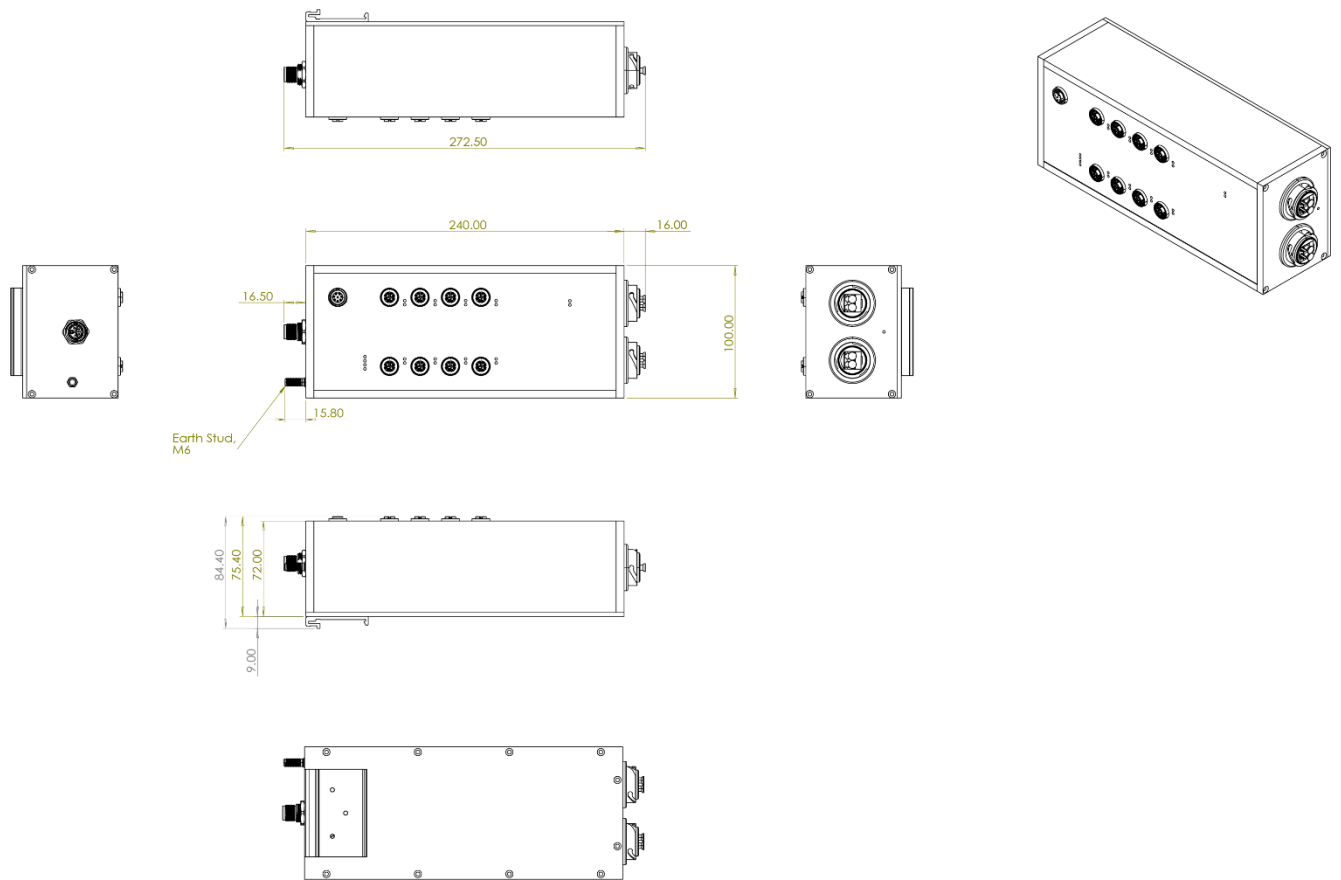

1.2 Package Content:

- Product (Router Switch)

1.3 Front Panel

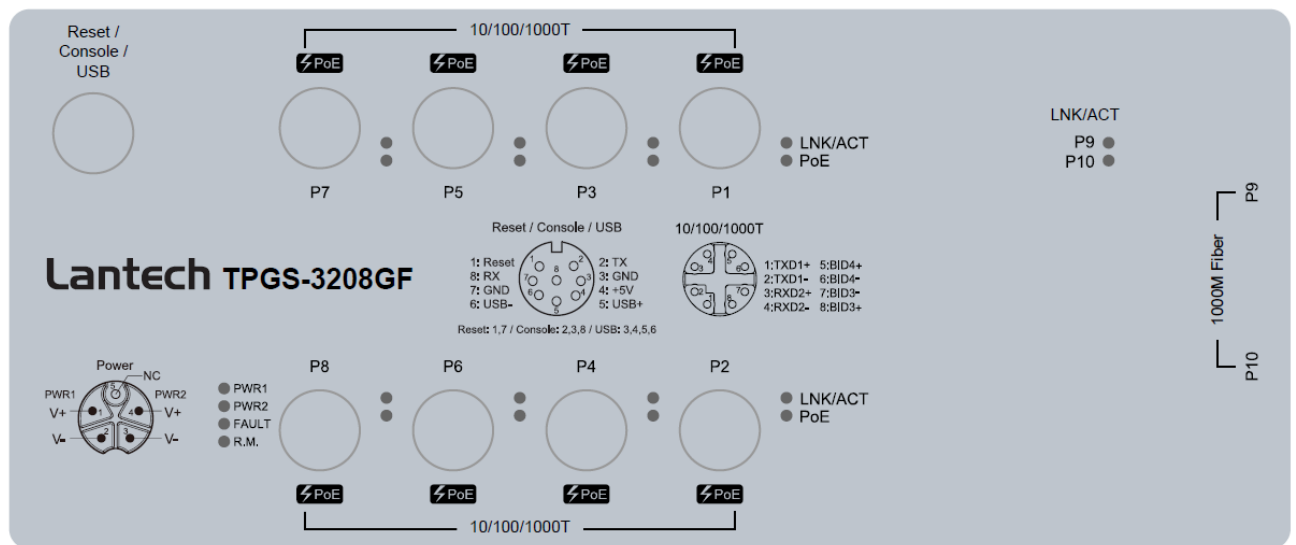

(For non-PoE model, there will be no PoE LED and PoE icon)

1.4 IP Protection

The **IP Code, Ingress Protection Rating**, sometimes also interpreted as **International Protection Rating**, classifies and rates the degree of protection provided against the intrusion (including body parts such as hands and fingers), dust, accidental contact, and water in *mechanical casings* and with electrical enclosures. It is published by the International Electrotechnical Commission (IEC)

Solid particle protection

The first digit indicates the level of protection that the enclosure provides against access to hazardous parts (e.g., electrical conductors, moving parts) and the ingress of solid foreign objects.

Level	Object size protected against	Effective against
0	—	No protection against contact and ingress of objects
1	>50 mm	Any large surface of the body, such as the back of a hand, but no protection against deliberate contact with a body part
2	>12.5 mm	Fingers or similar objects
3	>2.5 mm	Tools, thick wires, etc.
4	>1 mm	Most wires, screws, etc.
5	Dust protected	Ingress of dust is not entirely prevented, but it must not enter in sufficient quantity to interfere with the satisfactory operation of the equipment; complete protection against contact
6	Dust tight	No ingress of dust; complete protection against contact

Liquid ingress protection

The second digit indicates the level of protection that the enclosure provides against harmful ingress of water.

Level	Protected against	Testing for	Details
0	Not protected	—	—
1	Dripping water	Dripping water (vertically falling drops) shall have no harmful effect.	Test duration: 10 minutes Water equivalent to 1 mm rainfall per minute
2	Dripping water when tilted up to 15°	Vertically dripping water shall have no harmful effect when the enclosure is tilted at an angle up to 15° from its normal position.	Test duration: 10 minutes Water equivalent to 3 mm rainfall per minute
3	Spraying water	Water falling as a spray at any angle up to 60° from the vertical shall have no harmful effect.	Test duration: 5 minutes Water volume: 0.7 litres per minute Pressure: 80–100 kPa
4	Splashing of water	Water splashing against the enclosure from any direction shall have no harmful effect.	Test duration: 5 minutes Water volume: 10 litres per minute Pressure: 80–100 kPa
5	Water jets	Water projected by a nozzle (6.3 mm) against enclosure from any direction shall have no harmful effects.	Test duration: at least 15 minutes Water volume: 12.5 litres per minute Pressure: 30 kPa at distance of 3 m
6	Powerful water jets	Water projected in powerful jets (12.5 mm nozzle) against the enclosure from	Test duration: at least 3 minutes Water volume: 100 litres per

		any direction shall have no harmful effects.	minute Pressure: 100 kPa at distance of 3 m
7	Immersion up to 1 m	Ingress of water in harmful quantity shall not be possible when the enclosure is immersed in water under defined conditions of pressure and time (up to 1 m of submersion).	Test duration: 30 minutes Immersion at depth of at least 1 m measured at bottom of device, and at least 15 cm measured at top of device
8	Immersion beyond 1 m	The equipment is suitable for continuous immersion in water under conditions which shall be specified by the manufacturer. Normally, this will mean that the equipment is hermetically sealed. However, with certain types of equipment, it can mean that water can enter but only in such a manner that it produces no harmful effects.	Test duration: continuous immersion in water Depth specified by manufacturer
9	Powerful high temperature water jets	Protected against close-range high pressure, high temperature spray downs.	—

1.5 LED Indicators

The diagnostic LEDs that provide real-time information of system and optional status are


located on the front panel of the industrial switch. The following table provides the description of the LED status and their meanings for the switch.

LED	Color	Status	Meaning
R.M	Green	On	The switch unit is owner switch of ITU-Ring
		Off	The switch is not owner switch
PWR1	Green	On	Power 1 is active
		Off	Power 1 is inactive
PWR2	Green	On	Power 2 is active
		Off	Power 2 is inactive
FAULT	Red	On	Power or port failure
		Off	No failure
P1 ~ P8 Link/Act	Green	On	A network device is detected.
		Blinking	The port is transmitting or receiving packets from the TX device.
		Off	No device attached
P1 ~ P8 PoE (PoE model)	Green	On	The port is operating in PoE mode.
		Off	The port is not operating in PoE mode.
P9 P10 Link/Act	Green	On	A network device is detected.
		Off	No device attached

Chapter 2 Hardware Installation

2.1 DIN RAIL installation


The DIN-Rail is screwed on the industrial switch when out of factory. If the DIN-Rail is not screwed on the industrial switch, please see the following pictures to screw the DIN-Rail on the switch. Follow the steps below to hang the industrial switch.

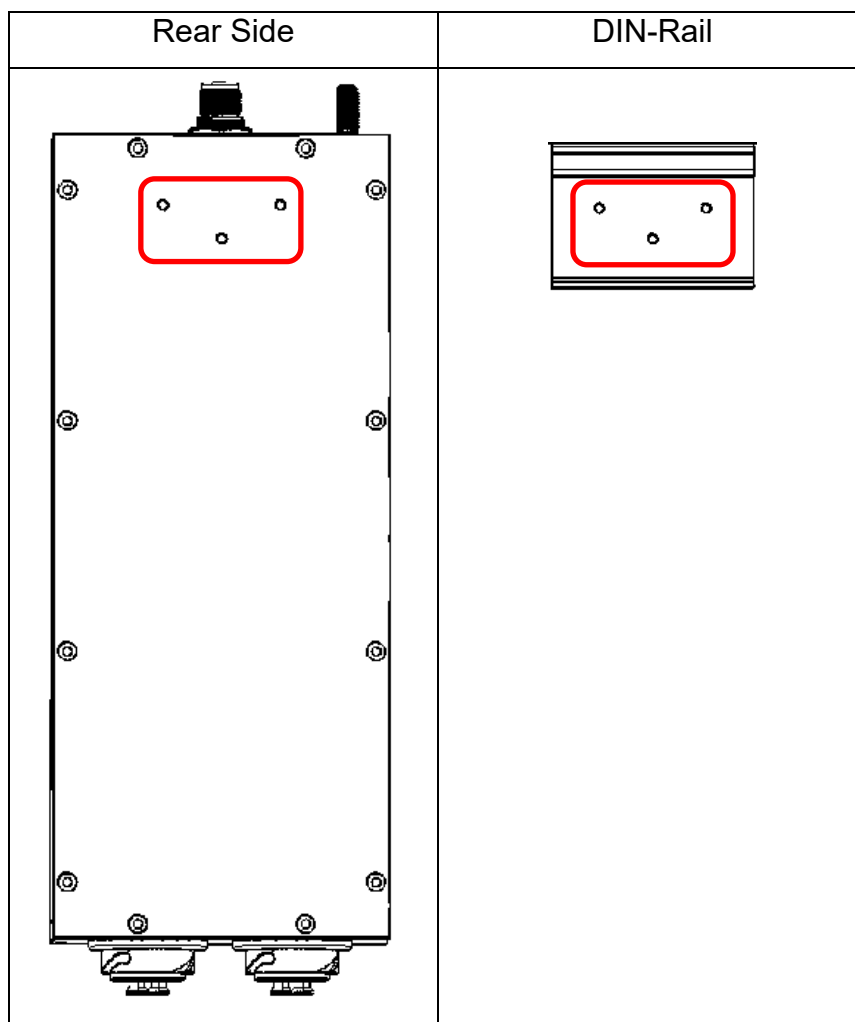


Follow the steps below to mount the industrial switch on the DIN rail:

1. Position the switch so that the upper edge and spring of the DIN clip, which is located within the top of the DIN rail bracket, engage with the top section of the DIN rail. Push down to compress the spring.


Note: Ensure a secure installation by verifying that the DIN clip's spring firmly locks into the rail groove

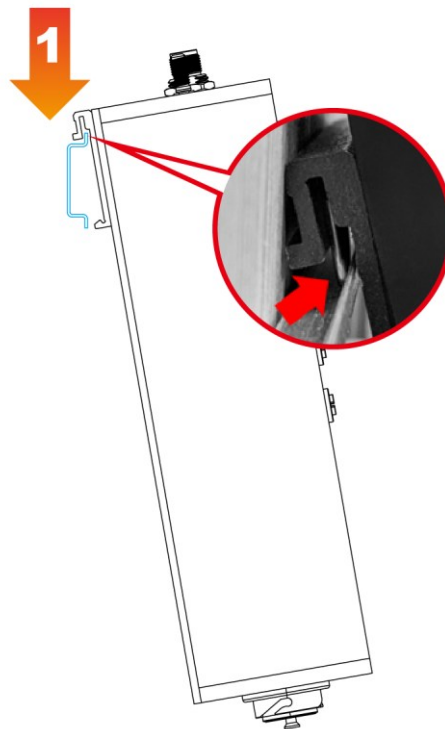


2. Rotate the switch to align the bottom hook of the DIN clip with the bottom section of the DIN rail and clamp it in place (refer to the image).

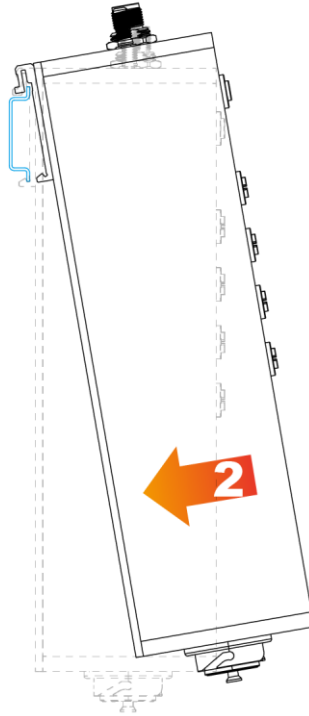

3. Verify that the DIN rail clip is securely attached to the DIN rail.

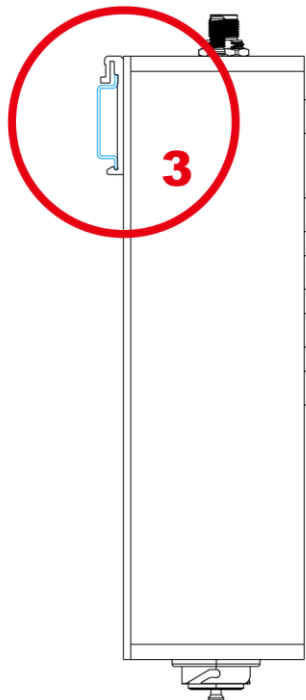

4. To remove the industrial switch, press down to compress the DIN clip spring.
5. Grasp the lower part of the switch and rotate it away from the DIN rail (refer to the image).

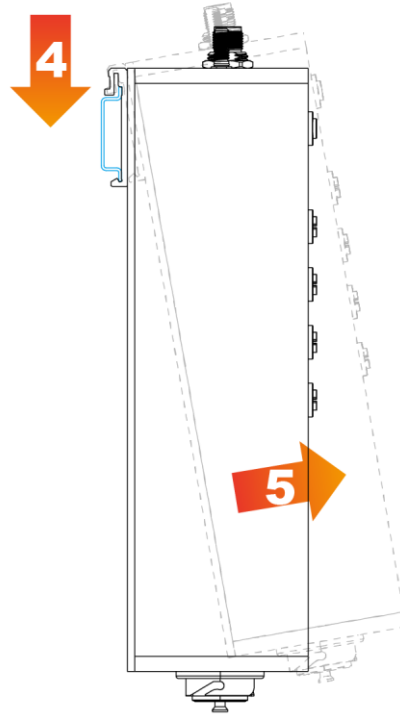

Chapter 3 Connect Cable

Notice

Correctly connecting the grounding cable is crucial to lightning protection and EMI protection. To avoid damages caused by surge or EFT, using STP cable is highly suggested.


After the hardware installation is complete, please connect the cable to the switch. All the external interfaces use M12 connector design and follow IEC 61076 standard.

3.1 Power input M12 connector.






Note: Please check the power connector has been connected to the switch correctly before you turn on the power resource.

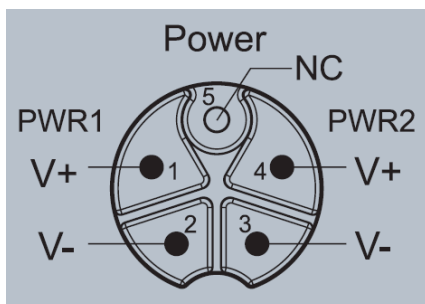Spec. of power input

- Voltage of Power Input:
Dual DC input, 9-36VDC (24VI model); 44-56VDC (48VI model)
- Total PoE budget: 120W
Please make sure that the external power supply unit can satisfy the total power consumption in field.
- Pin assignment of power input




- Pin assignment of optional power cable ECABM12-05K(F)-90-1.5M


PWR1 V+		RED
PWR1 V-		BLACK
PWR2 V-		WHITE
PWR2 V+		GREEN
NC		X
<u>CON1</u>		<u>OPEN</u>

*The color is based on the optional power cable of Lantech.

- Make sure the direction of connector is correct before you connect it.

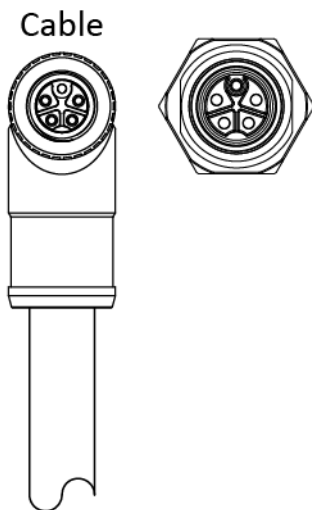


- Plug power connector and screw in clockwise direction to fix it.

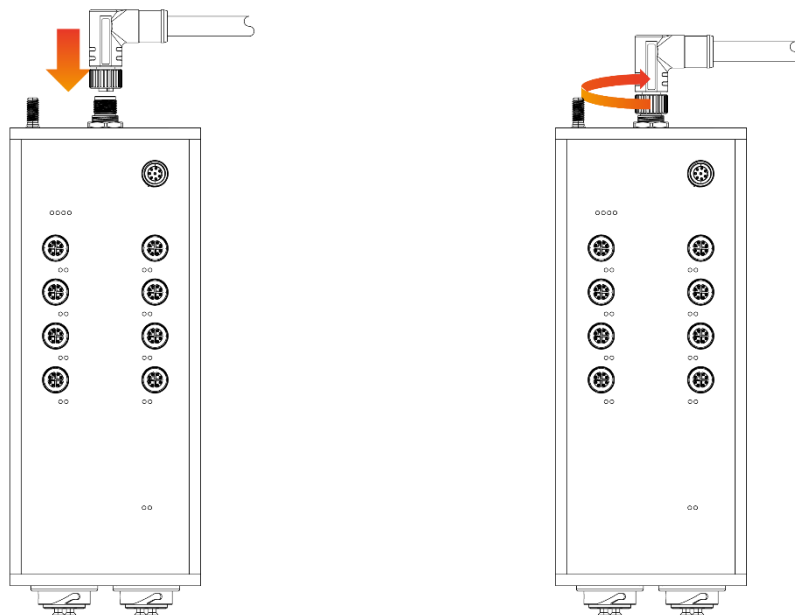

3.2 Console & USB dongle M12 connector

- Pin assignment of console & USB dongle

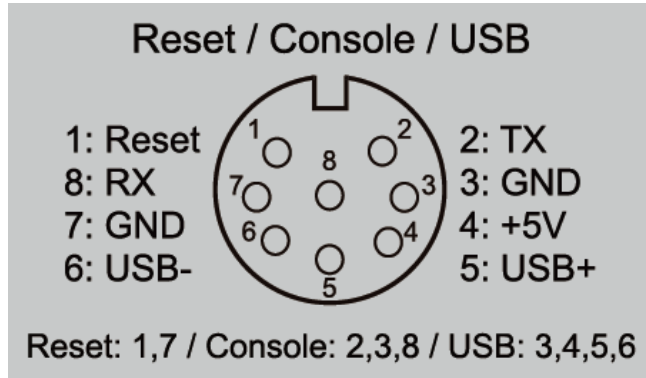



- Make sure the connector is the right direction before you connect it.

Cable




- Plug console connector and screw in clockwise direction to fix it.

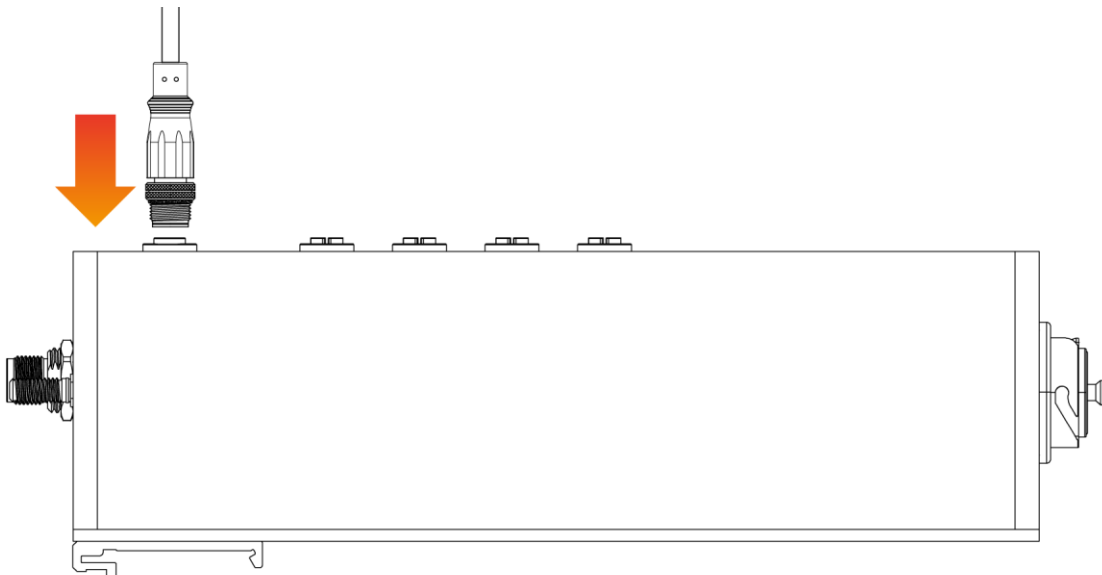


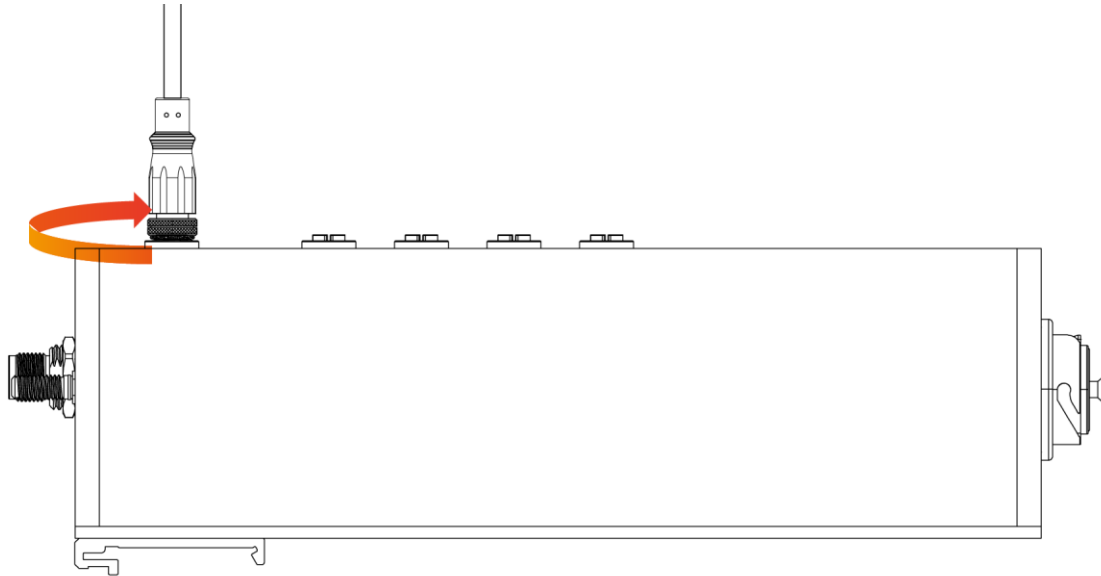


3.3 10/100/1000T interface M12 connector

- Pin assignment of the 10/100/1000T port

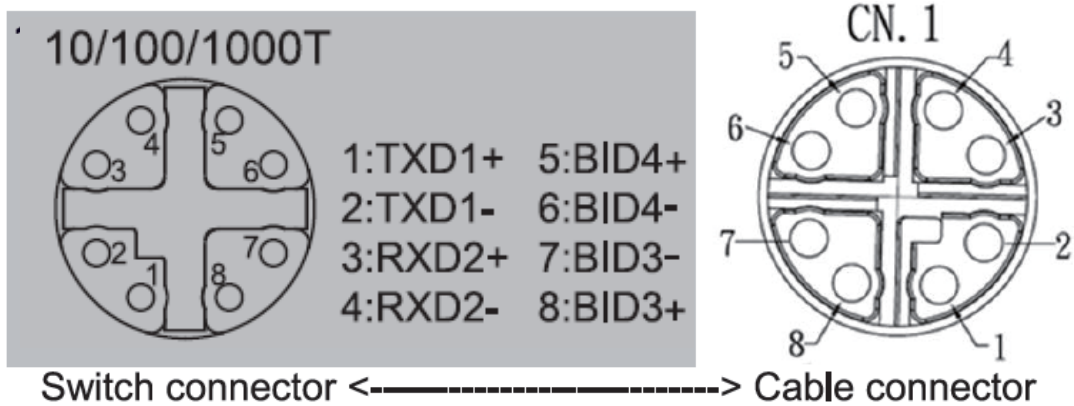

Shell	Gnd	Shell
1	Orange/ White	1
2	Orange	2
3	Green/ White	3
4	Green	6
5	Brown/ White	7
6	Brown	8
7	Blue/ White	5
8	Blue	4
CN. 1	Wire Color	CN. 2
PIN OUT		

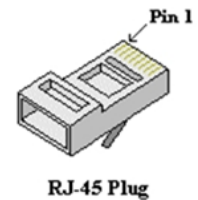
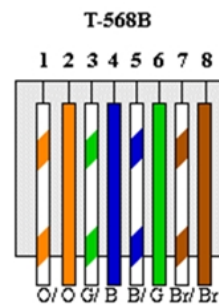


- Make sure the direction of connector is correct before you connect it.

Cable




- Plug the connector and screw in clockwise direction to fix it.

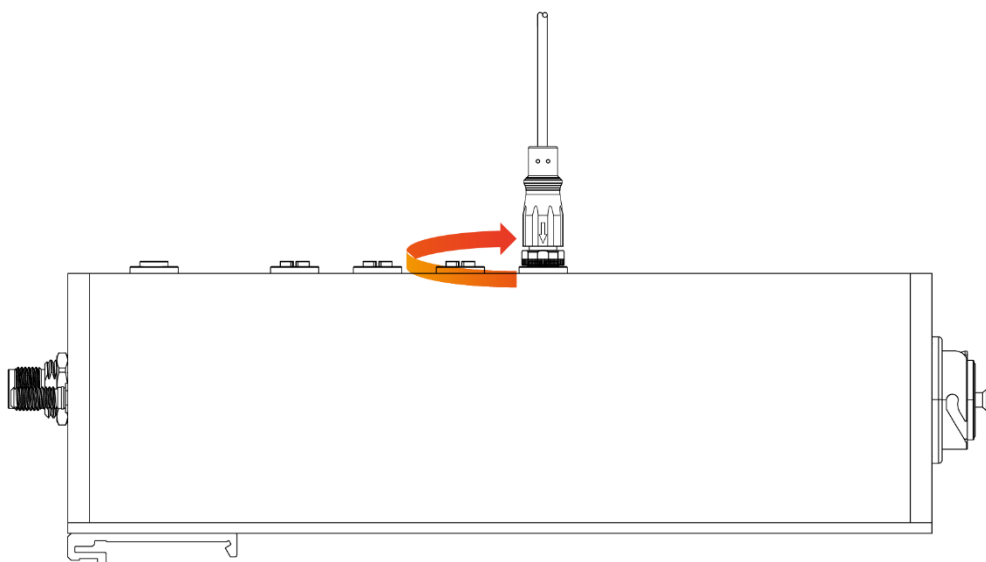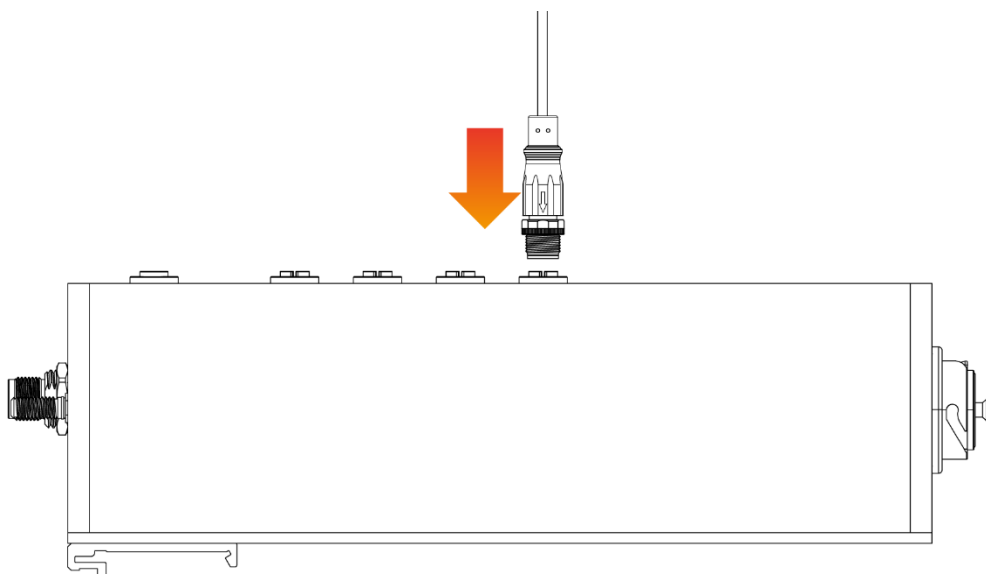

3.4 LC Fiber connector

- Plug in the fiber cable

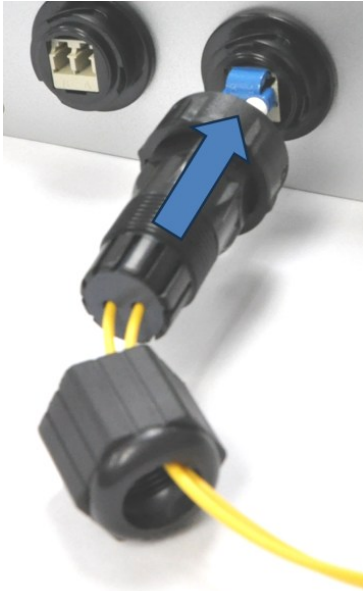

- Screw the clamp ring



- Screw the seal nut and done




3.5 Ground interface M6 connector

Ground

The chassis is grounded via a separate grounding nut (M6).

Use toothed locking washers for a good electrical connection.

* **Note:** The torque should not exceed **14 kilogram-force centimeters (kgf·cm)**, which is approximately **1.4 newton-meters (N·m)**. Applying torque beyond this limit may cause damage to the grounding components.

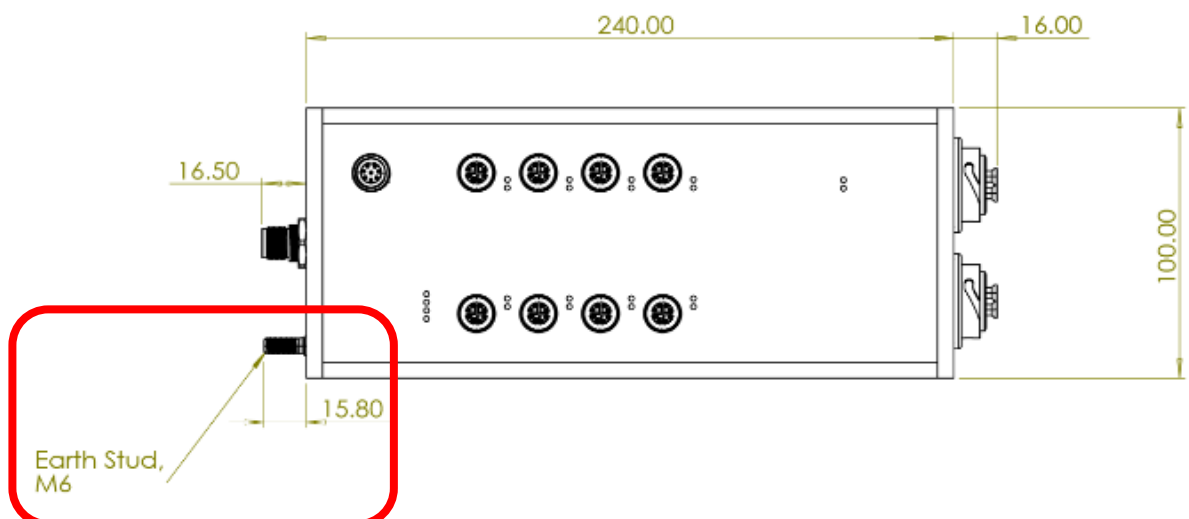

Ground screw of the switch


Chapter 4 Maintenance

- 1 Check each switch connection and make sure they are all screwed correctly.
- 2 Keep the anti-dust cap on all un-used switch interface
- 3 Access switch via web browser and check the below points:
 - 3.1 Compare the physical connection of the switch port with the switch icon on the web user interface to make sure the connecting status match each other.
 - 3.2 Check the information on the hardware monitor to make sure all conditions are in normal status.
 - 3.3 Check event log to see if there are any abnormal events.

Chapter 5 Console Management

5.1 Connecting to the Console Port

The supplied cable has one M12 4-pole connector end and another RS-232 connector end. Attach the RS-232 connector end to a PC or terminal and the other M12 connector end to the console port of the switch. The connected terminal or PC must support the terminal emulation program.

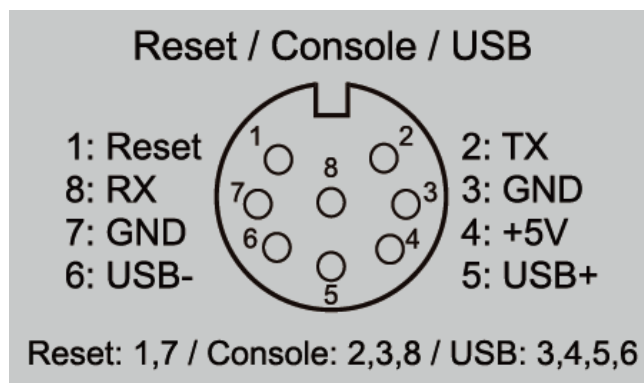

5.2 Login in to the Console Interface

When the connection between Switch and PC is ready, turn on the PC and run a terminal emulation program or **Hyper Terminal** and configure the **communication parameters** to match the following default characteristics of the console port:


Baud Rate: 115200 bps

Data Bits: 8

Parity: none


Stop Bit: 1

Flow control: None

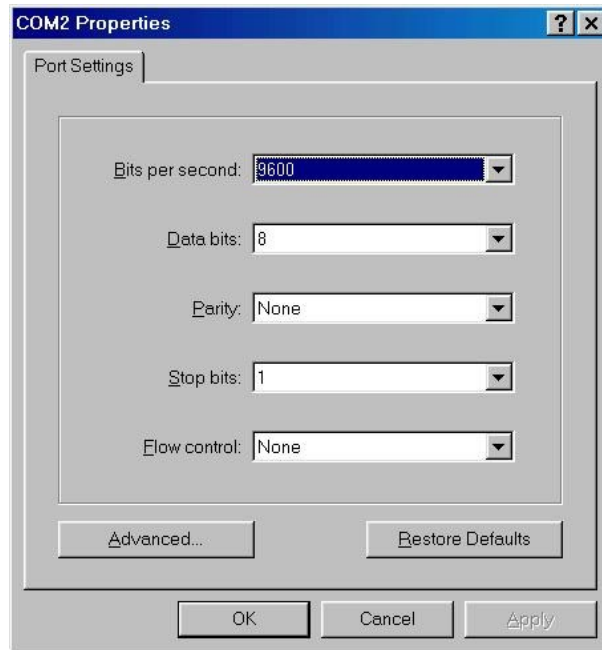


The settings of communication parameters

Having finished setting up the parameters, click '**OK**'. When the blank screen shows up, press the Enter key to have the login prompt appear. Key in '**admin**' (default value) for both User name and Password (use **Enter** key to switch), then press Enter and the Main Menu of console management should appear. Please see below figure for login screen.

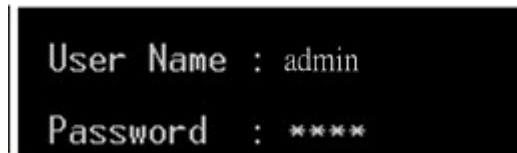

Console login interface

Chapter 6 Reset the Switch

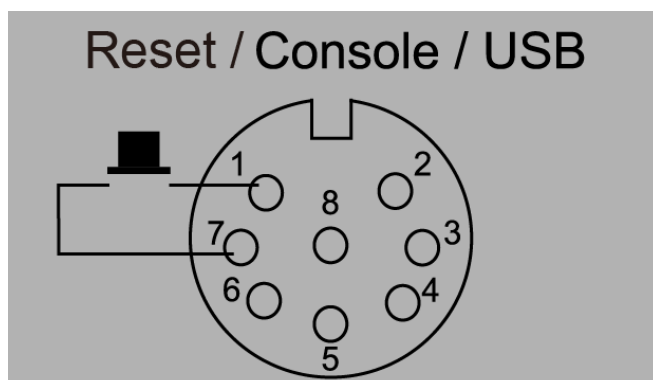

You can reset the Ethernet switch to default configuration by making pin1 and pin7 short for more than 5 seconds.

=====Notice=====

For web-based management, please refer to our “Software Management Manual”.
Please [contact us](#) for more information.