



# How to check System Serial No of FANUC CNC

## A. Via Operating CNC Screen


- I. Press System  function key in MDI
- II. Press the continuous menu key  or soft key [NEXT PAGE] several times until vertical soft key [MAINTE INFO] appears. When 8.4-inch display unit is used, soft key [M-INFO] is displayed appears.

15 inch Screen



10.4 inch Screen




- III. Press [MAINTE INFO]/[ M-INFO] soft key. The maintenance information screen appears.
- IV. Press Page-Up  key several times, go to Top of the page, there system serial no. will be mentioned.

### M-INFO Screen



## FLOW TO OPERATE

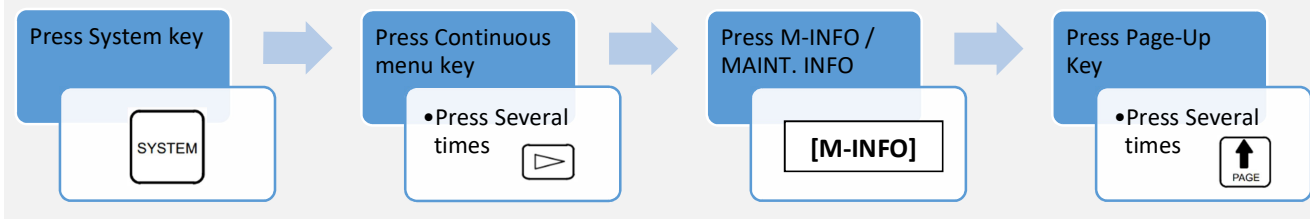

## B. From CNC Back Cover Sticker

Please locate the sticker on the back of the CNC, which contains a serial number as indicated in the above example. The serial number will begin with either "Exxxxxxxx" or "Dxxxxxxx".

# How to check System Serial No of FANUC CNC



Front View of CNC



Backside of CNC display

Back Side of CNC screen  
kindly find Serial No. start  
with Dxxxxxxx or  
Exxxxxxxx.

