

R16 / R21 Direct Drive Wheel Base

Your speed and passion



User manual

01 Product Features

- Hypercar design concept
- All Aluminum Alloy Body.
- 16 N·m Peak Torque.
- Patented Wireless Power Supply.
- · Supports most simulation racing software.

02 Introduction

MOZA R16 inspired by hyper-car speed featuring an industrial grade electric motor.



USB-B (connect to computer)







04 Installation

- 1. Attach the R16 base to the simulator bracket through the 4 threaded holes on the bottom.
- Connect the power cord and the TYPE-B end of the USB cable into the corresponding ports on the rear of the R1. Turn on the power supply and connect the TYPE-A end of the USB cable to the PC.
- 3. Short press the power button on the rear of the R16 base. (short press to turn on, long press to turn off).
- Download and install the MOZA Pit House software from the help center of MOZA Racing's official website (WWW.MOZARACING.COM). Start your racing journey with the R16.
- 5. For more information and instructional videos, please visit the official website (MOZARAC-ING.COM)

05 Caution and Warnings

- To avoid fire/electric shock it is forbidden to expose the equipment to rain and or damp environments.
- · It is strictly forbidden to use the equipment in direct sunlight.
- Recommended indoor temperature: 15°C ~ 30°C/59°F ~ 86°F.
- It is recommended that a single operation time should not exceed 1 hour. If it exceeds this limit, it is recommended to take a break every 20 minutes.
- It is recommended for new users to limit force feedback to less than 50.
- Excessive use may cause health risks, please do not operate MOZA R16 for more than 2 hours a day · The device is not suitable for children under 6 years old, small accessories may cause a choking hazard!
- Children under 13 need to be supervised by their parents while operating the MOZA R16.
- · It is strictly forbidden to disassemble the equipment, doing so will void your warranty.
- The MOZA R16 must be connected to the power supply provided by MOZA. To ensure the safety of user and hardware.
- To ensure the hardware will operate safely. Repair or replacement parts can only be carried out by an authorized repair center.
- Even if the relevant voltage and other data match, the use of non-standard power supplies is prohibited.
- · Only use the AC power supply provided.
- · It is forbidden to expose the equipment to heat sources.
- When the MOZA R16 is not in use for a long time, unplug the power cord to cut off the power.
- If you find any abnormality, please stop using the MOZA R16 and contact MOZA or authorized dealer.
- · Follow MOZA's official website and public platforms for the latest relevant product information.

A This product use is limited to activities related to simulated driving, please distinguish between simulated games and reality to ensure safe driving

06 Packing List

- Base Unit
- Power Adapter
- Power Cord
- Data Cord
- Bolt Kit

07 Software Introduction

View the status of connected devices on the main page, set the base angle, force feedback, pedals, steering wheel and gauges, etc.



The basic settings help a beginner driver to quickly find the appropriate race feel. The professional settings allow an advanced driver to select exclusive force feedback settings.

MOZA PR H	House		- D ×
MOZA	A		
	Basic Settings Advance	ed Settings FFB Effect Equalizer	
	Prost Rule globals	Matar lance feelback-strength	at 11 5
0	Arts	(a)	100
д	Malifram Usering angle	Maximum speed at assering wheel	10 and 200 %
۰.	340 340 778 909 Rund effect	an a	. AM
۵	· · · ·	THE CALL CALL	24 4 5
A.	Game force feedback intervity	Mechanical damping ratio	1 10 18 S
	(a) (a) (a)	(w) (w)	104
		Auxiliary contacting control	Off 1
	Select Setting Income	Chevrolating	

Users can adjust the steering wheel feedback feel of the road according to their preferences and or different track environments.

MOZA I	Pit House					- 0	×
MOZ	ZĄ						
8		Basic Settings	Advanced Settings	FFB Effect Equalizer			
	Operating Wheel Booly Reenpe	s Attalends Atalieng Den Kenth	ABS Valuation Colom/Schieling On NetS	SCRayfy Hiding 3 Dr Grass	attive.In Hicking Isolere.In Hicking Die Norb Die Samd		
e	329						
д							
۰							
8	-						
	10					-	
		15Hz 15Hz	2541	4842	Serva	190912	
		Default Setting	Insurt Setting	Sectority			
		[Martinese		34574551.5			

Choose colors for the shift light indicator and adjust the timing of the color shift/change. Create a custom shift light sequence.

MOZA Pit House		- D X
MOTA		
n	Steering Wheel Settings	
	Spring Publics Mede	
	Ann-tell.	Addeet
	Engine PPM Indicator	•
	Englise RPM Indicator Display Mode	
	Hada Cea	Hode Two
The second secon	Engine HPM Indicator Timing	
	test Reveal	Law
	Color Settings (drug is color block to a strictle god)	1000
	Brightman	10- 100 BOD
	Collinate Autobas	241
	Contraction (Contraction)	
Debuilt Sering	Import Setting Sear Setting	

MCIZA PR	t House		- 0
YOR	A		
n	Throttle	Brake	
• 0	Start Setartion 0 10 10 10 100 10 June 10 100 Start 10 100	Set 1 Presenter Not No.	Setawilen
	100 100 100 100 100 100 100 100 100 100	TeA	
	Clutch		
•	Dial Tellarities 0 0		
	Text		
	Dolast Setting	San Loting	

Easily and quickly adjust pedal stroke.

Upgrade the MOZA Racing suite ecosystem with one click, and quickly enjoy the latest functional experience.

MCIZA P	it House				- D X
MOZ	A				
6	R16 Base	Lastest Firmware	R36 RS Alcantara Wheel Ladest Persons	Perturb	
٠	Wheel 3 v1.1		Stearing Wheel v1.1.3	Pedan. Verse	
Θ					
щ	Service On	othing	Venior Decking		
	Racing Meter				
	Master W.				
			Organic all in one clock		

For detailed software instructions, please visit the help center page of MOZA's official website to download the detailed instructions (MOZARACING.COM)

08 Specification Table

Drive form: Direct Drive. Maximum Turning Angle: 1600°. Body Material: Aluminum alloy. Body Color: Orange/Black. Maximum Torque: 16 N·m. Maximum Power: 360W Input voltage: 110V~220V AC→36V DC. Mobile App function: supported. Quick release: supported. Interface: structure, data, power supply, emergency stop. Accessories: power adapter, data cable, blot kit, manual, and warranty card. Fixing method: 4 holes at the bottom, special bracket supports angle adjustment and side fixation. Emergency stop switch: optional. Firmware upgrade: supported. Size: 327mm×170mm×130mm. Weight: 8,9kg.

09 Supplement

- This product has high force feedback strength and contain small parts. Children are prohibited from using it without parental guidance.
- · Keep away from loose clothing and easily entangled objects, such as hair, cables, skirts, etc.
- MOZAR R16 can be used after unpacking. We ensure that the firmware is updated to the latest version at the factory. For more information about software updates, please visit the MOZA website.
- This manual is for demonstration purposes only and cannot be used for marketing purposes. It is a general description of a single product (including related series products). Please refer to the actual product when purchasing.
- The above product pictures and content are for demonstration purposes only. The external
 design of the actual product may be slightly different (including but not limited to appearance,
 color, size) and content display (including but not limited to background, UI, pictures). Please
 check the actual product for reference.
- The above test data are from the MOZA test laboratory. Due to the use conditions and environmental reasons, it may not reflect the actual performance factors.
- The above content, such as descriptions, pictures, etc., may be changed. MOZA may adjust
 relevant content according to the performance and specifications of the actual product to
 provide more accurate product information. Due to unforeseen problems during batch
 processing or delivery, product supply may fluctuate. In this case, MOZA may change the
 relevant instructions and pictures. If necessary, without notice, please learn about relevant
 information through MOZA's website.