



Introduction





EU declaration of compliance



Safety regulations









Terms of guarantee



Procedures to follow before initial use



Daily Maintenance



Lubrication Schedule



Exploded view B804-ZD



Parts list B804-ZD



Parts list cylinder left B804-ZD



Parts list cylinder right B804-ZD



Torques specification



Technical specifications:

B804-ZD





Dear User.

The Tree grab is a piece of equipment for excavators. The Tree grab is available in various weights, capacities and

versions and is always a fast and purpose-built selector and demolition device.

н

Page

(Guideline 2006/42/EC)



Refer to the data information plate on the grab and consult the technical specifications in this manual. When in doubt contact the supplier.

The weight of the grab, increased by the weight of the load being picked up, must never exceed the maximum

The Selector Grab should always be attached to an excavator of the correct weight, class and capacity of machine.

allowance of lifting power. For further information consult the excavator manual.

It is prohibited for people to be within the rotation range of the machine and grab. Keep in mind that material being

lifted that extrude from the grab will enlarge the rotation range.


It is always possible that material can fall out of the excavator's grab. For this reason, never rotate the machinery above people, machines nor vehicles.

not permissible to use the grab to hit or pound.

Whilst connecting or disconnecting, lubricating or other maintenance work, the grab must be stable and on a flat

Always pick up a long load at its centre of gravity, to prevent the excavator from either rotating or tipping over. It is

Whilst connecting or disconnecting, lubricating or other maintenance work, the grab must be stable and on a flat surface. Before performing lubricating or other maintenance work the engine should always be shut down.

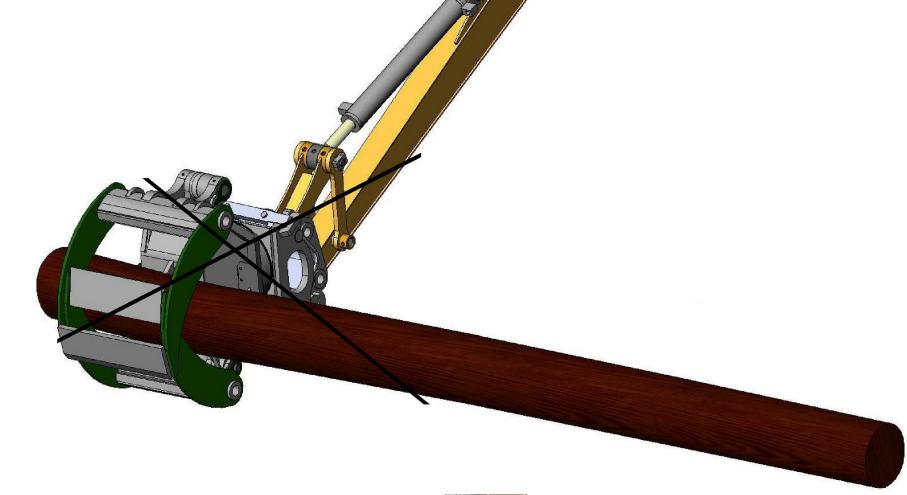

All defective parts proven to be caused by faults in either manufacture, production or material are covered by the warranty.

Defective parts that are replaced and fall under guarantee become property of the manufacturer. They must be kept available and returned immediately, in complete and unaltered condition, upon the first request from the

The manufacturer provides a warranty of 12 months from the date of delivery.

manufacturer.

manufacturer. This must be done directly after the damage or fault occurs and at least within 24 hours of any irregularities and problems arising.

All claims under conditions of the warranty must contain the following data; the type of machine the product has

Any claim made under guarantee will only be taken into consideration once a written appeal is made to the dealer or

been mounted on, the serial number of the grab, the record of the defective part(s) and a description of the fault, photographs, copy of the delivery papers and invoice and a copy of the invoice of the piece of equipment concerned. Minor repairs can be carried out in consultation with the dealer; the necessary parts which fall under the warrantee,

will be delivered without charge. For larger repairs the grab should be sent to your dealer or manufacturer for

repairs or modifications. The work and necessary parts are free of charge. However, transport costs and call-out

charges to and from your dealer or manufacturer are not covered.

The manufacturer is not liable for consequential loss caused by a defective Selector Grab (consequential loss to excavators, consequential loss due to a stationary excavator or the suspending of work activity).

Before taking the machine into operation and to ensure the good functioning of the a-pparatus, it is important that the following points are checked and correspond to the tech-nical specifications as shown on the information plate and in the manual.

For maintenance work, always place the grab in open position on a flat and stable surface and ensure the excavator cannot move. During maintenance on the hydraulic system the hydraulic hoses need to be disconnected. Before disconnecting ensure there is no pressure on the hoses. Consult the manual for the excavator. The grab must be lubricated once every 8 operating hours with the same lubricant recommended for the excavator. For the position of the grease nipples and frequency of lubrication, see the schedule on page 10.

Maximum torque specified to bolts on the cutting blades and rotator of the demolition and sorting grab.

Please consult this listing on diameter, pitch and metric size and maximum torque specified prior to fastening.

















































EU declaration of compliance

 
Manufacturer

Zijtveld Grijpers B.V.





 








 


 













1
2
3
5
6
7
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
28
51
57
58

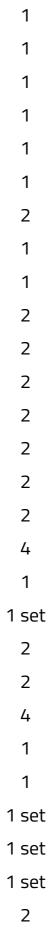

Welded main frame construction Left shell (short lever / small bucket) Right shell (long lever / wide bucket) Welded linkage construction Hydraulic cylinder Hydraulic cylinder Main hinge pin Linkage axis (top / long) Linkage axis (bottom / short) Disk spring Castellated nut Split pin Locking pin Locker plate linkage axis Bearing linkage Bearing shell hinge short Bearings main frame Locker U Grease nipples Shell hinge short Shell hinge long Shell hinge support Fixed blade left bucket (small) Fixed blade right bucket (wide) Hose set lower frame Grease nipples Locking set Plain bearings

S804B.001 S804B.002 S804B.003 S804B.005 S804B.006 S804B.007 S804B.009 S804B.010 S804B.011 S804B.012 S804B.013 S804B.014 S804B.015 S804B.016 S804B.017 S804B.018 S804B.019 S804B.020 S804B.021 S804B.022 S804B.023 S804B.024 S804B.025 S804B.026 S804B.028 S804B.051 S804B.057 S804B.058

101
102
103
104
105
106
107
108
109
110
111



Cylinder housing
Piston rod
Cylinder head
Piston
Bearing cylinder housing
Plain bearing cylinder nut
Cylinder seal kit
Secure bolt
Secure bolt
Cylinder nipple set
Bearing cylinder piston

S804B, 101 S804B.102 S804B, 103 S804B.104 S804B.105 S804B.106 S804B.107 S804B.108 S804B.109 S804B.110 S804B.111

102
103
104
105
106
107
108
109
111
112



Piston rod
Cylinder head
Piston
Bearing cylinder housing
Plain bearing cylinder nut
Cylinder seal kit
Secure bolt
Secure bolt
Cylinder nipple set
Cylinder housing

(

(

C

(

S804B, 102 S804B.103 S804B.104 S804B.105 S804B.106 S804B, 107 S804B.108 S804B, 109 S804B.111 S804B.112



 


Safety regulations





 








 















De Boomgaard 1

   The type and weight of the sorting grab must conform to weight and machine class of the intended excavator.









Weight class excavator



 
Conditions of guarantee

's Graveland





 








 















It is imperative you read this manual and follow all the instructions given when working with our

machinery in accordance with our recommendations.

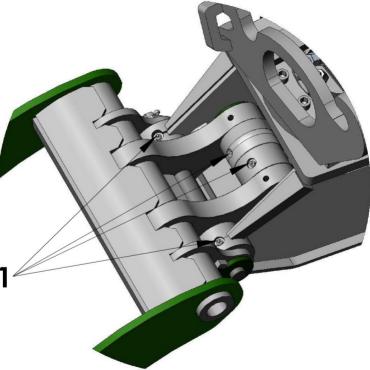


   The oil flow and the pressure for rotating the selector grab should be checked and adjusted.





 








 








 














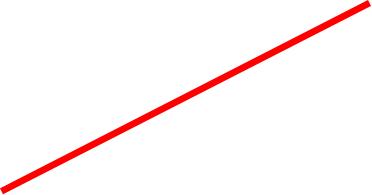


Operation




Hereby declares that Zijtveld Grijper®

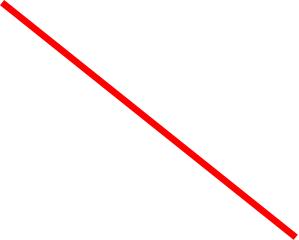

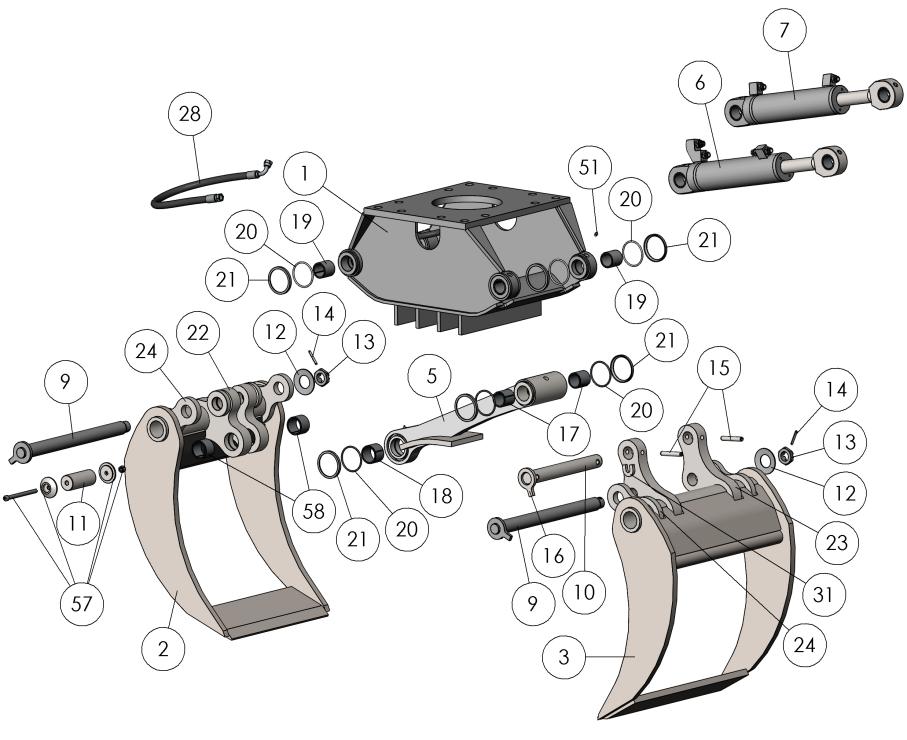

Beware: the return pressure of the rotating oil at a continuous level may be at a max-imum of 25 bar, and only

  
briefly (maximum of 10% of the working time) at 100 bar.







 








 
























Daily maintenance

 



 

Operating pressure max.

 








 








 


 















The Tree grabs are provided with a CE marking, thereby complying with all the necessary European regulatory safety regulations. It is essential to follow the safety regulations at all times. These safety regulations refer to those laid out in this manual, including both the operating instructions for excavators and the safety regulations that apply to the vicinity in which the Tree grab product is being used, maintained and repaired. Modifications made to the Tree Grab may only be implemented with the written consent of the manufacturer. Only under these circumstances do the warranty conditions and CE iabilities remain applicable.

 

 


 Bout 10,9 40 Nm 80 Nm 130 Nm 110 Nm 200 Nm 300 Nm 600 Nm 1000 Nm 1500 Nm 2000 Nm 3600 Nm 4600 Nm




Bout 10,9 4 Kgm 8 Kgm 13 Kgm 11 Kgm 20 Kgm 30 Kgm 60 Kgm 100 Kgm 150 Kgm 200 Kgm 360 Kgm 460 Kgm

  Lubrication schedule







The oil flow and pressure of the pinching (opening and closing) of the sorting grab needs to be controlled and

adjusted.

 
Oil flow max.







 








 
















Serial number

 

 

 



 


Exploded view

 Picture 3: Lubricating cylinder bearing





 








 


 




 


 


 


 













Shell width



 


Check if the hydraulic quick release hitch is in good order and screwed on firmly.

 1 = Lubricate 1 x per 8 operating hours.





 








 


 


 


 


 




 


 












Width opened



 
Parts list + exploded view Cylinder (left)

Check if the ball valves and valves are in the correct position.





 








 
















meets all the required machine guidelines (Guideline 2006/42/EC, as most recently updated) as well as national legislative implementation of this directive. Attention: Any adjustment that is made to this product without written consent on the manufacturer, makes this declaration void and invalid. We should draw your attention to the fact that the selector grab product is designed to be assembled with another machine, and that the product, on the grounds of the machine Guide Line, can only be used once the whole machine is in accordance to the conditions laid down by European regulations.

 


 

 


Note, fine pitch.

 

 



 


Height opened










  












Parts list + exploded view Cylinder (right)


Check if the connecting pins between the excavator and the sorting grab are well secured, as well as the wedge

    and the security pin of the quick release hitch system.





 


 


 


 


 




 












Tightening torques

Closing force



 
Exploded view cylinder right B804-ZD

 
Exploded view cylinder left B804-ZD














Ensures that the hoses have the correct length and are at no risk of interfering with any of the moving parts. Also

   make sure they cannot wear or damage because of contact with the grab or material that is moved by the grab.









Technical specifications










 

    







 


 


 


 


 














 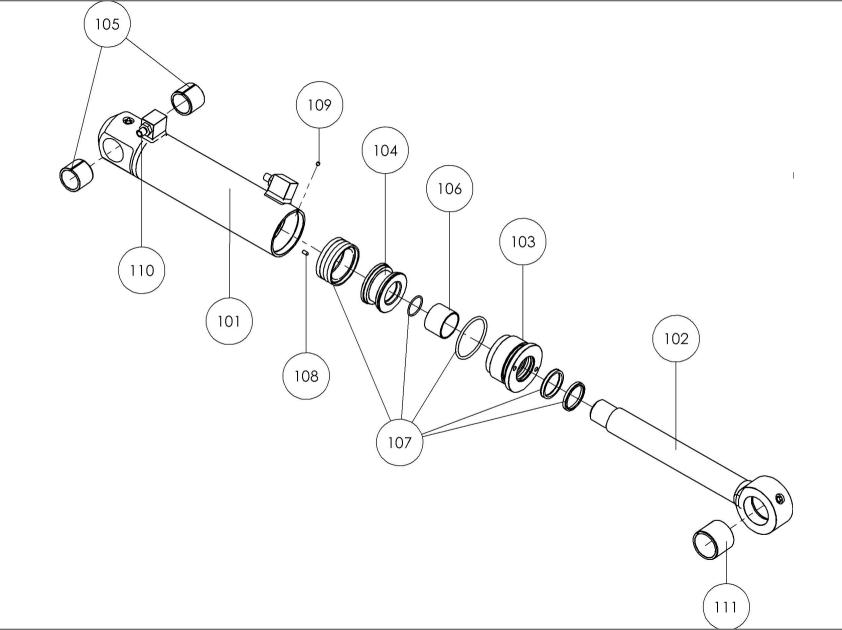


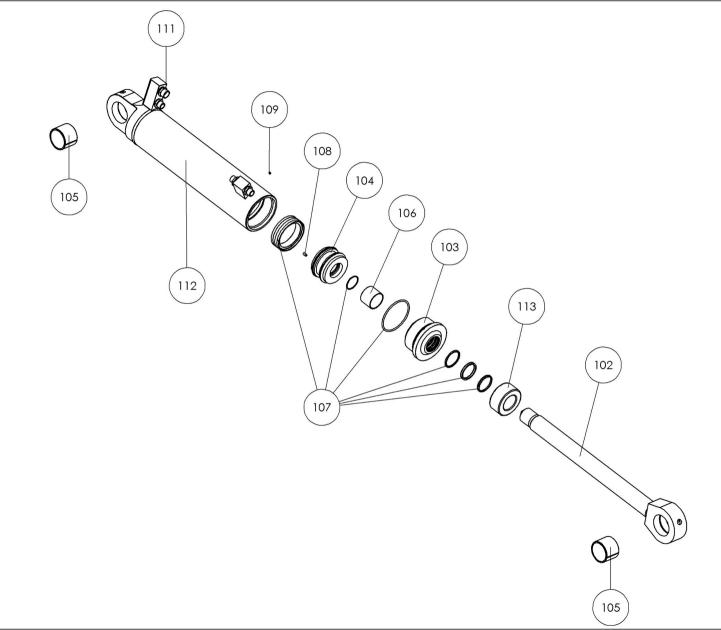

 


 


 

















Warning: To avoid danger lift a long

  
load only in the center of cravity.

 


 


 














 


 


 


 













EXCLUDED FROM GUARANTEE:










 

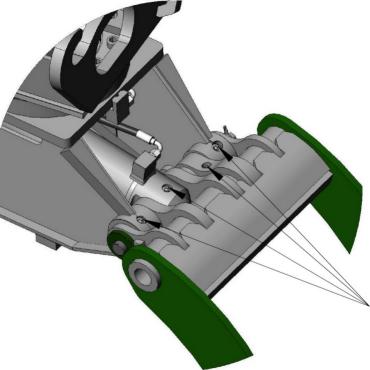



Date



Damage caused by faulty assembly of a machine and or the hydraulic system, improper maintenance without

 
expertise and transport damage.


Never work on the hydraulic system if the system is still under pressure! Keep hands away from moving parts at all times. The manufacturer cannot anticipate every possible circumstance that might involve a potential hazard. The warnings in this publication are, therefore, not all-inclusive. If a tool, procedure, work method or operating technique that is not specifically recommended by the manufacturer is used, then you must assure yourself that it is safe for you and others. You should also ensure that the product will not be damaged or made unsafe by the operation, lubrication, maintenance or repair procedures that you choose.







 


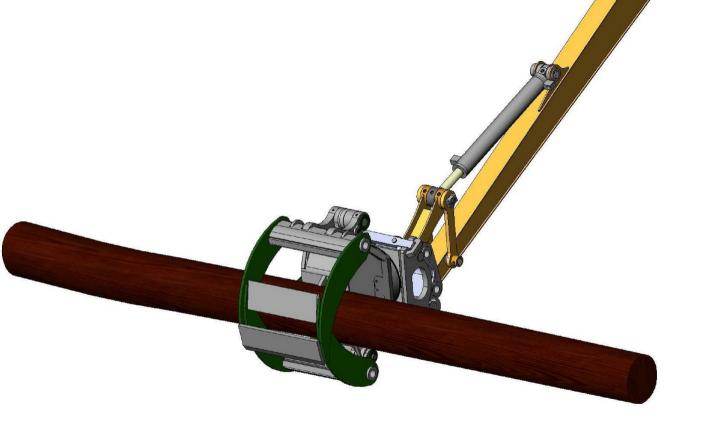









The excavator with a Tree Grab may only be operated by a qualified person.

 
Defects resulting from improper repairs and/or maintenance including that carried out by an unauthorised third

party.










 Maintenance and/or repairs may only be carried out by appropriately trained and competent personnel.












Prevent dangerous work situations. Stay at a safe distance from moving parts.

 Defects arising from neglect or improper execution of preventive maintenance procedures e.g. regular lubrication or greasing.










Picture 4: Lubricating pivoting points

 Ensure that whilst operating the machinery no other people are within the working vicinity of the excavator with tree grab.










1 = Lubricate 1 x per 8 operating hours.

 Defects to parts which are subject to normal wear like blades.









Maintenance or repair work must only be carried out when the engine is turned off.

 
(signed)

Consequential loss caused by failure to replace normal wearing parts in time.










 Refer to the safety regulations before starting on any maintenance or repair work.









N.B. If defective or worn down parts are replaced by non-original parts, the entire warranty and liability will cease to apply.

Replace defective parts only with original parts from the manufacturer.

Failure to replace defective parts with original parts from the manufacturer will result in cessation of the entire

warranty and CE liability.

® Ziitveld Grijpers is a registered trademark of Zijtveld Grijpers BV in 's-Graveland, the Netherlands. No part of this publication may be

reproduced without the express prior permission of Zijtveld Grijpers BV. All rights and modifications reserved.















































































































































































































































































































































































