


OAM Explorer

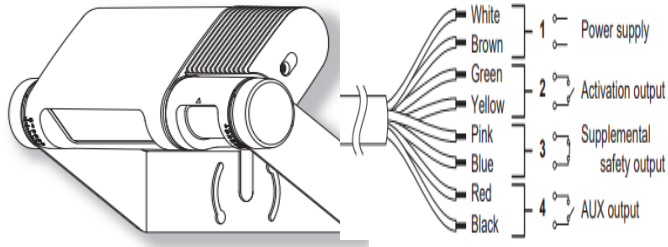

Install Notes:

1. On OAM Explorer ensure Activation and Suppl. Safety Relays are set to N.O.
2. When using two OAM Explorer Sensors (Int. & Ext.) connect both sensors to the same location (shown).

