


Install Notes:

1. On OAM Explorer ensure Activation and Supplemental Safety Relays are set to N.O.
2. When using two OAM Explorer Sensors (Int. & Ext.) connect both sensors to the same location (as shown).
3. On Maxum Control Program INP2 as follows: Function = Non Monitored Eye/Edge Input, Polarity = N.O.

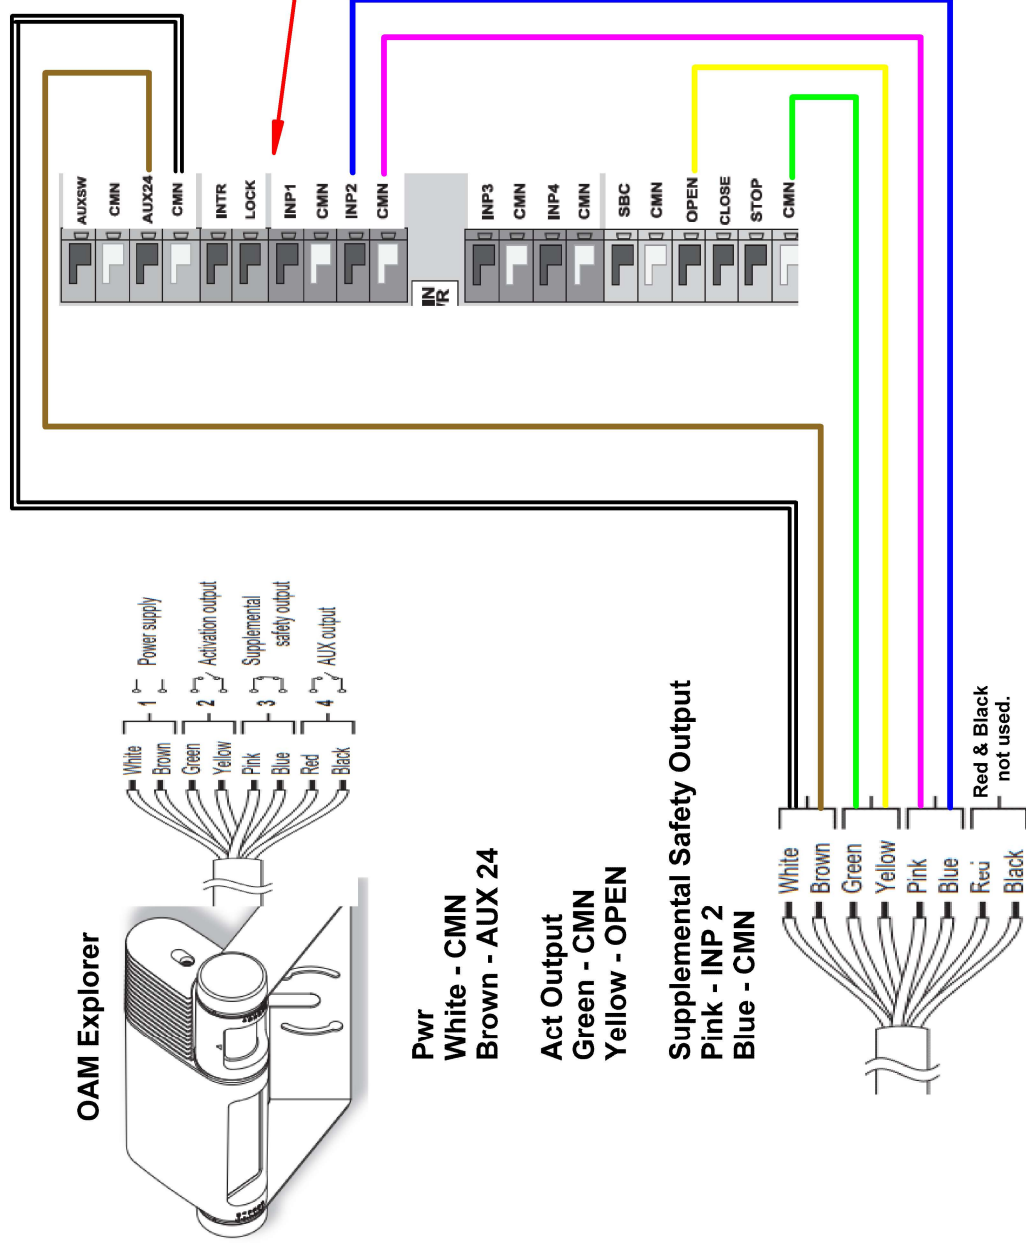

Title:	LIFTMASTER Maxum with OAM Explorer	Drawing #	01LIFMAXEXP01
Drawing By:	JAS	Date:	08/20/24
Sheet:	1 of 1		
Optex Technologies Inc. 10741 Walker Street., Suite 300, Cypress, CA 90630 Office: (800)877-6656, Fax: (310)214-8644			