


Slide Gate Activation


Function of sensor: Free Exit

Configuration 1: for Vehicle Protection

Recommended settings
(yellow ovals):

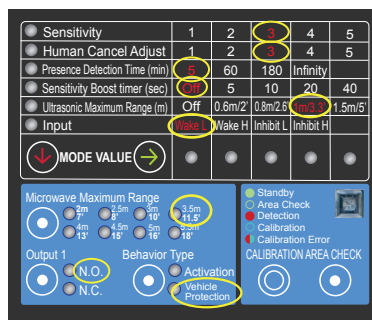


Standard Slide Gate Layout

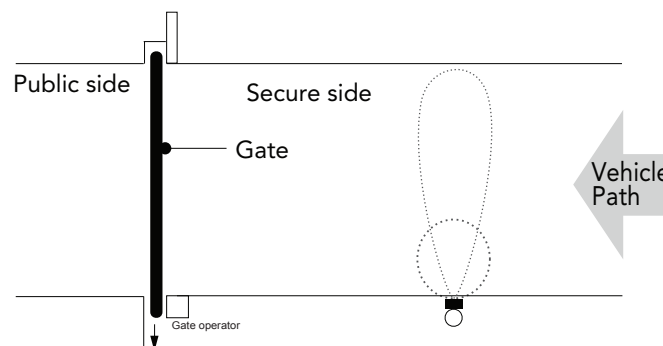


Mounting height: 20" above road surface
Angle: Perpendicular


Configuration 2: for Activation

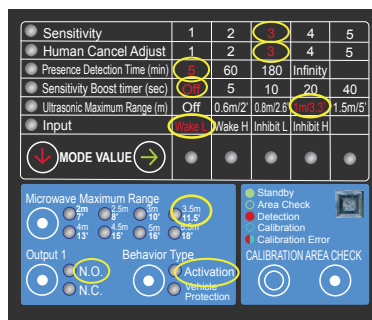

Settings above are typical and should work for most Free Exit applications. Slight adjustments may be required based on the individual environment. Should you experience any issues, contact Technical Support at (800) 877-6656.

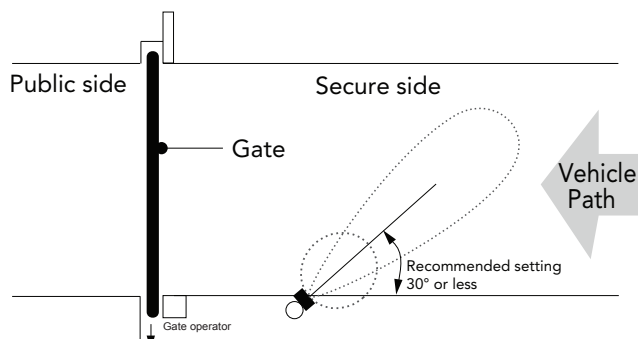

Mounting height: 20" above road surface
Angle: Facing oncoming traffic

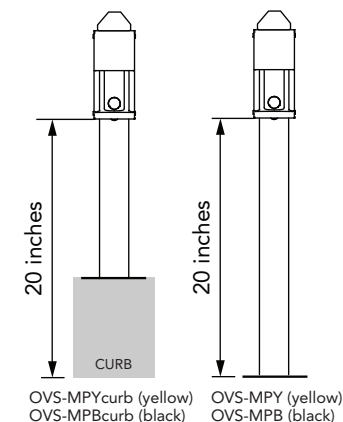

Notes

Calibration: Sensor should be calibrated before walk testing and after any changes are made (hold calibration for 2 seconds to initiate).

Area check: Use area check to verify detection area. This is a walk test function that allows you to see the detection area without the use of a vehicle.

Please refer to the enclosed manual for additional information.

OPTEx Inc.
18730 S. Wilmington Ave, Unit 100
Rancho Dominguez, CA 90220
Ph 800 877-6656 | Fax 310 898-1098
www.optex-vs.com

East Coast Office:
8510 McAlpine Park Dr. Suite 108
Charlotte, NC 28211