


Application

Gate type: Barrier Arm


Function of sensor: Activation (ticket/
RFID/Keypad activation)

Recommended settings for standard
Barrier Arm application (yellow ovals):

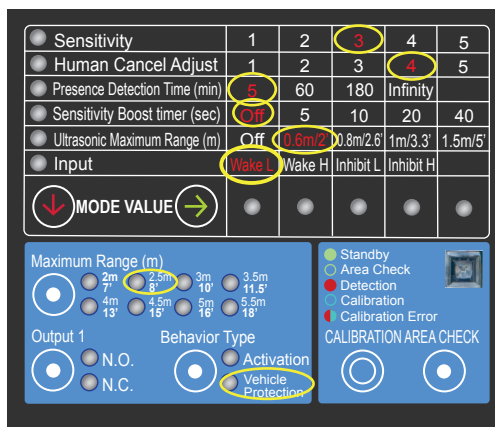


Settings above are typical and should work for most barrier arm applications. Slight adjustments may be required based on the individual environment. Should you experience any issues, contact Technical Support at (800) 877-6656.

Standard Barrier Arm Layout

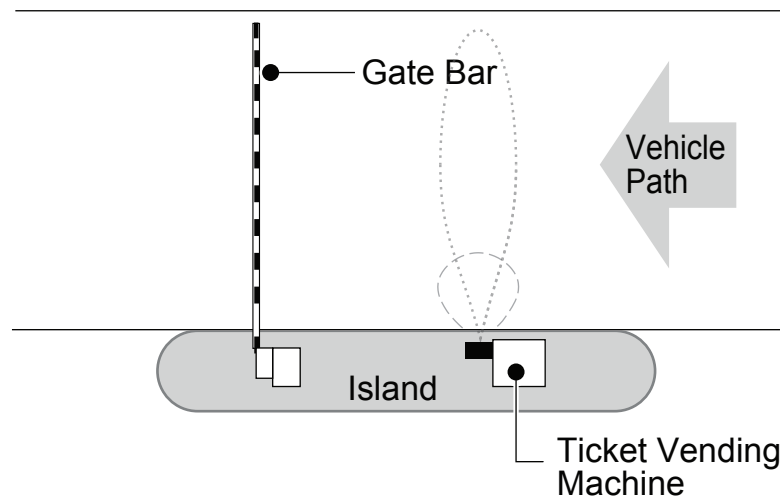

Mounting height: 20" above road surface
Mount: on side(s) of ticket vending machine/minipost curb
Angle: perpendicular to the flow of traffic

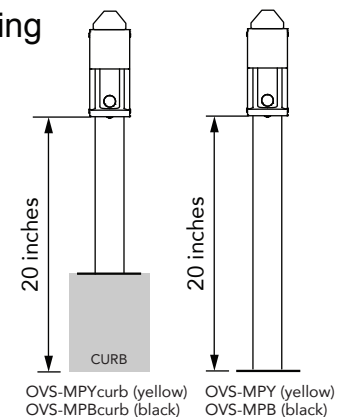

Notes

Calibration: Sensor should be calibrated before walk testing and after any changes are made (hold calibration for 2 seconds to initiate).

Area check: Use area check to verify detection area. This is a walk test function that allows you to see the detection area without the use of a vehicle.

Please refer to the enclosed manual for additional information.

OPTEx Inc.
18730 S. Wilmington Ave, Unit 100
Rancho Dominguez, CA 90220
Ph 800 877-6656 | Fax 310 898-1098
www.optex-vs.com

East Coast Office:
8510 McAlpine Park Dr. Suite 108
Charlotte, NC 28211