

Application

Gate type: Industrial Door

Function of sensor: Vehicle Protection

Recommended settings for standard

Vehicle Protection application (yellow ovals): 

Sensitivity	1	2	3	4	5
Human Cancel Adjust	1	2	3	4	5
Presence Detection Time (min)	5	60	180	Infinity	
Sensitivity Boost timer (sec)	Off	5	10	20	40
Ultrasonic Maximum Range (m)	Off	0.6m/2'	0.8m/2.6'	1m/3.3'	1.5m/5'
Input	Wake L	Wake H	Inhibit L	Inhibit H	

MODE VALUE

Maximum Range (m)

Output 1

Behavior Type

Activation

Vehicle Protection

Standby

Area Check

Detection

Calibration


Calibration Error

CALIBRATION AREA CHECK



Settings above are typical and should work for most Safety Loop applications. Set Microwave Max. Range and Output based on the individual environment; other adjustments may be required. Should you experience any issues, contact Technical Support at (800) 877-6656.

Standard Industrial Door Layout

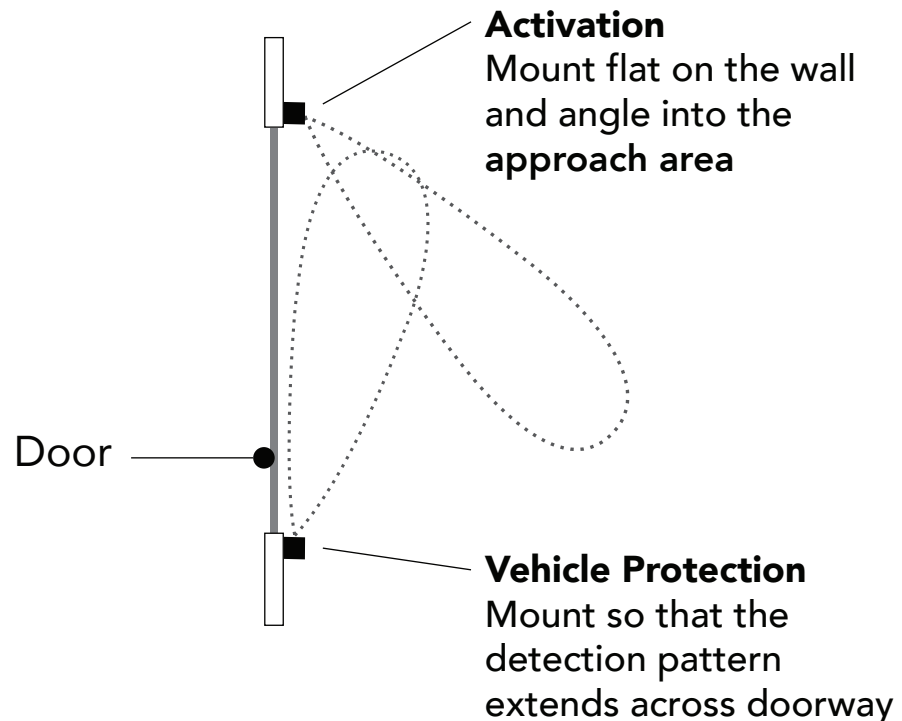

Mounting height: 20" above floor

Notes

Calibration: Sensor should be calibrated before walk testing and after any changes are made (hold calibration for 2 seconds to initiate).

Area check: Use area check to verify detection area. This is a walk test function that allows you to see the detection area without the use of a vehicle.

Please refer to the enclosed manual for additional information.

OPTEX Inc.
18730 S. Wilmington Ave, Unit 100
Rancho Dominguez, CA 90220
Ph 800 877-6656 | Fax 310 898-1098
www.optex-vs.com

East Coast Office:
8510 McAlpine Park Dr. Suite 108
Charlotte, NC 28211