



1	KEY OPERATE
2	PRESENCE SENSOR
3	INNER OPERATE
4	0 V DC
5	PRESENCE DETECTION
6	
7	KILL
8	
9	OFF
10	CONTACT MAT
11	
12	0 V DC
13	PROGRAMMABLE DOOR
14	POSITION SWITCHES
15	
16	24 VDC 3330mA
17	
18	24 VDC 180 mA
19	
20	18 VDC 530mA

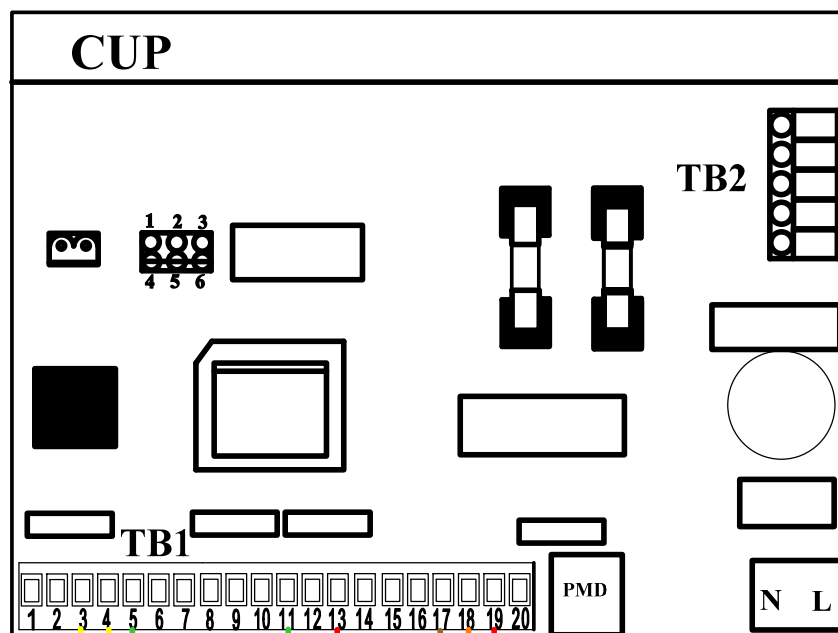

 

CUP SOFTWARE MUST BE V6.4 OR HIGHER
FUNCTIONS SETTINGS TO BE SET AS FOLLOWS
 F11=3, F13=a, F14=a, F16=00, F17=00, F18=00, F19=b, F20=b

NOTE:
 Single is shown. On pairs wire the master and slave the same and include sync lines from pins 3 to 3, 4 to 4, 5 to 5, 9 to 9, 10 to 12 and 12 to 10.

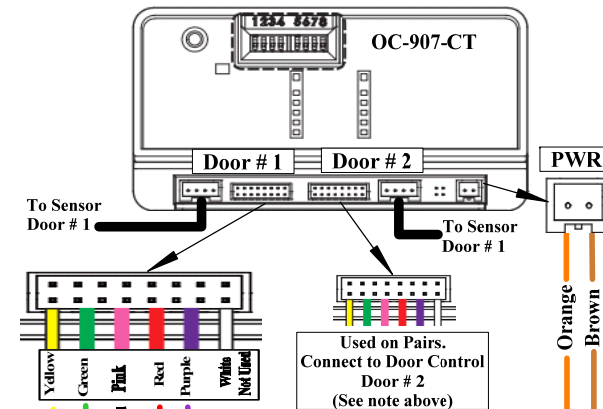

INSTALLATION NOTES:

1. Set Door Speeds and verify proper door operation prior to final connection of sensor system.
2. For initial sensor setup move green wire from pin 5 to pin 9. After initial setup is complete move green wire back to pin 5.
3. Technician **MUST WALK TEST** to verify function and detection patterns comply with ANSI/BHMSA A156.10

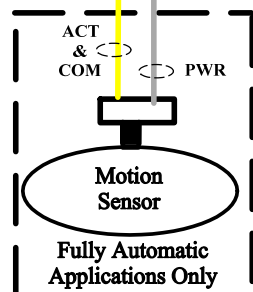

Note:
 For Knowing Act applications all activating devices must connect to the OC-907-C T purple wires. (N.O. Dry Contact)

OVERHEAD CONCEALED APPLICATIONS ONLY.
 Optex does not recommend the Elite on surface applied applications. For more information contact Optex technical support.

Title: Besam CUP with Elite Pro		Drawing # 01BESCUPELIP01 Rev 1
Drawing By: JAS	Date: 09-10-24	Sheet: 1 of 1
Optex Technologies Inc. 10741 Walker St., Suite 300, Cypress, CA 90630 Office: (800)877-6656, Fax: (310)214-8644		