

W E P L I G H T

MAINTENANCE AND CLEANING

MAINTENANCE AND CLEANING

Proper maintenance helps preserve the appearance, performance, and longevity of your Weplight fixture.

GENERAL RECOMMENDATIONS

Always turn off the lamp from the power supply before cleaning or maintenance.

Allow the fixture to cool completely before handling.

Handle all components with care to avoid damage to finishes or materials.

CLEANING

Dust the lamp regularly to prevent build-up on surfaces.

For routine cleaning, use a soft, dry cloth or a feather duster.

For deeper cleaning, gently vacuum the lampshade inside and out using a soft brush attachment.

Do not use abrasive materials, solvents, alcohol, or chemical cleaners, as they may damage the finish.

WOOD COMPONENTS

Clean wooden surfaces with a dry or slightly damp cloth.

Avoid excessive moisture or direct contact with liquids.

Natural variations in wood grain and color are part of the material's character and should not be considered defects.

ACOUSTIC VERSION

Clean acoustic elements only by gently vacuuming with a soft brush.
Do not apply liquids or cleaning products directly to acoustic materials.
Avoid compressing acoustic panels to maintain their performance and shape.

INSTALLATION ENVIRONMENT

Indoor use only, unless otherwise specified.
Avoid prolonged exposure to direct sunlight, excessive humidity, or extreme temperatures.
Ensure the fixture is installed according to the provided instructions.

LIGHT SOURCES

Use only the recommended light sources indicated for each model.
When replacing bulbs, ensure they are properly fitted and compatible with the fixture.