



STARLINK MINI — NO CASE

Instruction Guide


STARLINK MINI — NO CASE

Table of Contents

Components List.....	3
Important Information.....	4
Obstruction Warning.....	5
Update Schedule.....	6

STARLINK MINI – NO CASE

Components List

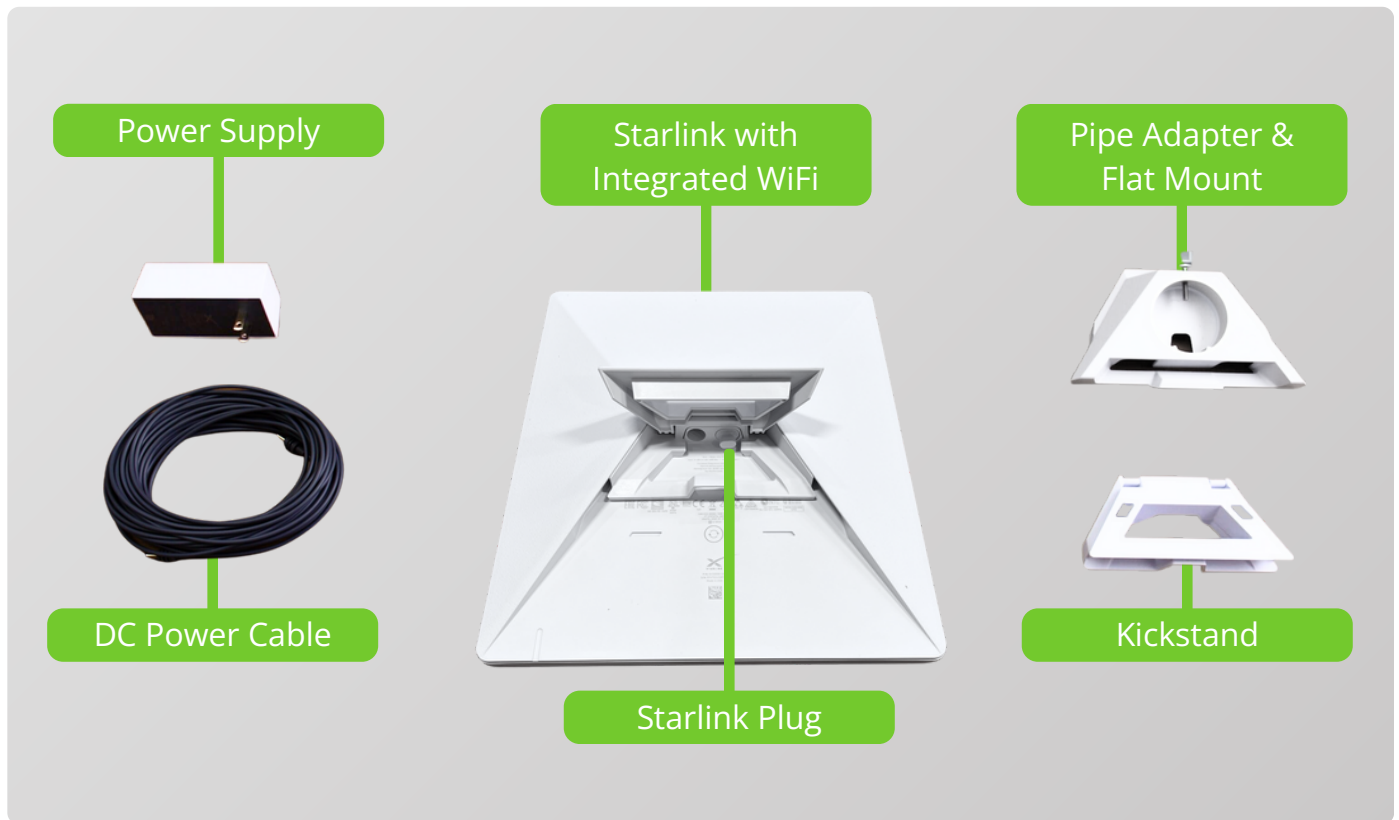

Kit Includes:

- Starlink with Integrated WiFi
- Kickstand
- Pipe Adapter and Flat Mount
- 15M (49.2 FT) DC Power Cable
- Power Supply
- Starlink Plug

STARLINK MINI – NO CASE

Important Information (Please Read)

The Starlink Mini comes activated and ready to use. Please see the email sent to you on delivery for SSID and Password information.

Please schedule a meeting with PEAKE support if you would like a deeper dive into the Starlink system. ✉ support@peake.com ☎ 800-719-4603

1. Lay out in unobstructed area with clear visibility to sky.
2. Connect antenna to power supply via 15M DC Power Cable.
3. Connect to power source.
4. Once everything is powered on, connectivity should be available automatically within a few minutes.
5. On your device, find and connect to the STARLINK network in your WiFi settings.
6. Contact PEAKE support for configuration assistance, if required.

Status Lights (Located on Back of Starlink)

- **Slow Blinking:** Powered on.
- **No Light:** No power to Starlink.
- **Fast Blinking:** Attempting to power on, searching for satellites, software update, or undergoing a factory reset

*PLEASE NOTE:

The Starlink cords are very sensitive and can be damaged if forced into the port. Please be careful when connecting cords and disassembling. They should not be forced into place or when removing.

**Starlink releases updates frequently. This can take around 30 minutes.

STARLINK MINI – NO CASE


Obstruction Warning



To maintain a reliable satellite connection, the Starlink Mini requires a clear view of the sky. Any obstruction between the antenna and the sky—such as trees, buildings, poles, or even parts of your vehicle—can interrupt service.

- Ensure the antenna has at least a 110° horizontal and 20° vertical clear field of view.
- Avoid placing the antenna near or beneath overhangs, roof racks, tall objects, or dense foliage.
- If you're setting up near trees or structures, observe for potential signal interference and reposition if needed.
- For mobile or vehicle use, install the antenna on a roof or elevated surface with minimal obstruction in all directions.

Verify your setup location using the Starlink app's obstruction tool before finalizing placement.

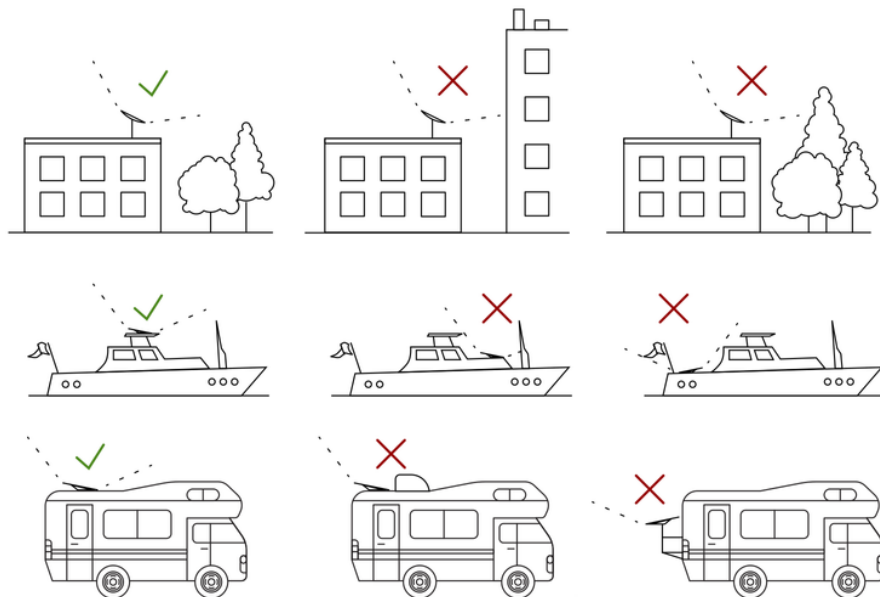

STARLINK MINI – NO CASE

Update Schedule

- Starlink software updates are released approximately every two weeks but can be more or less frequent.
- Updates are not scheduled on specific days and are designed to rollout without disrupting service.
- Software updates are downloaded in the background and applied when the terminal reboots.
- Software updates do not count against service priority data limits. Starlink will "zero-count" the data used for updates and telemetry.
- Software updates can be done even if service is currently paused or inactive. Follow the steps in the Starlink app to update the software.
- Software Update Reboots
- The Starlink will automatically reboot to apply software updates periodically at 3:00 AM local time +/- 30 minutes.
- Local time is based on the current physical location of the Starlink hardware.
- The billing, service, or shipping address is not used to set Starlink local time.
- Starlinks aviation services will wait to reboot until the Starlink velocity is below 9 m/s (or ~20 mph) continuously for 15 minutes. After this condition is met the Starlink will reboot.