



STARLINK ONE-CASE

Instruction Guide

STARLINK ONE-CASE

Table of Contents

Components List	3
Setup Instructions	4,5

Should you encounter issues or wish to schedule a more in-depth session, please contact the PEAKE Support Team:

- **Email:** support@peake.com
- **Phone:** 800-719-4603

STARLINK ONE-CASE

Components List



Kit Includes:

Starlink Antenna.....	Attached mounting bracket; attached magnets (4 total)
Power supply and bracket.....	Attached to base plate
Antenna Cable	Longest cable and most used
Ethernet Cable	Attached to base plate
Power Cable.....	Attached to base plate
Peplink Router	Attached to base plate
Peplink Router antennas.....	4 in total attached to Peplink
Ethernet cables (2).....	Connected inside of box to Peplink router
Power cable for exterior of case	Gives the case power as a whole

Notes:

STARLINK ONE-CASE

Setup Instructions

Step 1

Open kit; remove antenna and foam insert.


Step 2

On the exterior/back of the case,
Slide the port window up



Step 3

On the inside of the case,
CAREFULLY unbundle whatever
length of antenna cable needed
and run the lead thru the open
back port.

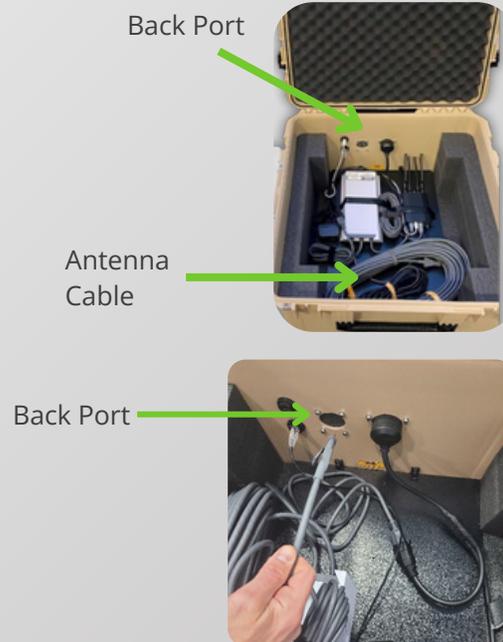


STARLINK ONE-CASE

Setup Instructions

Step 4

Feed enough cable out of the case to either connect to the antenna mounted on top of the case or deployed at distance.

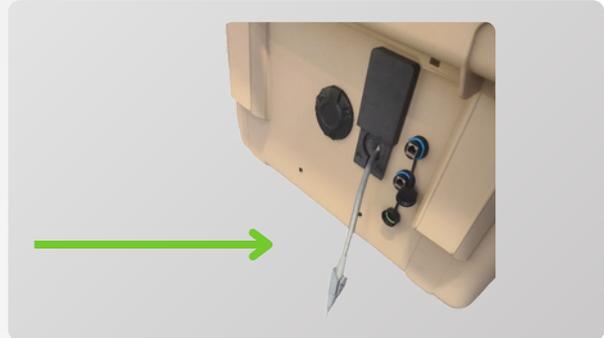

Step 5


Place Starlink on top of magnetic lid for use.



Step 6

Plug antenna cable into Starlink antenna. Press lightly here when inserting cable and you should hear a “click” when properly seated.

NOTE: The cable only fits one way and is fragile. Do not force.

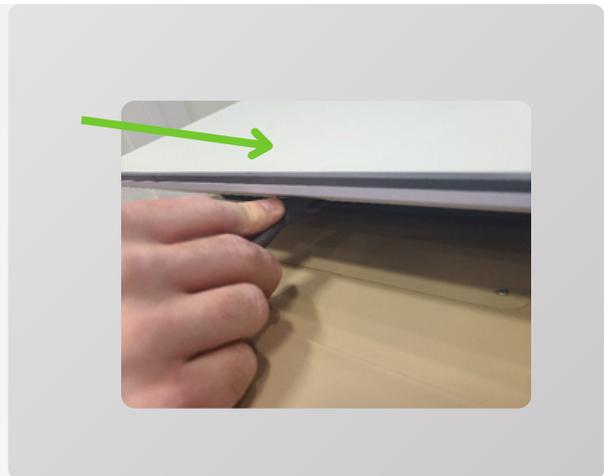

Step 7

Take black 10 foot power cable from inside of case. Attach it to the port on the outside of the case and plug into power supply

