

SAILCOVER



the sail from dirt during the winter months. The sail remains on the shaft and is wrapped in the cover when dry. Should a property be unoccupied for an extended period of time, fitting the sail protection cover is equally advisable.

Before attaching the sail protection cover, roll up the sail (sailfabric must be dry!), then be sure to disconnect the sunsail system from the power supply. There is a risk that the system may be damaged by unintentional operation of the remote control.



Proceed as follows:

- 1. Close the sail by means of remote control.
- 2. Furl the ends of the sail with the hand crank (if available) until only the ropes protrude.
- 3. Disconnect the system from the power supply.
- 4. Attach the sail protection cover the acrylic side on top and the net fabric on the bottom.
- 5. Fold the overhanging cover downwards.
- 6. Attach the black rubber tension ropes (at one meter intervals) to prevent the cover from flapping in the wind.

Be careful when working on the ladder. Danger of falling!