


HOVE manual height adjuster

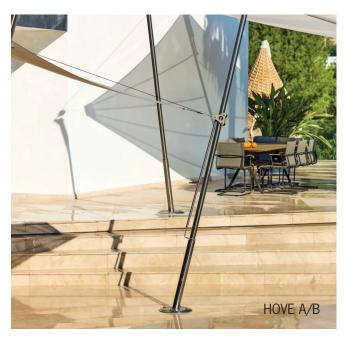





ITEM NAME:

The height adjustment is available with handles of different lengths: 50, 100 or 150 cm or made to measure.

DESCRIPTION

Depending on the system geometry, the height adjuster can be integrated into both - the sail end support and the floating bearing (F-support). The height of the fabric shaft can be adjusted by attaching a height adjuster to the floating bearing. This makes it possible to adjust the level of the fabric shaft, which was previously always fixed. A better shadow pattern and optimum drainage can thus be achieved.

SAFETY INFORMATION

The height adjuster must be moved to the neutral position before the sail is closed, as otherwise a change in the direction of pull of the ropes can lead to creasing when furling. When lowering the height adjuster, it must be ensured that the sail still has a sufficient safety distance to all surrounding objects so that the sail can close easily even in the event of gusts of wind and the associated movement of the sail.

Please ensure that there is no risk of injury to persons when lowering the sail.