



Instructions for use —Type 3 Fix



Type 3 button-fix


The Button-fix concept is simple: the Fixes are attached to the back of one panel and the mating Buttons are attached to the other. Bring the panels together and push until they 'click'.

The Type 3 Fix is moulded in PBT, and the Button in durable Acetal. They securely connect parallel panels with a simple push on/pull off engagement, requiring no gap either above or at the side of the removable panel. Type 3 Button-fix can be surface-mounted or recessed to save space, and used for hanging a wide variety of wall and ceiling panels.

Visit the website for more information on the complete Button-fix range, including videos of the Type 3 Button-fix in use and CAD downloads. You can also obtain a new

copy of these instructions from the website in the event of loss or in the event that Buttonfix modifies the instructions.

Buttonfix Limited retains the right to modify the instructions as it deems appropriate and the consumer is responsible for checking the website for the latest information.

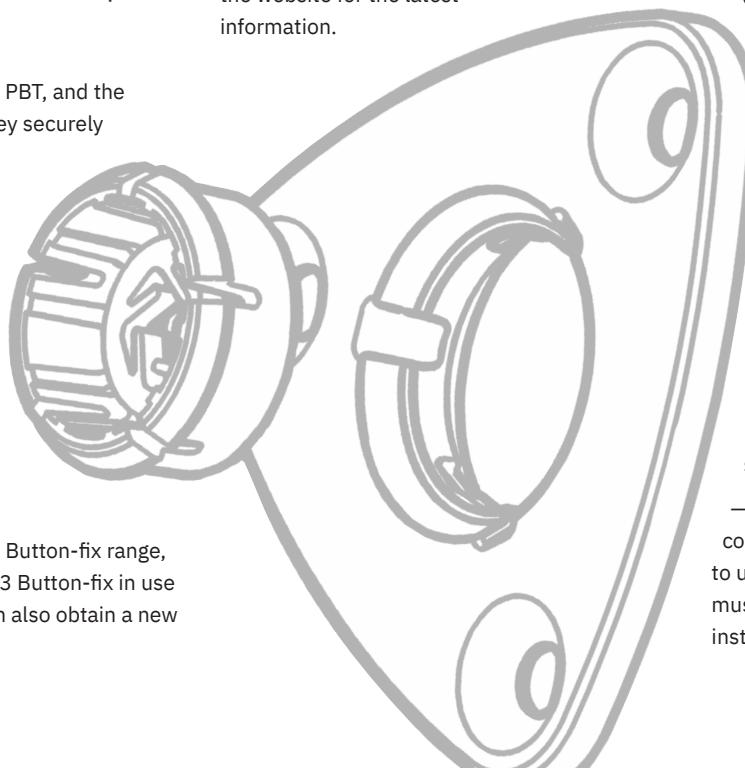

Warnings

—Button-fix is intended for furniture construction and interior fittings and is not intended, nor should it be used, for any other purpose.

—**WARNING:** Serious damage to property and severe bodily injury can result from

(1) improper use, application or installation of the Button-fix or (2) use as part of improperly designed or constructed assemblies or materials.

—Provided that the screws and substrate are properly matched, and all other instructions complied with, independent tests showed that a vertical panel fixed with four Type 3 Fixes can support loads weighing up to a maximum of 132 lbs (60kg). For critical applications it is essential to perform your own tests.

—Avoid any contact with aggressive solvents and cleaning products.

—It is not possible for Buttonfix to warn the consumer about every possible danger related to use of the Button-fix and the consumer must use his or her own good judgment when installing and using Button-fix.



The fix

Type 3 Button-fix connects parallel panels with a straight push on/pull off action. Ideal for installations where the panel geometry does not suit the sliding engagement of the Type 1 fasteners and where there is no clearance around the panel.

However, the Type 3 Fix creates the same panel-to-panel gap as the Type 1 Fix, in either recessed or face-fixed orientations. It can, therefore, be used in conjunction with Type 1 on an installation. Type 3 also uses the same Button marker accessory as Type 1.

1. Surface-mounted Fix





The Fix can be surface-mounted giving a 0.31" panel gap. Use three #8 x 0.5" round washer head, truss head or pan head screws (see the screw fixings guide on page 6).

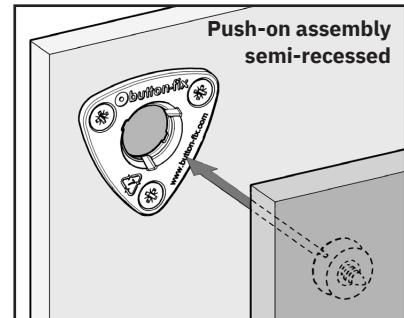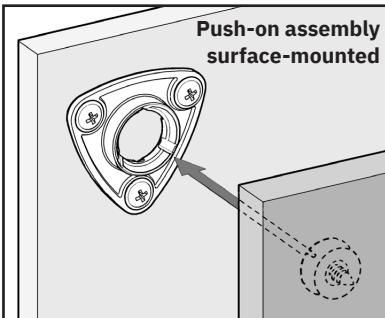

2. Recessed Fix

The Fix can be semi-recessed into a Ø1" hole, 0.2" deep, with the flange mounted directly on the panel surface. This gives a 0.12" panel gap. Use three #8 or #9 flat head wood screws (see the screw fixings guide on page 6).

The recess can be cut using a 1" Forstner bit, flat blade, or a Ø26mm hinge cutter drill bit.

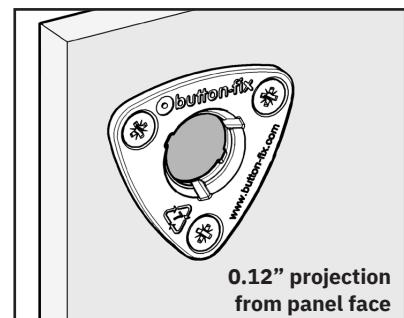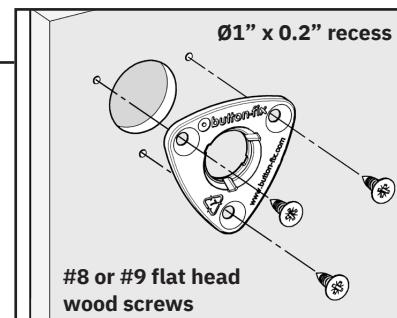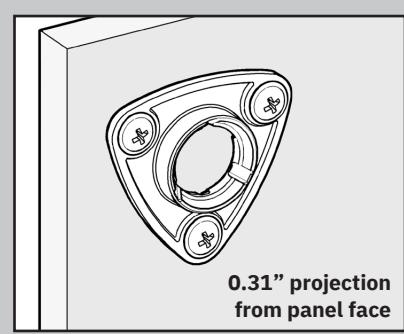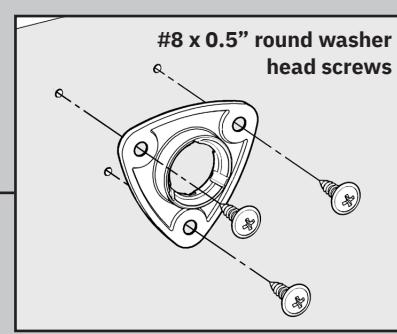

The button

The fixing hole on the Button has flexible fingers, which center the fixing screw but allow the Button to 'float', to take up any tolerance in the installation. This requires round washer head screws or similar to work effectively and to allow movement (see the screw fixings guide on page 6).





Do not overtighten the Button screw—only tighten the screw lightly. We do not recommend flat head screws for attaching the Button.

Button marker accessory

The Button marker accessory helps to mark out where to install the Buttons, without the need for measurement. Type 3 uses the same Button marker accessory as all the Type 1 Fixes.

Once you have attached the Fixes (see page 3), insert a marker into each one. Then position the second panel and press firmly—the markers will leave indents in the panel surface, which can be used as guides for positioning the Buttons. On surfaces that don't easily show marks, such as heavily textured or rough surfaces, apply a layer of masking tape or duct tape onto the surface, which will show the indents more clearly.

Remove the markers using a small flat-blade screwdriver or needle-nose pliers at one of the three access slots on the Fix. The markers can be re-used to mark out the next panel.

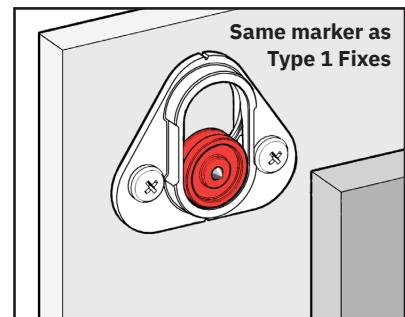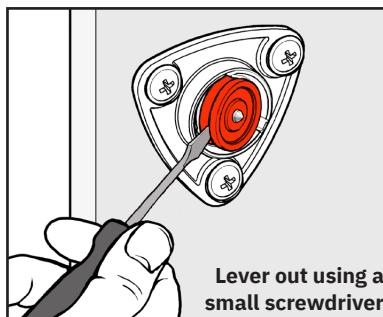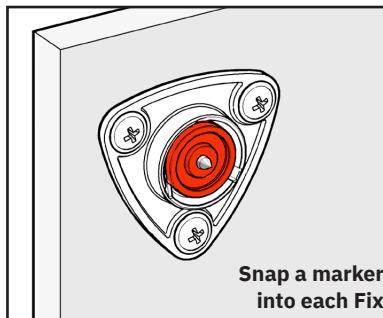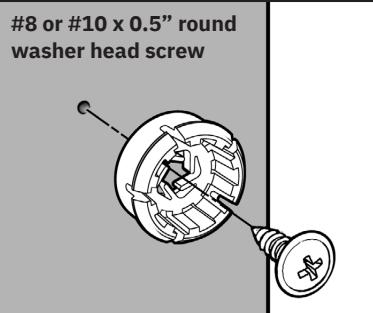

Suggested layout and loading guide

—Wall Panels: As an approximate guide, we suggest that Button-fix centers are no greater than 24" apart and no closer than 1.4" to the edge of the panel.

Four Type 3 Button-fixes can support a wall panel of up to 132 lbs in normal conditions*. As a general rule, allow for a maximum loading of **33 lbs per Fix**.

—Ceiling Panels: As an approximate guide, we suggest that Button-fix centers are no greater than 16" apart and no closer than 1.4" to the edge of the panel.

Four Type 3 Button-fixes can support a ceiling panel of up to 22 lbs. As a general rule, allow for a maximum loading of **5.5 lbs per Fix**.


***IMPORTANT:** Any panel that is not vertical and is inclined such that the panel weight acts to disengage the Button-fix should be treated as a 'ceiling panel' for loading/spacing purposes, and the maximum loading reduced to 5.5 lbs per Button-fix. A maximum distance of 16" between Button-fix centers is also recommended for maritime/transport applications.

Safety cords/chains

For critical applications, such as large panels in public areas, ceiling panels and in maritime/transport interiors, always use safety cords or chains. They should be specified to accommodate the load of the particular panel.


It can be helpful to incorporate a carabiner clip or spring hook on the cord/chain assembly to aid service access.

Typical wall panel layout

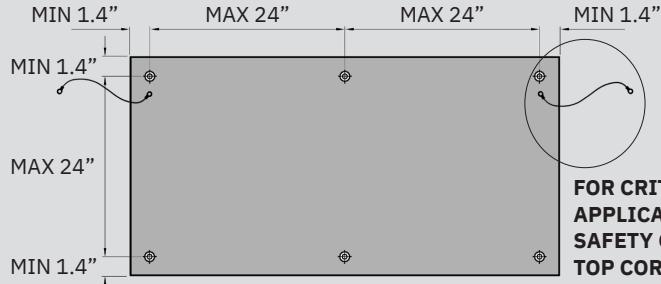


Load guide: maximum 33 lbs per Fix

Typical ceiling panel layout

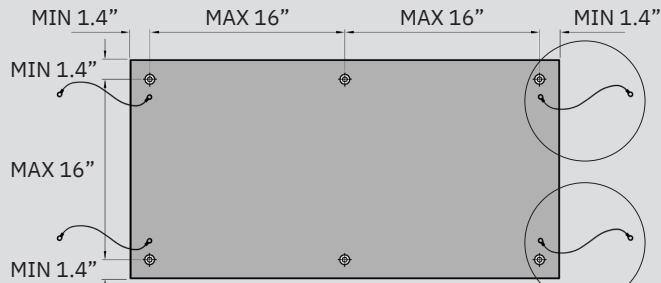

Load guide: maximum 5.5 lbs per Fix


Screw fixings guide

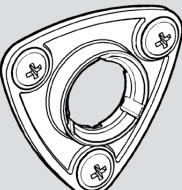Product/configuration	Panel thickness/material	Screw type	net thread length	Notes
Surface-mounted Fix and Button  	0.3" to 0.4" thick Plastic, HPL, Plywood, MDF, MFC	#8.16 x 0.375" round washer head Plas-60	0.25"	Sales@intafast.com Requires a pilot hole – follow screw supplier's recommendations
		#8 x 0.375" round washer head PZ self-tapping	0.25"	Accu.co.uk (product code: SPBFT-No.8-3/8-A2) A2 stainless steel
	0.4" to 0.75" thick Plywood, MDF, MFC	#8 x 0.5" round washer head Easydrive PZ self-tapping	0.35"	Screwfix.com (product code: 8979H) Add #8 SAE flat washer under screw head for 0.4" material
		#8 x 0.5" round washer head PZ self-tapping	0.35"	Accu.co.uk (product code: SPBFT-No.8-1/2-A2) Add #8 SAE flat washer under screw head for 0.4" material
	0.75" or greater Plywood, MDF, MFC	#8 x 0.75" round washer head PZ	0.63"	Screwfix.com (product code: 6553H)
		#10 x 0.75" round washer head PZ	0.63"	Screwfix.com (product code: 9033H)
		#10 x 0.75" pan head	0.63"	Spax or similar
Recessed Fix  Always use flat head screws	0.3" to 0.5" thick Plastic, HPL, Plywood, MDF, MFC	Ø4 x 8mm flat head Polyfix 45	0.24"	Accu.co.uk (product code: SPK45-4-8-A2) Requires a pilot hole – follow screw supplier's recommendations
	0.5" to 0.75" thick Plywood, MDF, MFC	#6 x 0.5" flat head Easydrive PZ	0.4"	Screwfix.com (product code: 1390P)
		#8 x 0.5" flat head PZ self-tapping	0.38"	Accu.co.uk (product code: SPKT-No.8-1/2-A2)
	0.75" or greater Plywood, MDF, MFC	#8 or #9 x 0.75" flat head	0.63"	Spax or similar. Do not overtighten and check for witness marks on the panel face
		#8 x 0.75" flat head Quicksilver PZ	0.63"	Screwfix.com (product code: 13228)


Suggestions are based on screws available in the UK which have been tested for compatibility with Type 3 Button-fix. Screws from other suppliers may also be suitable but have not been validated by Buttonfix Limited – **always perform your own tests for critical applications.**

Specifications

Type 3 Fix dimensions

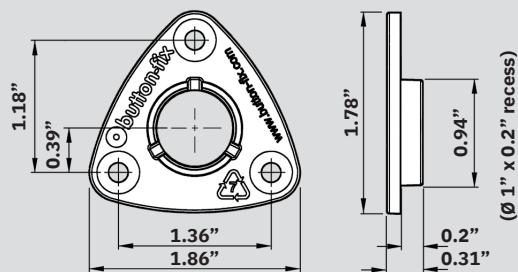

Type 3 Button dimensions

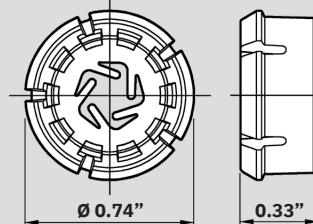

Material: PBT (Fix) & Acetal (Button)

Guide loads: Wall panel with 4 x Fixes = 132 lbs max.

Ceiling panel with 4 x Fixes = 22 lbs max.

—Advice on panel loads is given with the proviso that the screws and substrate are properly matched, and all other instructions complied with. For critical applications it is essential to perform your own tests.

—Advice is based on independent test reports, which can be found on our website: button-fix.com/technical-resources

Origin: Manufactured in the UK

Buttonfix Limited

**Unit A, 1 Britton Street
London, EC1M 5NW**

T: +44 (0)20 8150 7190

E: info@button-fix.com

EU Authorised Representative:

AR Experts BV
Boeingavenue 209
1119PD Schiphol-Rijk
The Netherlands

button-fix.com