

GONEO D3E series AC EV Charging Wallbox



Quick Guide

CONTENTS

1. INSTALLATION 3

1.1. Accessories 3

1.2. Space requirement 3

1.3. Drill fixing holes..... 3

1.4. Fix the Wall-hanging accessories and wallbox 4

1.5. Open the cover 4

1.6. Wiring 4

1.7. Internal Interface 5

1.8. Power on 5

2. WIFI Configuration 5

3. APP Use..... 5

3.1. Download APP..... 6

3.2. Quick Guide..... 6

3.3. Charging..... 6

1. INSTALLATION

1.1. Accessories

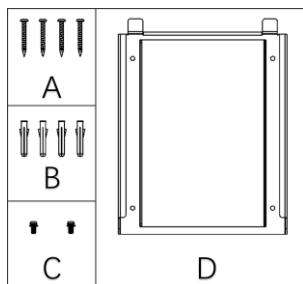


Fig. 1-1 Wall-mounting accessories

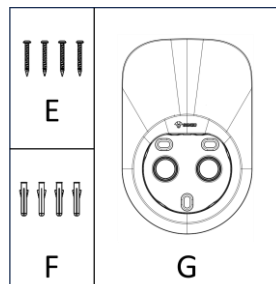


Fig. 1-2 Empty socket

1.2. Space requirement

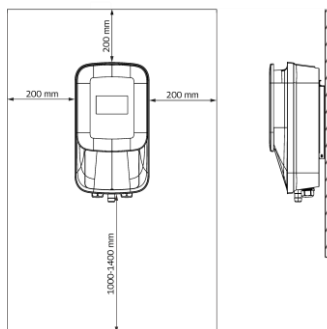


Fig. 1-3 Minimum space requirements for wall mounting

1.3. Drill fixing holes

Drill 4 mounting holes of 6mm diameter and 50mm depth at the appropriate height.

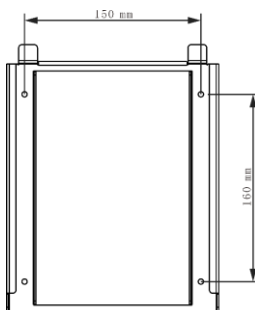


Fig. 1-4 Install the accessories on the wall

1.4. Fix the Wall-hanging accessories and wallbox

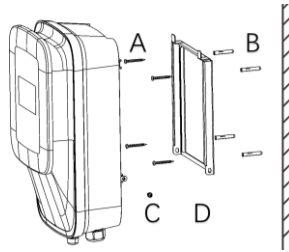


Fig. 1-5 Fix the wall-hanging accessories

1.5. Open the cover

- Use a tool to pry off the decorative cover

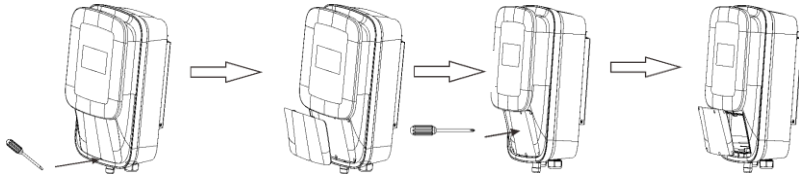


Fig. 1-5 Open the cover

1.6. Wiring

- Connect each cable to the input terminals according to the terminal label L1, L2, L3, N and PE.

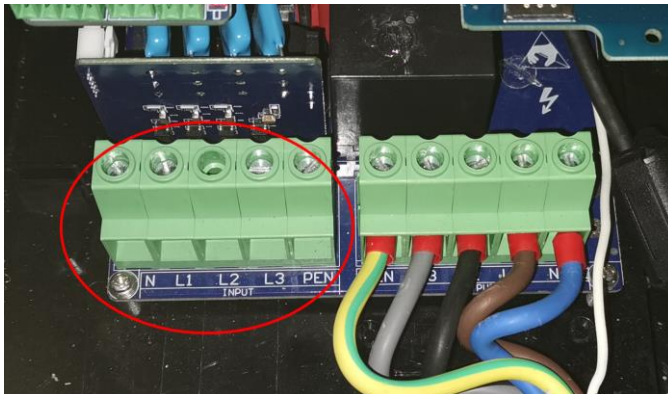


Fig. 4-7 Wiring

1.7. Internal Interface



Fig. 4-8 RS485 interface

1.8. Power on

After the charging wallbox has been installed and confirmed, switch on the power supply. The LED indicator light or LCD display lights up and the charging station switches to standby state.

(**Tips:** The system initialization will take about one minute when the product is first powered on, please wait patiently.)

2. WIFI Configuration

- Restart the charger;
- Turn on your phone or laptop's Wi-Fi function;
- Find the charger's hotspot with name "EVSE-XXXXXXX" (XXXXXXX means the last 8 pile number, and connect it, don't need a password).

(**Tips:** The EVSE hotspot exists for 3 minutes, if it cannot be found, please restart the charger.)

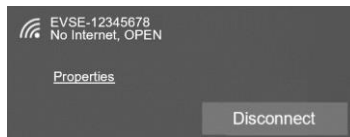


Fig. 2-1 Connect to EVSE hotspot

- Open your phone or laptop's browser and fill the website "192.168.4.1".
- Fill the default password and login; the login password is the last eight digits of the serial number;

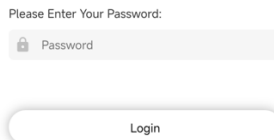


Fig. 2-2 Login configuration pageAPP Use


2.1. Download APP




2.2. Quick Guide



2.3. Charging

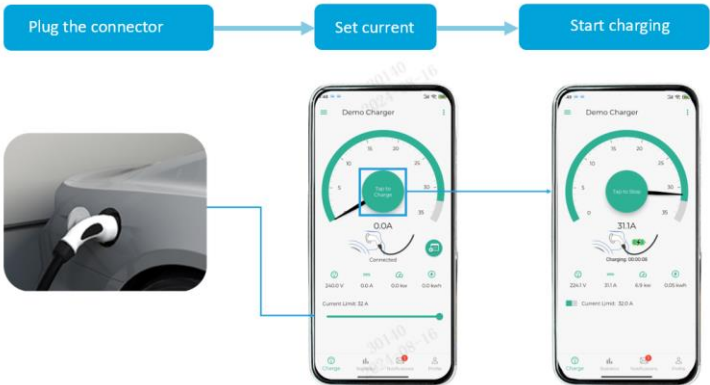

**We provide customers
with all-round technical support.**



Any change or upgrade without prior notice!