 



User Manual

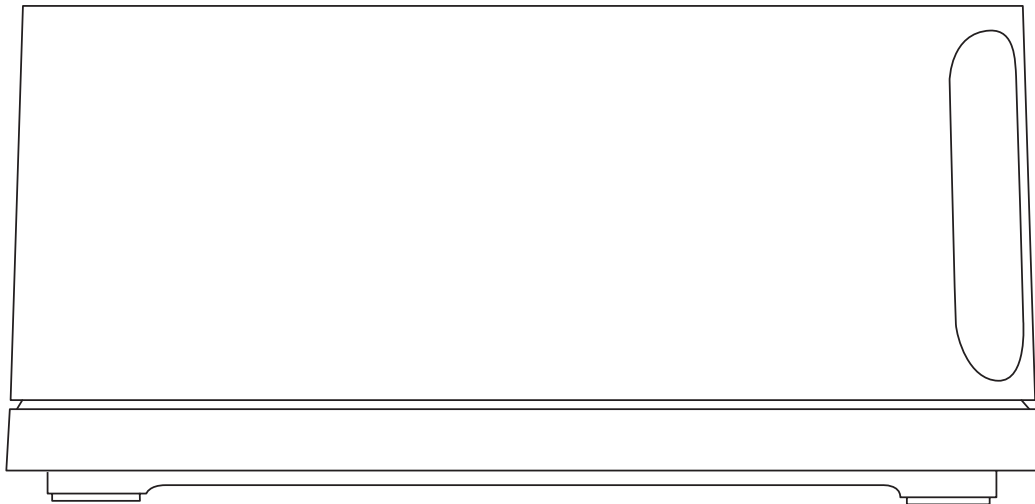

Long Slot Toaster

Model: TA4712-GS

 Jacob Jensen

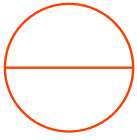


Congratulations on your new Jacob Jensen® product.

Jacob Jensen embodies the honesty and simplicity of our founder's vision, focusing on the essentials of the product experience. Your new purchase pushes the boundaries of everyday objects, combining function with meaningful design.

Created with our principles of Distance, Closeness, and Touch, this product reflects our long design legacy, enhancing everyday life through thoughtful design.

We hope you will enjoy an elevated experience. For more information, visit jacobjensen.com.

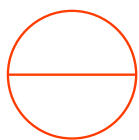


Product by
F&H Group A/S
Gl. Skivevej 70
8800 Viborg
Denmark

English

Read the instructions included in this user manual before using the Long Slot Toaster and save it for future reference.

1. Safety Instructions	3
2. Product Overview	5
3. Using your Toaster	6
3.1 Preparation before First Use	6
3.2 How to use your Long Slot Toaster	6
3.3 Special Features	7
4. Care and Maintenance	7
4.1 Cleaning	7
5. Disposal Guide	9
6. Power Consumption	9

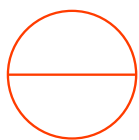


We recommend that you read this user manual carefully. It contains instructions on how to use your new purchase correctly and how to maintain its functionality with regular use.

Jacob Jensen and our partner F&H Group A/S reserve the right to make improvements to enhance the product experience without prior notice.

The instructions and illustrations in this manual are not binding and may change as the product evolves.

 
For more information, visit jacobjensen.com or contact our partner, F&H Group A/S, at info@fh-as.dk.

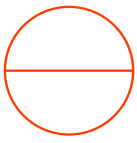

1. Safety Instructions


When using this electrical appliance, basic safety precautions should always be followed. Read the following instructions carefully to ensure safe use of your Long Slot Toaster.

 - Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
- The outer surface may get hot when the appliance is operating. Do not touch the surface if it is hot.
- To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
- Close supervision is necessary when the toaster is used by or near children.
- Unplug unit from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
- Do not let the cord hang over edge of table or counter, or touch hot surface.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use the appliance for anything other than its intended use. The toaster can only be used for toasting bread.
- Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
- Bread may burn, therefore toasters must not be used near or below curtains and other combustible materials.
- The use of accessory attachments is not recommended by the appliance manufacturer and may cause injuries.
- Do not attempt to dislodge food when toaster is in operation.

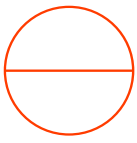

- Be sure to take the bread out carefully after toasting so as to avoid injuries.
- This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Make sure that the air around the toaster can circulate freely. Do not place anything on top of the toaster.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Warning: if using small bread slices less than 85mm in length, you must pay attention to the potential risk of burning when taking out the slices.
- Do not use the appliance outdoors.
- This appliance is intended to be used in a household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.


Save these instructions.

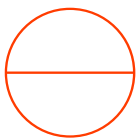

2. Product Overview


Body

 
- A.** Display
- B.** Bread Slot
- C.** Crumb Tray
Push to release crumb tray, for easy cleaning.

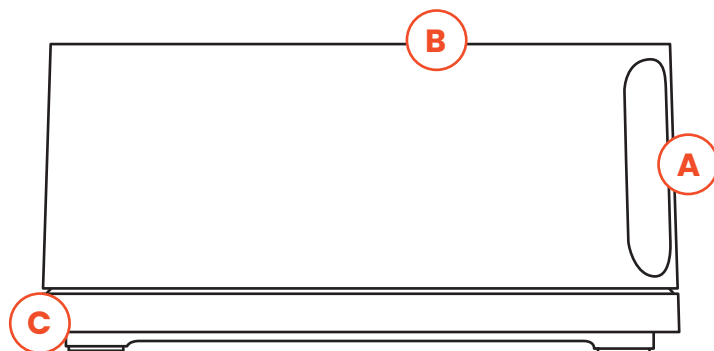

Display

  - D.** Toasting level
- E.** Up/down
Tap to choose toasting level 1 to 7.
- F.** Start
Tap to begin the toasting proces.
- G.** Stop
Tap to stop toasting. The bread will automatically lift in the slot.
- H.** Bagel programme
- I.** Reheat programme
- J.** Defrost programme
- K.** Proximity Sensor
Registers movement to wake your toaster from sleep mode.
- L.** Count down.
Shows remaing time during toasting proces.

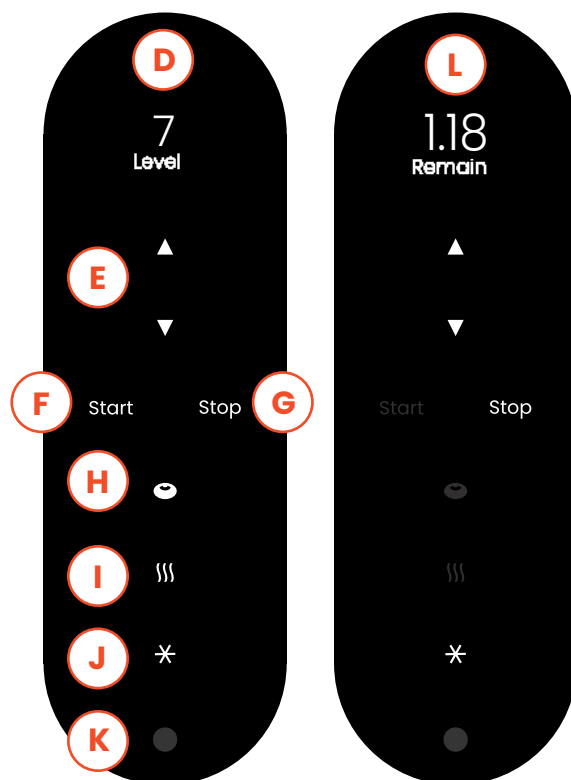

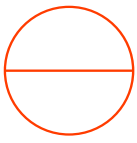

3. Using your Toaster

3.1 Preparation before first use

Before toasting your first slice of bread, it is strongly recommended to run the toaster once without bread by following the instructions on how to use the toaster.

3.2 How to use your Long Slot Toaster


Make sure the crumb tray is fully in place before use.

1. Connect the power cord to the outlet to turn on the toaster. The touch-display will now light up and your toaster is ready to use
2. Insert bread in the slot.
3. Set the toasting level. Choose from 7 levels by tapping the up/down arrows on the touch-display, with 1 being the lightest and 7 the darkest. At level 3 the bread slice will be golden.
4. Press start. The bread slice will gently be lowered into the toaster, and the display will show you the time remaining until your bread slice is ready.

When the toasting cycle is finished, the slice will automatically be lifted so you can easily remove it.



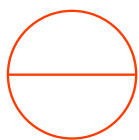


- Remove all protective wrappings before toasting.
- If the toaster starts smoking, press Stop immediately.
- During the first use some smoke and a smell might develop. This is normal.



3.3 Special Features

Preset programmes

-  Bagel programme: Select to toast bread on one side only. Place your bread in the slot with the side you want toasted facing the small bagel icon on the top of the toaster.
-  Reheat programme: Select to just give your toast a 30 second cycle to reheat it, if e.g. you were not able to pick it up after the original cycle.
-  Defrost programme: Select if you would like to toast a frozen slice of bread.

Sleep function

The toaster's sleep function turns off the display and control panel when not in use. A proximity sensor will detect movement when you get close with your hand, and turn it back on, when you need it.

4. Care and Maintenance


Regular cleaning of your Long Slot Toaster will extend its lifespan.

4.1 Cleaning

- Disconnect the power supply.

Tips

- To achieve a uniform color when toasting, we recommend waiting at least 30 seconds between each toasting cycle. This allows the color control to reset automatically, ensuring consistent toasting results. Skipping this wait time may cause darker toasting on the second cycle.
- If you see that your bread has reached the desired toasting level, tap **Stop** to end the cycle.

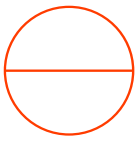


- Let the toaster cool down before you wipe the outside with a soft dry cloth.
- Do not use metal polish to clean the toaster.
- Push to open the crumb tray and pull it out. If you use the toaster on a daily basis, the crumb tray should be emptied at least once a week.
- Make sure the crumb tray is completely closed before using the toaster again.
- When the toaster is not in use or stored, the power cord may be wound under the bottom of toaster.

Cleaning the crumb tray

1. Push the crumb tray to unlock it, then pull to slide it out to empty it. The crumb tray should be emptied after each use.
2. The crumb tray is hand-washable only.
3. Always dry the tray thoroughly before replacing it into the toaster.
4. Return the crumb tray to toaster. Press it in firmly until it clicks into position. Do not use the toaster without the crumb tray in the proper position.



- Avoid toasting foods with runny ingredients like butter.
- Unplug the toaster before removing jammed bread.
- Be sure not to damage the internal mechanism or heating elements when removing bread.
- Use the bread slot for slices that fit in the slot.
- For even toasting, wait at least 30 seconds between cycles to let the color control reset.

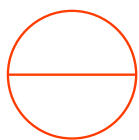

5. Disposal Guide

If your product can't be used any longer, dispose of it responsibly with the environment in mind.

- Proper disposal helps conserve resources and prevents harm to health and the environment from hazardous materials.
- Electronic equipment must be disposed of as Waste Electrical and Electronic Equipment (WEEE) and should not be mixed with household waste.
- Take your old appliance to your Local Authority Civic Waste Site for correct sorting and processing.


6. Power Consumption

1. Power consumption when the device is plugged in, but the display is in sleep mode (black): 0.45 W
2. Power consumption during a toasting cycle at maximum power: 950 W



The manufacturer declines all liability for damage to persons or property caused by:

- Use of the appliance other than the one envisaged.
- Not having read the user manual.
- Tampering with any part of the appliance.
- Use of non-original spare parts.
- Not following the safety instructions.

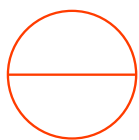

Warranty

In accordance with the EU Consumer Sales Directive (1999/44/EC), you, as a consumer, have the right to make a warranty claim for 2 years from the date of purchase if the product has any faults or defects that are not caused by improper use. If the product is found to be defective within this period, you are entitled to a repair, replacement, or, in some cases, a refund.

To claim your warranty, please contact the retailer where the product was purchased or the manufacturer, if specified in the warranty terms.

The warranty does not cover damage caused by misuse, accidents, or normal wear and tear.



This mark on a product and/or accompanying documents indicates that when it is to be disposed of it must be treated as Waste Electrical & Electronic Equipment (WEEE). Any WEEE marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. For proper treatment, recovery and recycling; please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge. If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be saving valuable resources and preventing potential negative effects upon human health and the environment from hazardous materials that the waste may contain.



This product is CE marked in accordance with applicable EU legislation. The CE marking confirms that the product complies with all relevant health, safety, and environmental protection requirements set by the EU.

The CE marking means that the product has been assessed and tested to ensure it can be safely used in EU countries and complies with EU directives for electrical and electronic equipment. For more information about specific product requirements, please contact the manufacturer.