 



User manual

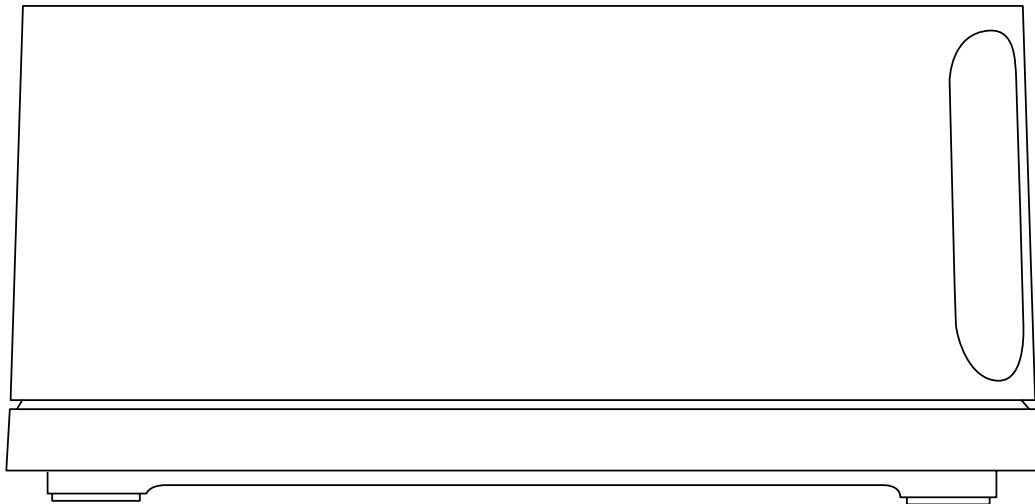

Long Slot Toaster

Model: TA4712-GS

 Jacob Jensen

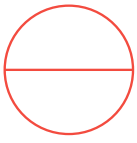


Congratulations on your new Jacob Jensen® product.

Jacob Jensen encapsulates the honesty and simplicity of our founder's vision, focusing on the essence of the product experience. Your new purchase pushes the boundaries of everyday objects and combines function with meaningful design.

This product is created based on our principles of distance, proximity, and touch, reflecting our long design heritage of improving everyday life through thoughtful design.

We hope you enjoy an experience on a higher level.

 
For more information, visit jacobjensen.com

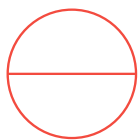

Produced by
F&H Group A/S
Gl. Skivevej 70
8800 Viborg
Denmark

Read these instructions carefully
before using the product.
Keep the manual for future reference.

1. Safety instructions	5
2. Product overview	7
3. How to use your Long Slot Toaster	8
3.1 Preparation before use	8
3.2 How to use your Long Slot Toaster	8
3.3 Special Functions	10
4. Care and Maintenance	11
4.1 Cleaning	11
4.2 Cleaning the crumb tray	11
5. Disposal	12
6. Power Consumption	12

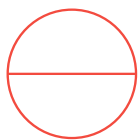 


We recommend that you read this user manual carefully. It contains instructions on how to use your new purchase correctly and how to maintain its functionality through regular use.

Jacob Jensen and our partner F&H Group A/S reserve the right to make improvements to optimize the product experience without prior notice.

The instructions and illustrations in this manual are not binding and may be changed as the product is developed.

 
For more information, visit jacobjensen.com or contact our partner, F&H Group A/S, at info@fh-as.dk

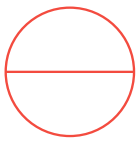

1. Safety instructions

Read these instructions carefully before using the product. Keep the manual for future reference.

 
- Ensure that the voltage of the power outlet corresponds to the voltage stated on the toaster's rating label.
- The outer surface may become hot during use. Do not touch hot surfaces.
- The cord, plug or toaster must not be immersed in water or other liquids – risk of electric shock.
- Always supervise when the appliance is used by or near children.
- Unplug when not in use and before cleaning.
- Do not use the appliance with a damaged cord or plug. Defective parts must be replaced by the manufacturer, an authorized service workshop, or a qualified technician.
- Ensure the cord does not hang over the edge of a table or counter, or come into contact with hot surfaces.
- Do not place on or near hot surfaces such as gas or electric burners or inside a heated oven.
- Use the appliance only for its intended purpose – to toast bread.
- Do not insert oversized food, foil packages, or utensils into the toaster as this may cause fire or electric shock.
- Use only accessories recommended by the manufacturer. Other accessories may cause personal injury.
- If bread becomes stuck in the toasting slots, unplug the toaster, allow it to cool, and then carefully remove the bread.
- Remove bread carefully after toasting to avoid injury.
- The appliance is fitted with an earthed plug. Ensure your household power supply has proper grounding.

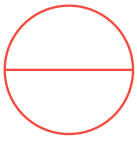

- Do not operate the toaster with an external timer or a separate remote-control system.
- Never use the appliance near water, e.g. bathtubs, washbasins or other containers.
- Ensure free airflow around the toaster. Never place anything on top.
- This appliance can be used by children aged 8 years and above, and by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, provided they are supervised or instructed in safe use.
- Children must not play with the appliance. Cleaning and maintenance must not be carried out by children unless they are older than 8 years and supervised.
- Keep the appliance and cord out of reach of children under 8 years.
- Be aware of the risk of burns when toasting small slices of bread (less than 85 mm). Remove them with care.
- Do not use the toaster outdoors.

The toaster is intended for household use and similar environments, such as:


- Staff kitchens in shops, offices, and workplaces
- Farmhouses
- By clients in hotels, motels, and other residential environments
- Bed & breakfast-type environments

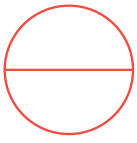

2. Product overview

Body


- A. Display**
- B. Toasting slot**
(Place your slice of bread here)
- C. Crumb tray**
(Press to release crumb tray for easy cleaning)

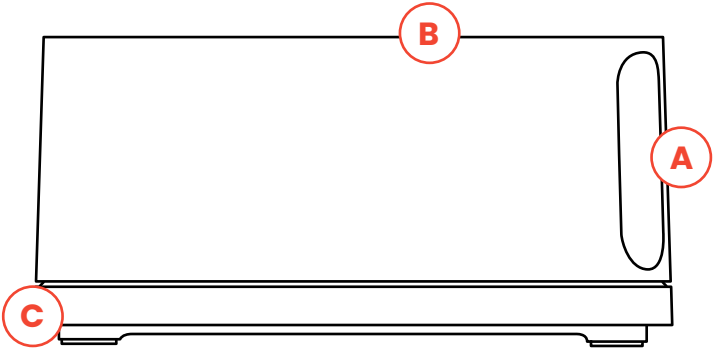

Display

 - D. Browning level**
Displays browning level
- E. Up/Down**
Press to select browning level 1 to 7
- F. Start**
Press to start toasting process
- G. Stop**
Press to stop toasting. Bread is automatically lifted up
- H. Bagel-program**
- I. Reheat program**
- J. Defrost program**
- K. Proximity sensor**
Detects movement to wake toaster from standby
- L. Countdown**
Displays remaining time during toasting process



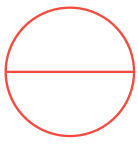

3. How to use your Long Slot Toaster

3.1 Preparation before use


As there may be traces of oil or film from production on the surface or heating element, it may emit an unpleasant odor when first used. This is normal and will disappear after a few cycles. We recommend that you run the toaster twice on level 7 to heat it through and remove any traces from production. This should be done without bread.

3.2 How to use your Long Slot Toaster

Ensure the crumb tray is correctly in place before use. When plugged in, the touch display will light up and the toaster is ready.

1. Insert the plug into the socket to power on the toaster.
The touch display will illuminate.
2. Place bread in the toasting slot.
3. Select the browning level. Choose between 7 levels using the up/down arrows on the touch display, where 1 is the lightest and 7 the darkest. Level 3 will give a golden result.
4. Press **Start**. The bread slice will gently lower into the toaster, and the display will show the remaining time until the toast is ready.

When the toasting process is complete, the slice is automatically lifted for easy removal. If you can see that your bread has reached the desired toasting level, press **start/stop** to end the toasting.

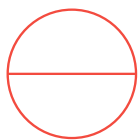

If the filter jams:


If you experience that the touch display works and shows symbols, but the bread holder is not visible or does not move, or the heating elements stop working, you can reset the toaster.

Unplug it from the power outlet and remove any crumbs stuck inside the toaster.

The power cord can then be reconnected, and the toaster will automatically reset to the highest position.



- Remove all protective packaging before use.
- If smoke occurs, press **Stop** immediately and unplug the toaster.
- Some smoke and odor may occur during initial use. This is normal.

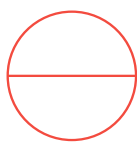

3.3 Special Functions

Preset programs

 **Bagel program:** Toasts only one side of the bread. Insert the slice with the side to be toasted facing the small bagel icon on top of the toaster.

 **Reheat program:** Provides a 30-second cycle to reheat bread, e.g. if it was not removed after the initial toasting.

 
 **Defrost program:** Select this to toast a frozen bread slice.

Standby Mode

The toaster's sleep function switches off the display and control panel when not in use. A proximity sensor detects movement when your hand approaches, reactivating the display.



- Do not toast food with liquid ingredients such as butter.
- Unplug before removing stuck bread.
- Avoid damaging internal parts or heating elements when removing bread.
- Use the slot only for slices that fit properly.

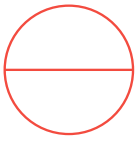

4. Care and Maintenance


Regular cleaning of your Long Slot Toaster prolongs its lifetime.

4.1 Cleaning

- Disconnect the toaster from the power supply.
- Allow it to cool before wiping the exterior with a soft cloth.
- Do not use metal polish to clean the toaster.
- Press the crumb tray to release and remove it. If used daily, empty the crumb tray weekly.
- Ensure the crumb tray is fully closed before reuse.
- When not in use or in storage, the cord can be wound underneath the toaster.

4.2 Cleaning the crumb tray

1. Press the crumb tray to release and pull it out to empty.
It is recommended to empty after each use if not used daily.
2. Clean the crumb tray by hand only.
3. Always dry the tray thoroughly before reinserting.
4. Ensure the crumb tray clicks back into place. Do not operate the toaster without it.

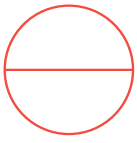


5. Disposal

If the product can no longer be used, it must be disposed of responsibly and with environmental consideration.

- Correct disposal helps conserve resources and prevents health and environmental hazards from dangerous materials.
- Electrical equipment must be disposed of as Waste Electrical and Electronic Equipment (WEEE) and not with household waste.
- Deliver the product to your local recycling station.

6. Power Consumption

1. Power consumption when connected but in standby (black screen): **0.45 W**
2. Power consumption during toasting at maximum power: **950 W**

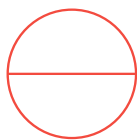


Manufacturer Information

F&H Group A/S
Gl. Skivevej 70
8800 Viborg
Danmark



The manufacturer disclaims any liability for damage to persons or property caused by:

- Use of the device for purposes other than those intended
- Failure to read the user manual
- Tampering with parts of the device
- Use of non-original spare parts
- Failure to comply with the safety instructions

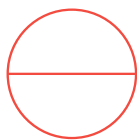

Warranty

This product is covered by a minimum 2-year warranty/claim period from the date of purchase, in accordance with applicable consumer protection laws in the country where the product was purchased. The warranty covers manufacturing defects and faults not caused by misuse.

To make a warranty claim, please contact the retailer where the product was purchased, or the manufacturer if specified in the warranty terms.

The warranty does not cover damage caused by misuse, accidents, or normal wear and tear.



This symbol on a product and/or its accompanying documents indicates that it must be treated as Waste Electrical and Electronic Equipment (WEEE) when it is to be disposed of. WEEE-marked products must not be mixed with regular household waste but must be kept separate for treatment, recovery, and recycling of the materials used. For correct treatment, recovery, and recycling, please take all WEEE-marked waste to your local collection point, where it will be accepted free of charge. By ensuring proper disposal of waste electrical and electronic equipment, valuable resources will be conserved, and potential negative effects on human health and the environment caused by hazardous substances may be prevented.



This product is CE marked in accordance with applicable EU legislation. The CE marking confirms that the product complies with all relevant health, safety, and environmental protection requirements established by the EU.

The CE marking means that the product has been assessed and tested to ensure it can be used safely within EU countries and complies with the EU directives for electrical and electronic equipment. Please contact the manufacturer for further information on specific product requirements.