

## How to change the vacuum speed

**Step 1:** Disconnect the power cord and the air line, then unscrew the four bolts.



**Step 2:** Open the back panel and gently pull it towards you.



**Step 3:** Adjust the regulator in clockwise direction for slower vacuum and counter clockwise for faster vacuum, start with a turn. Close the back panel, connect the power cord and air line. Then try again.

