

How to check and replace the valves

When should I check the valves?


When the pressure inside the chamber falls a lot below 300mbar time after time.

How to check the valves?

Step 1: Open the machine

Step 2: The non-return- or Mac valves are located on the left- and right side below the gas springs.

Step 3: When the machine gives the error 203, the valve might be leak. In that case you should replace the valve.

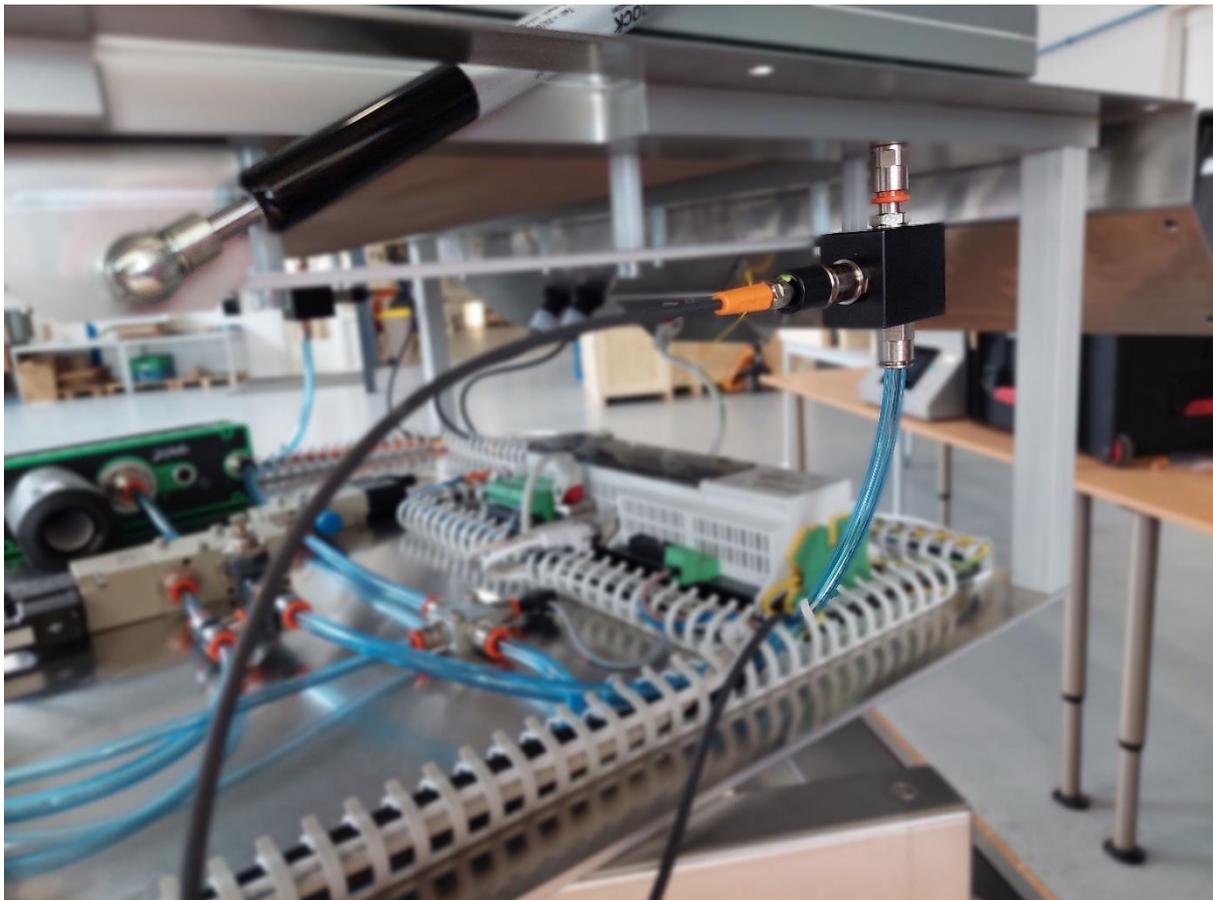


Replace the Mac-valve

Step 1: Mail Oxipack service if you need to order a new Mac valve

Step 2: Open the machine

Step 3: The non-return- or Mac valves are located on the left- and right side below the gas springs.

Step 4: Disconnect the air tubes and electrical connection

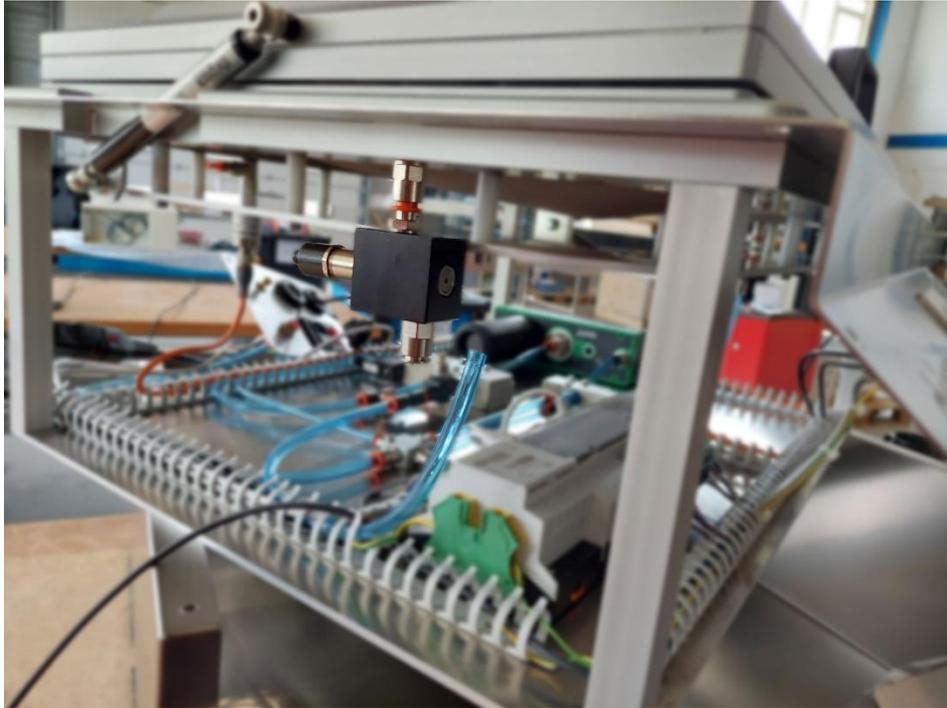

Step 5: Place the new Mac valve and connect the tubes and electrical connection

Step 6: Perform three empty tests to ensure it fixed the problem