

How to replace the gas springs

Step 1: Unscrew the gas spring bolts



Step 2: Unscrew the gas springs



Step 3: Screw in the new gas springs

Step 4: Screw in the gas spring bolts, making sure the white o-ring goes outside and the black o-ring inside

