

Changing settings of the LCD display

Step 1: Turn OFF the leak tester.

Step 2: Turn ON the leak tester while pressing the **Enter** button.

Step 3: *LCD Parameter* will appear. After releasing the enter button the first setting (*Display no.*)will appear.

With the arrow buttons you can scroll through the menu:

Set: display no. ↔ *Set: OEM* ↔ *Set: end.*

To enter one of the sub menus press **Enter**. In the sub menu scroll with the arrow buttons to the correct setting and press **Enter** to select.

Oxipack settings are:

Display no. - No. 0 single

OEM - Jetter

When correct settings are selected go to sub menu *Set: end* and select with the **Enter**. The display will reboot and settings are stored.

