


1

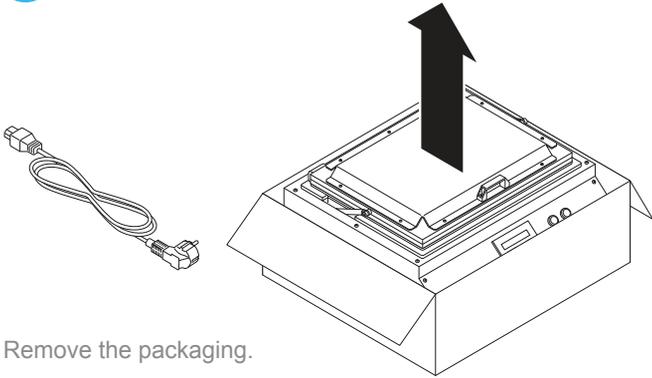

Remove the packaging.


oxipack
leak detection

STATIONARY LEAK TESTER (SLT)

QUICK START GUIDE


OXIPACK BV | Headquarters | Wilgenkade 17 | 3992 LL Houten, The Netherlands | +31 (0)88 – 695 7290 | support@oxipack.com

2

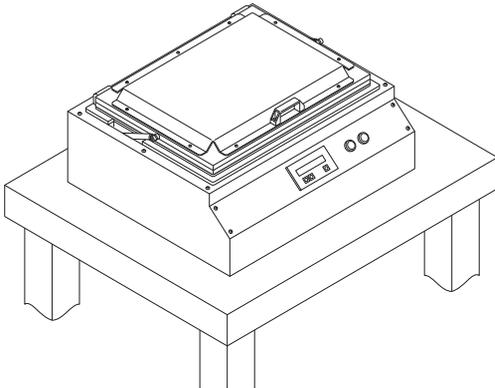


Place the **Oxipack leak tester** in upright position on a flat and sturdy work surface.

3

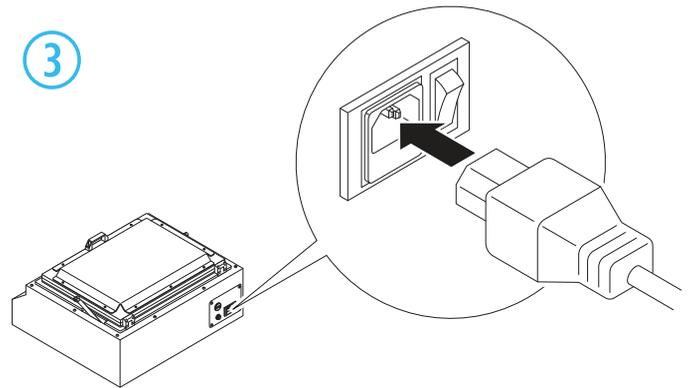


Connect the power cable (**100 - 240 V / 50 - 60 Hz**).

4

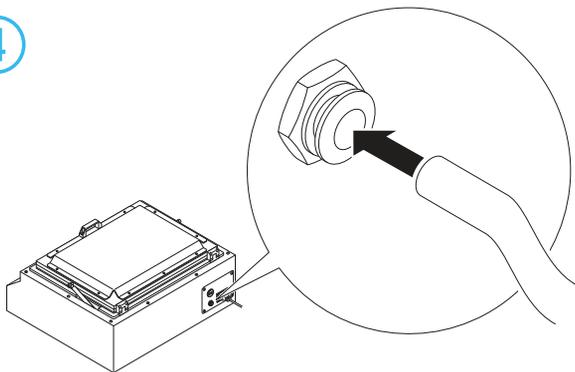

Connect the **air supply hose (Ø 8 mm)**. Ensure that the compressed air pressure is between **6 - 8 bar**.


5

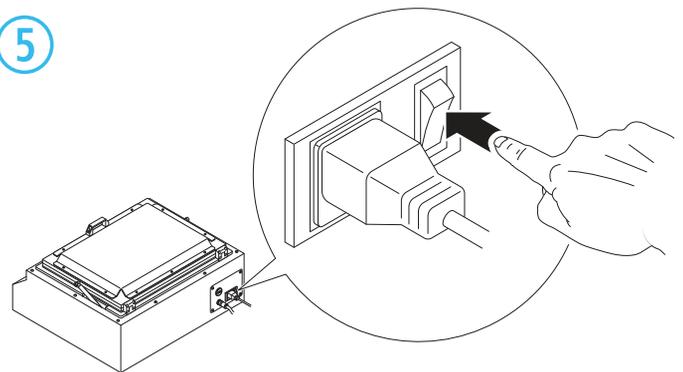

Turn the **ON/OFF** switch in the **ON** position. The **ON/OFF** switch lights up **red**.

6

Open the **lid**. Make sure that the **measurement chamber** is empty.

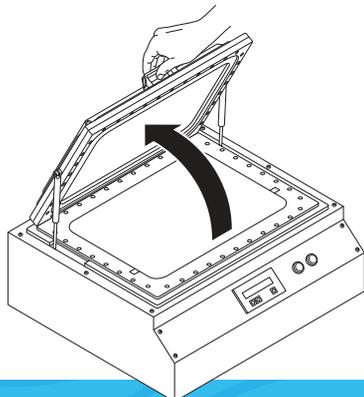


7

Close the **lid** and press the **green Start** button. Measurement starts.

If the **end result** is **OK**:

The **green Start** button lights up **green**.

If the **end result** is **NOT OK**: The **red Stop** button lights up **red**. Please contact us!

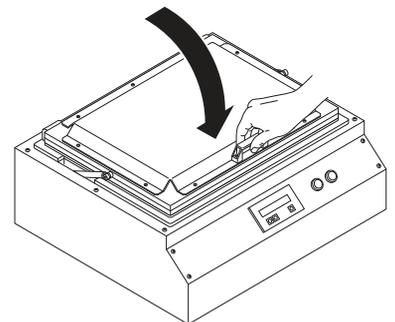

FOR MORE INFORMATION: SEE THE USER MANUAL ONLINE

© Copyright Oxipack BV