

nubi

NK87

User Manual

In this manual, you will find everything you need to know about NK87 keyboard functions and settings. Please read this information carefully before using the keyboard.

You can set up your keyboard however you like using our web software at web.nubi.gg

If you have questions or your problem is not covered here, please contact our technical support. We will do everything we can to help!



help@nubi.gg



web.nubi.gg

IMPORT INFORMATION

Purpose of product: computer accessory
Connection: 1 x USB
Product material: plastic/metal/rubber
Used for: entering information into a personal computer
Please check with your local authorities for shipping regulations before shipping.
Manufacturer:
Nubi LTD, Office 3906, 39th, The Center, 99 Queen's Road, Central, Hong Kong
Importer:
EU Importer: FS-Holding Ltd, Profiti Ilias 4, Germasogeia, Limassol, Cyprus, 4046.
E-mail: care@fragstore.com. Tel: +35-726-26-01-66
UK Importer: ТОВ "ФС Дистриб'юшн" вул. Чавдар Єлизавети, будинок 13, Н/П 394А, 02072, Київ, Україна. E-mail: distribution@fs-d.com.ua. Tel: +38-044-592-4990
The importer is responsible for processing claims from buyers.
Made in China
Date of manufacture: indicated on the package
Serial number: indicated on the package



DISPOSAL INFORMATION

The crossed-out wheellie bin symbol means that you must not dispose of this product together with unsorted household D waste. As electrical devices can contain harmful substances which may cause environmental damage or harm to your health if not disposed of correctly, please dispose of these products separately. As the end user, you are required by law to dispose of used electrical equipment at an official recycling point. For information about local recycling points, contact your local authority, civic amenity site or the business where you purchased this product. By disposing of electrical products at an official recycling point, you are doing your part to ensure equipment is recycled correctly and professionally, and the environment is protected. Wherever possible, remove any batteries before disposing of the device. Under law, as the end user you face risk of penalties if you dispose of devices and batteries illegally.

Correct Disposal of This Product (Waste Electrical & Electronic Equipment, Applicable in the European Union and other European countries with separate collection systems). This marking shown on the product or its documentation indicates that it shouldn't be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of waste and recycle it responsibly to promote sustainable reuse of material resources. Household users should contact either the retailer from whom they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

nubi

SPECIFICATIONS

Keycap Technology.....	Double shot
Keycap Plastic	ABS
Detachable Cable	No
Wrist Rest	No
Multimedia Keys	No
Switches.....	g3ms Sapphire
Resource.....	50mIn
Hot Swap Support.....	Yes
Size.....	357x130x33mm
Cable.....	1,8m, braided
Weight.....	855g
Software.....	Yes
Backlight.....	White
Operating Systems.....	Windows, macOS, Linux
Structure	Skeleton
Form Factor	87 keys

Here are a few points that will help keep your keyboard in top condition:

1. DO NOT connect the keyboard to an electrical outlet or other high-voltage power source. This may damage the device's board and render the keyboard inoperable. We recommend connecting/charging the keyboard only from the USB port of your computer/laptop.
2. DO NOT spill liquid on the keyboard. If any liquid gets on the keyboard, immediately turn it and contact your local service center.
3. We strongly recommend using the included cable to connect the keyboard.
4. Keep your keyboard clean and give it regular care. Your keyboard will thank you with years of reliable performance.
5. If you decide to customize or modify your keyboard, please do so carefully. Yes, we designed the keyboard to allow for it BUT please be aware that opening, altering, or customizing the keyboard will void your warranty. Mechanical damage includes but is not limited to disassembly, immersion, impact, wire breakage, excessive pressure, and similar actions.
6. The warranty period is 12 months from the date of purchase. If you have any questions or issues after the warranty has expired, contact our support team—we'll be happy to help you resolve any problem, even beyond the warranty period.
7. Handle your keyboard with love and care. We've spent countless hours and a lot of heart making the NK87 Series the best it can be—just like we would for ourselves <3

HOTKEYS / SETTINGS

1. **FN+ESC:** Backlight On / Off
2. **FN + F1:** Multimedia
3. **FN + F2:** Volume -
4. **FN + F3:** Volume +
5. **FN + F4:** Mute
6. **FN + F5:** Stop
7. **FN + F6:** Previous
8. **FN + F7:** Play / Pause
9. **FN + F8:** Next
10. **FN + F9:** E-mail
11. **FN + F10:** Home
12. **FN + F11:** Calculator
13. **FN + F12:** Search
14. **FN + Win_L:** Win Lock
15. **Fn + "↑":** Brightness +
16. **Fn + "↓":** Brightness -
17. **Fn + "←":** Backlight effect speed -
18. **Fn + "→":** Backlight effect speed +
19. **FN+ PRTSC:** Switch default backlight effects

HOTKEYS / SETTINGS

20. **FN+ PAUSE:** Record custom backlight effect

In this mode, you can turn the LEDs of each key on or off exactly how you like.

Press **FN + Pause** to enter the mode for editing 5 custom lighting zones. Each time you press **FN + Pause**, it switches to the next custom zone.

Want to change the current effect? Press **FN + Scr**.

The indicator will blink, and you can make your changes. When you're done, press **FN + Scr** again to save.

HOTKEYS / SETTINGS

Areas:

- A. Esc WASD ↑↓←→
- B. F1 F2 F3 1!2@ 3# 4\$ 5% Tab QWER ASDG B Shift_L Ctrl_L Alt_L Space Home End PgUp PgDn
- C. 1! 2@ 3# 4\$ 5% 6^ 7& QWERT ASDFG CV Shift_L Ctrl_L
- D. 1! 2@ 3# 4\$ 5% 6^ 7& QWER ASDF
- E. WR ASD Shift_L Ctrl_L Alt_L↑↓←→

Press **FN + DEL for 3 seconds** to restore default settings.